


Series 11 Console

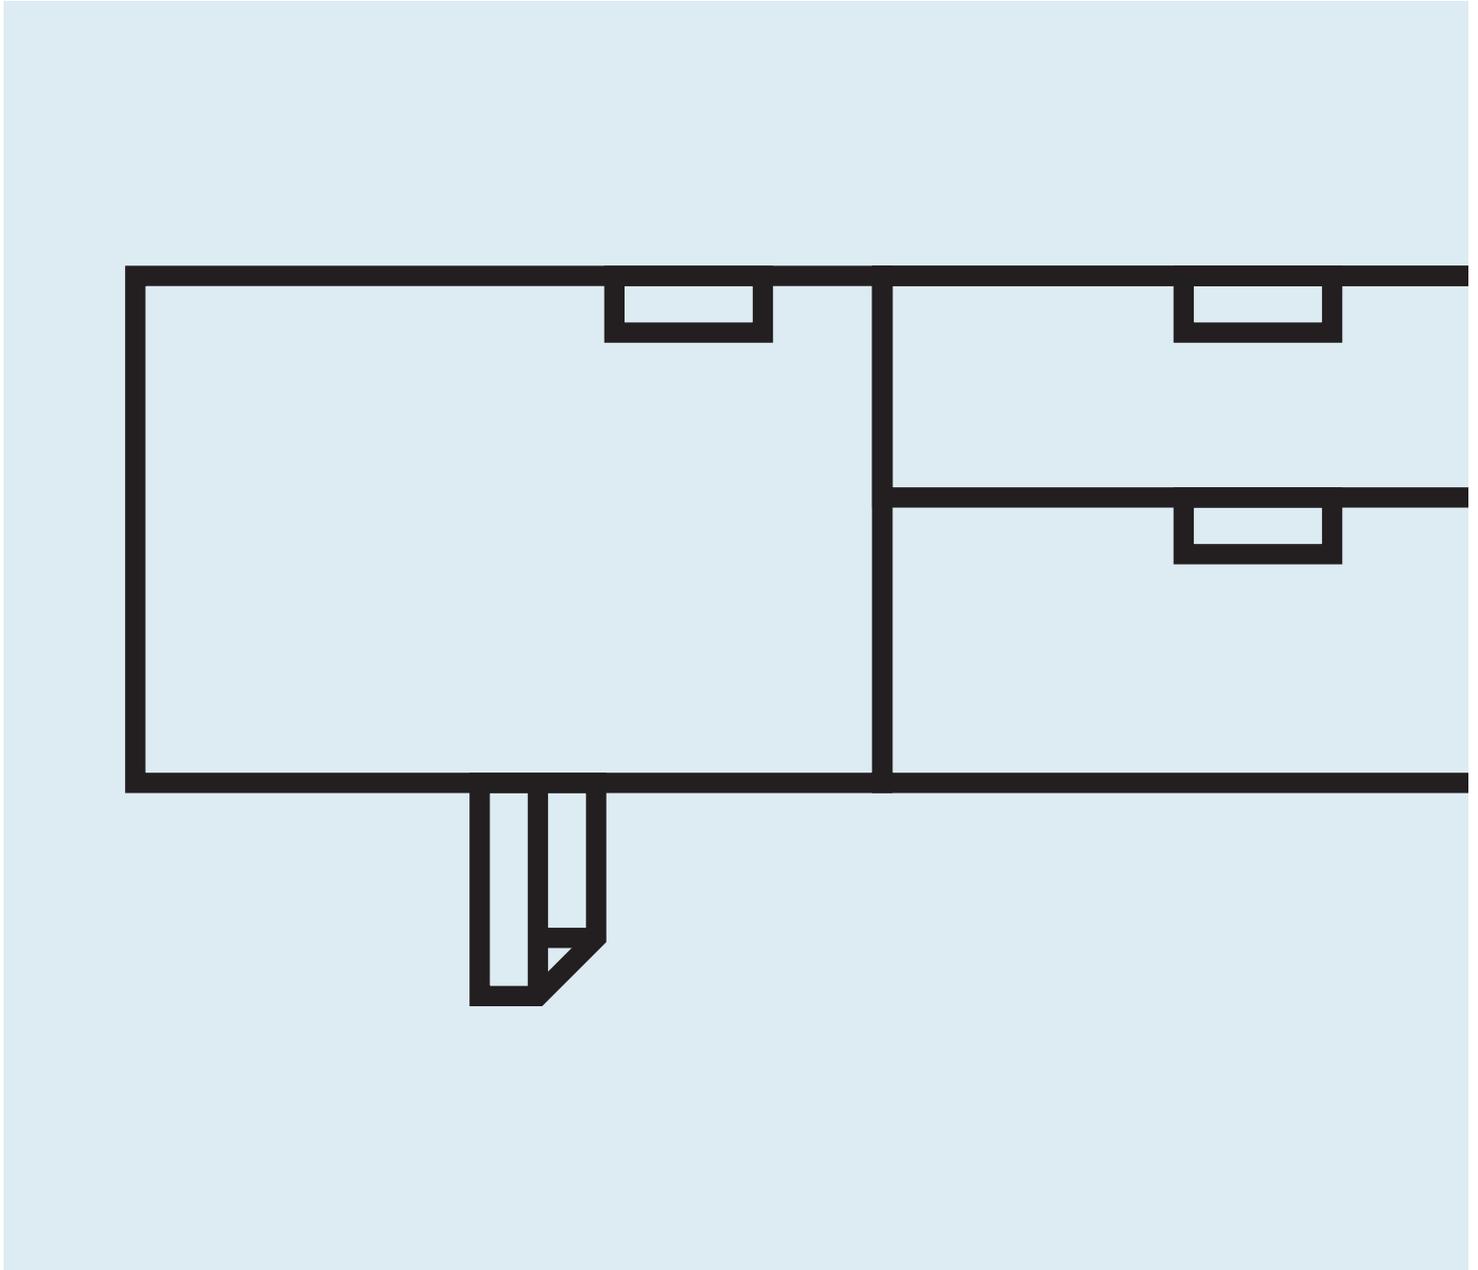

DESIGNED IN 2005

ASSEMBLY NOTES | REV 01



FOR YOUR HI-FI, LO-FI, WI-FI OR NO-FI.

An elegant and refined approach with thin edges and thoughtful proportions. Series Eleven. When ten just isn't quite enough.

NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware



QTY 2

Pt. 1217



QTY 2

Pt. 1218




QTY 4

Pt. 1053



QTY 10

 Pt. 1052




QTY 14

Pt. 3002




QTY 1

 Pt. 9001




QTY 1

Pt. 9004

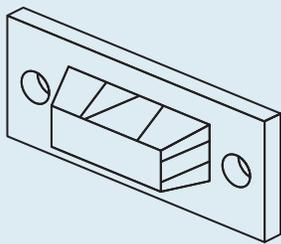


QTY 2

Pt. 8041

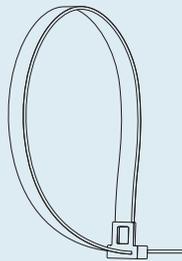

QTY 1


Pt. 8042

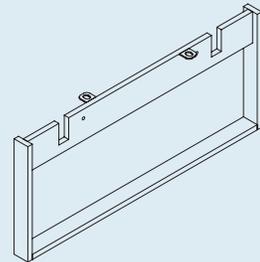

QTY 2


Leg

Parts & Hardware

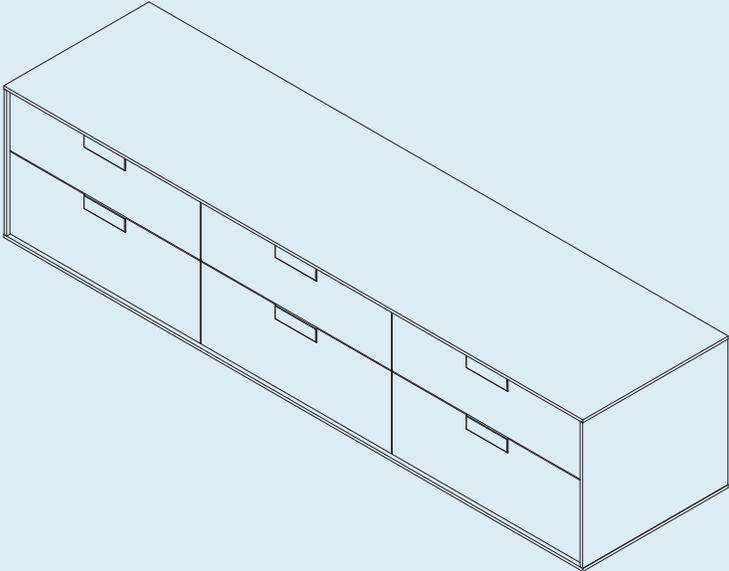

QTY 1

Case*

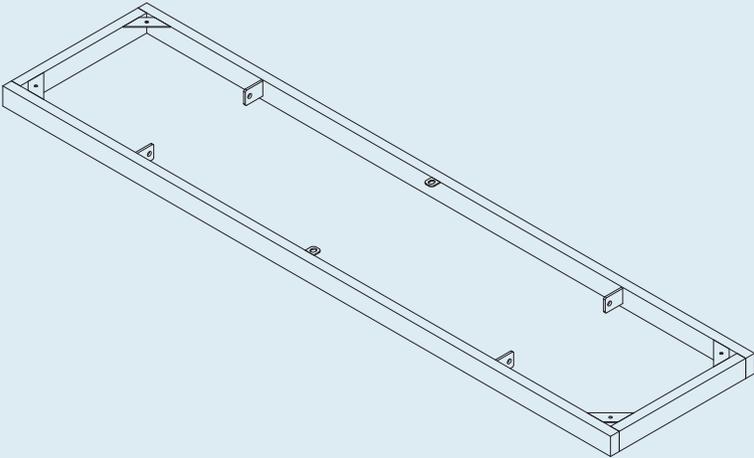

QTY 1


Base

The geometry of the case may vary depending on the product purchased.

Step 01

ATTACH THE LEGS.

Attach legs to base using provided hardware as shown.

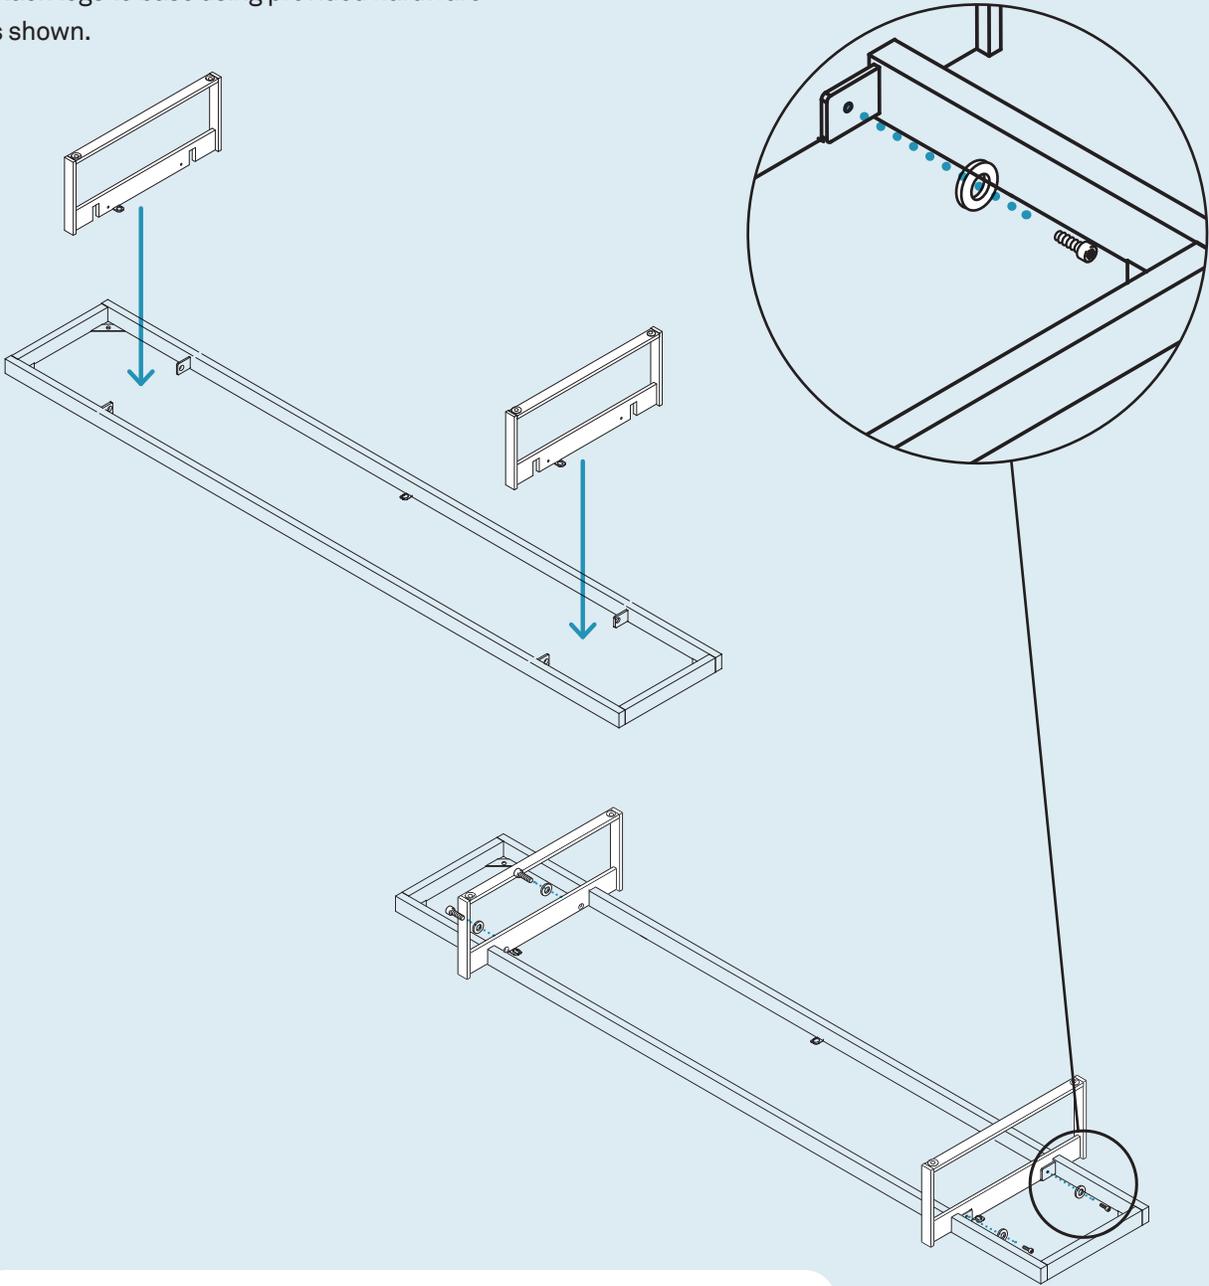

Pt. 1053 x 4


Pt. 3002 x 4

Pt. 9001 x 1


Step 02

ATTACH THE BASE.

After the base has been attached, have a second person help lift and bring the case upright in order to prevent leg damage.

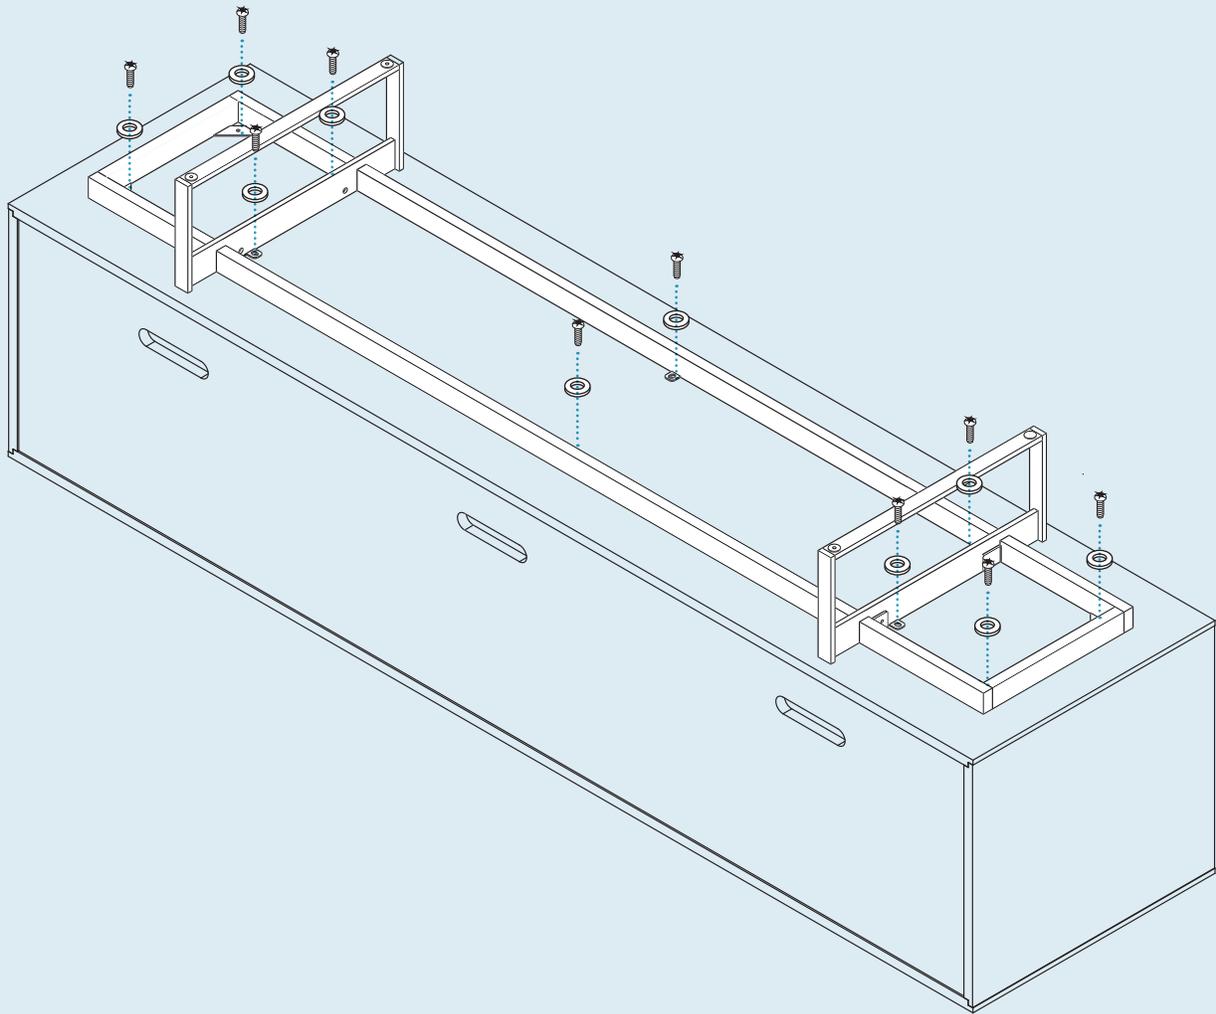

PT. 1052 X 10

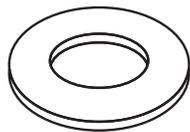

PT. 3002 X 10




PT. 9004 X 1

Step 03

REMOVING THE DRAWER.

The method to remove the drawers may differ depending on the unit that was purchased. See instructions below for each method.

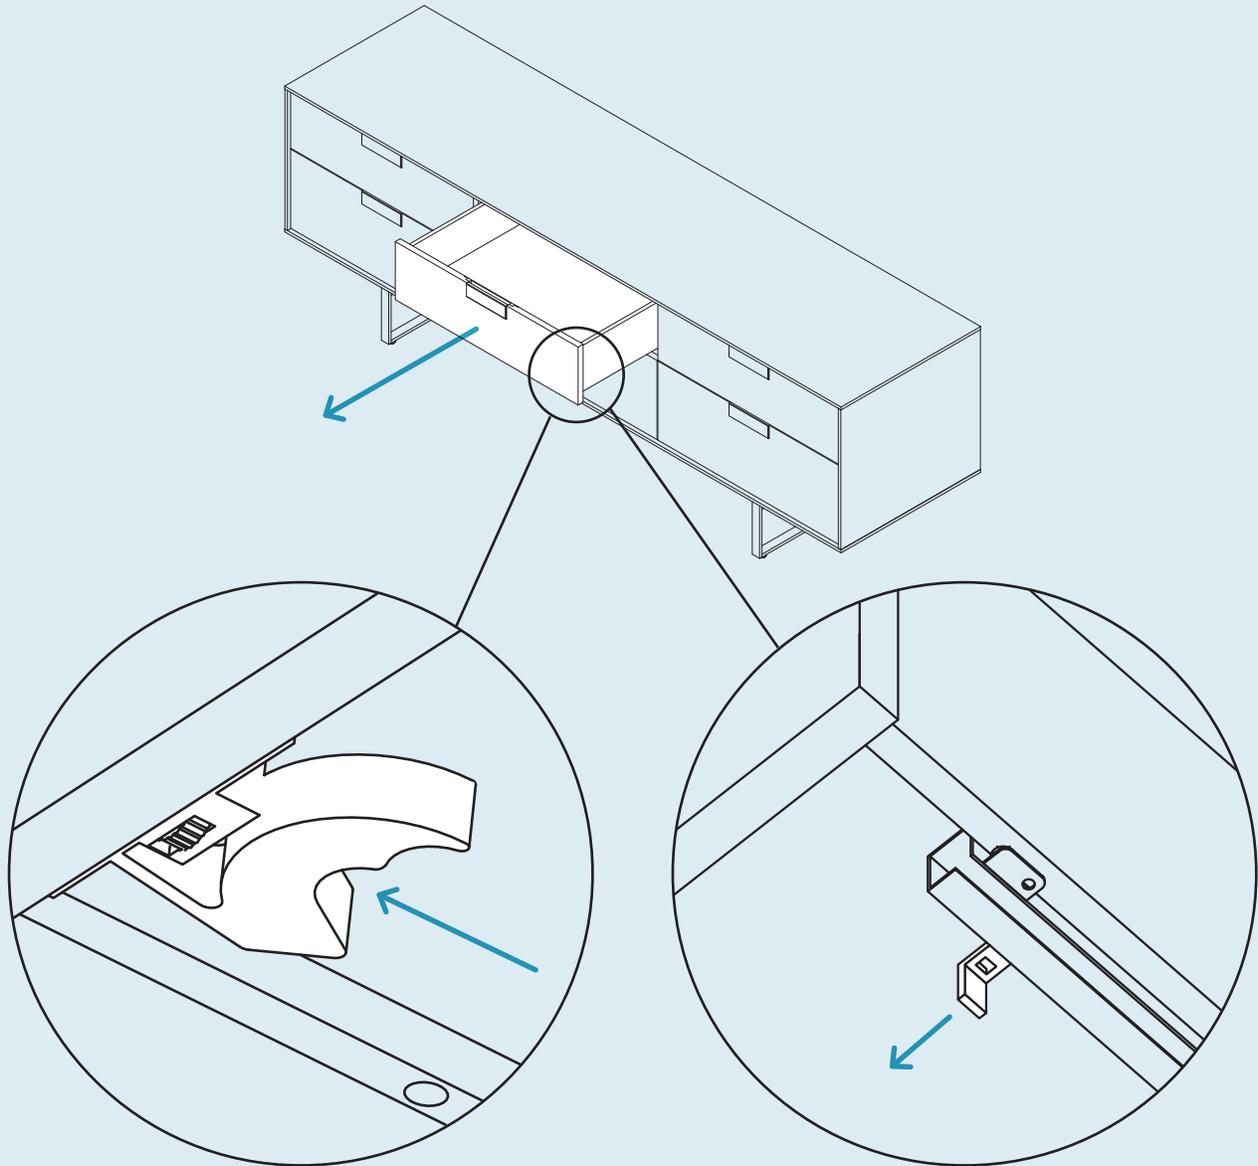

IF YOUR DRAWER HAS A TRIGGER LOCK:

Extend the drawer completely. Squeeze both triggers on the underside of the drawer while pulling the drawer out.

OR


IF YOUR DRAWER HAS A TAB LOCK:

Extend the drawer completely. Pull on the plastic tabs underneath the drawer to release the drawer lock. Lift drawer upwards to remove.

Step 04

REINSTALLING THE DRAWER.

The method to reinstall the drawers may differ depending on the unit that was purchased. See instructions below for each method.

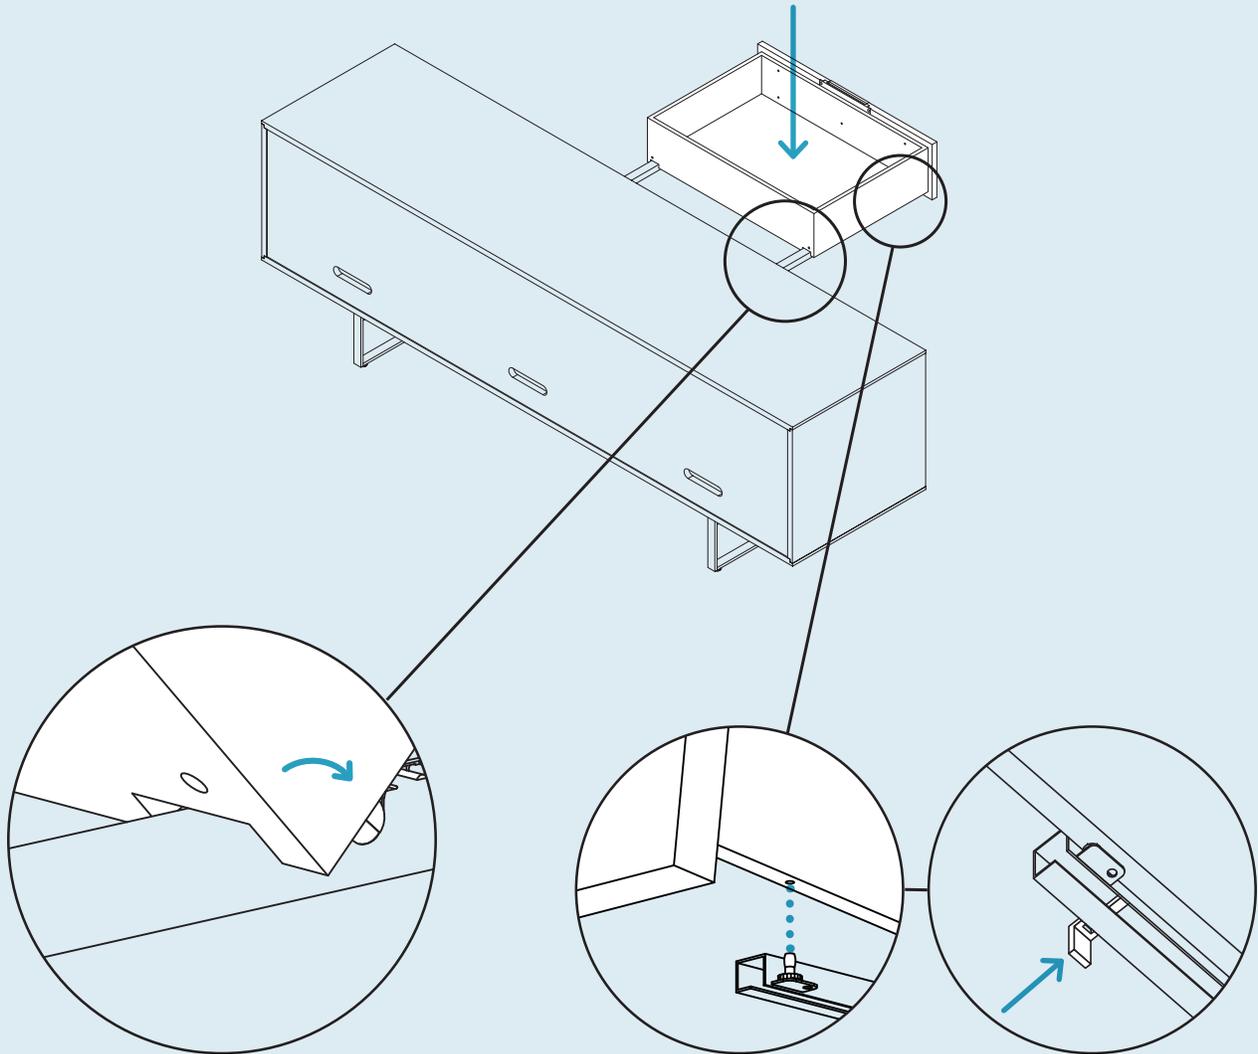

IF YOUR DRAWER HAS A TRIGGER LOCK:

Pull both sides of the slide forward. Engage rear slide catches. Lower drawer front into place and push closed.

OR



IF YOUR DRAWER HAS A TAB LOCK:

Lower drawer front to align with pin. Push on the plastic tabs underneath the drawer to engage the drawer lock.

Step 05

DOOR ADJUSTMENT.

Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

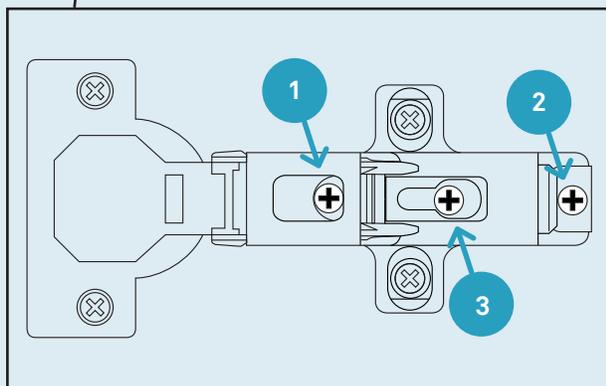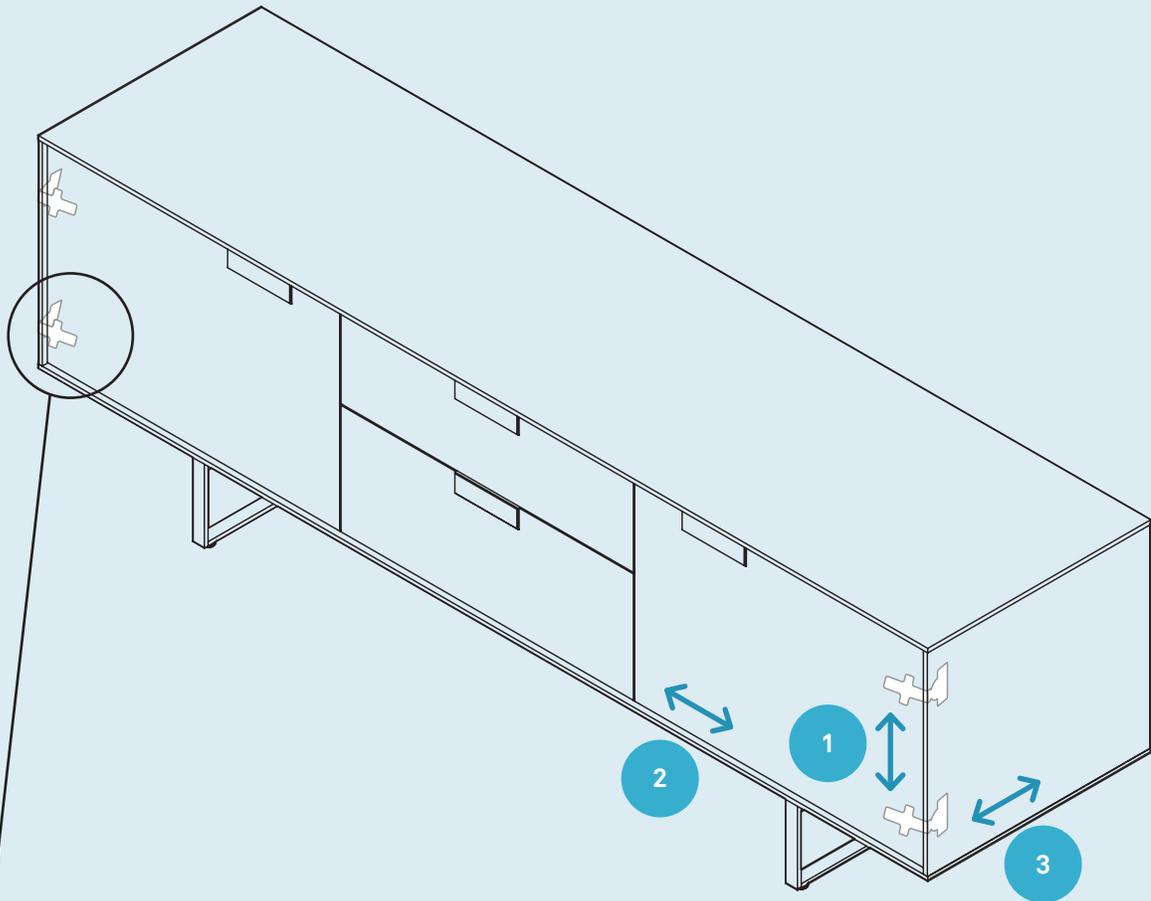

If door needs adjustment from TOP TO BOTTOM, Use Screw #1.



If door needs adjustment from SIDE TO SIDE, Use Screw #2.

If door needs adjustments from FRONT TO BACK, Use Screw #3.

Step 06

ATTACH ANTI-TIP BRACKET TO THE WALL.

Install anti-tip bracket to wall stud 1-inch below case top panel height.

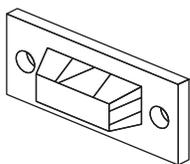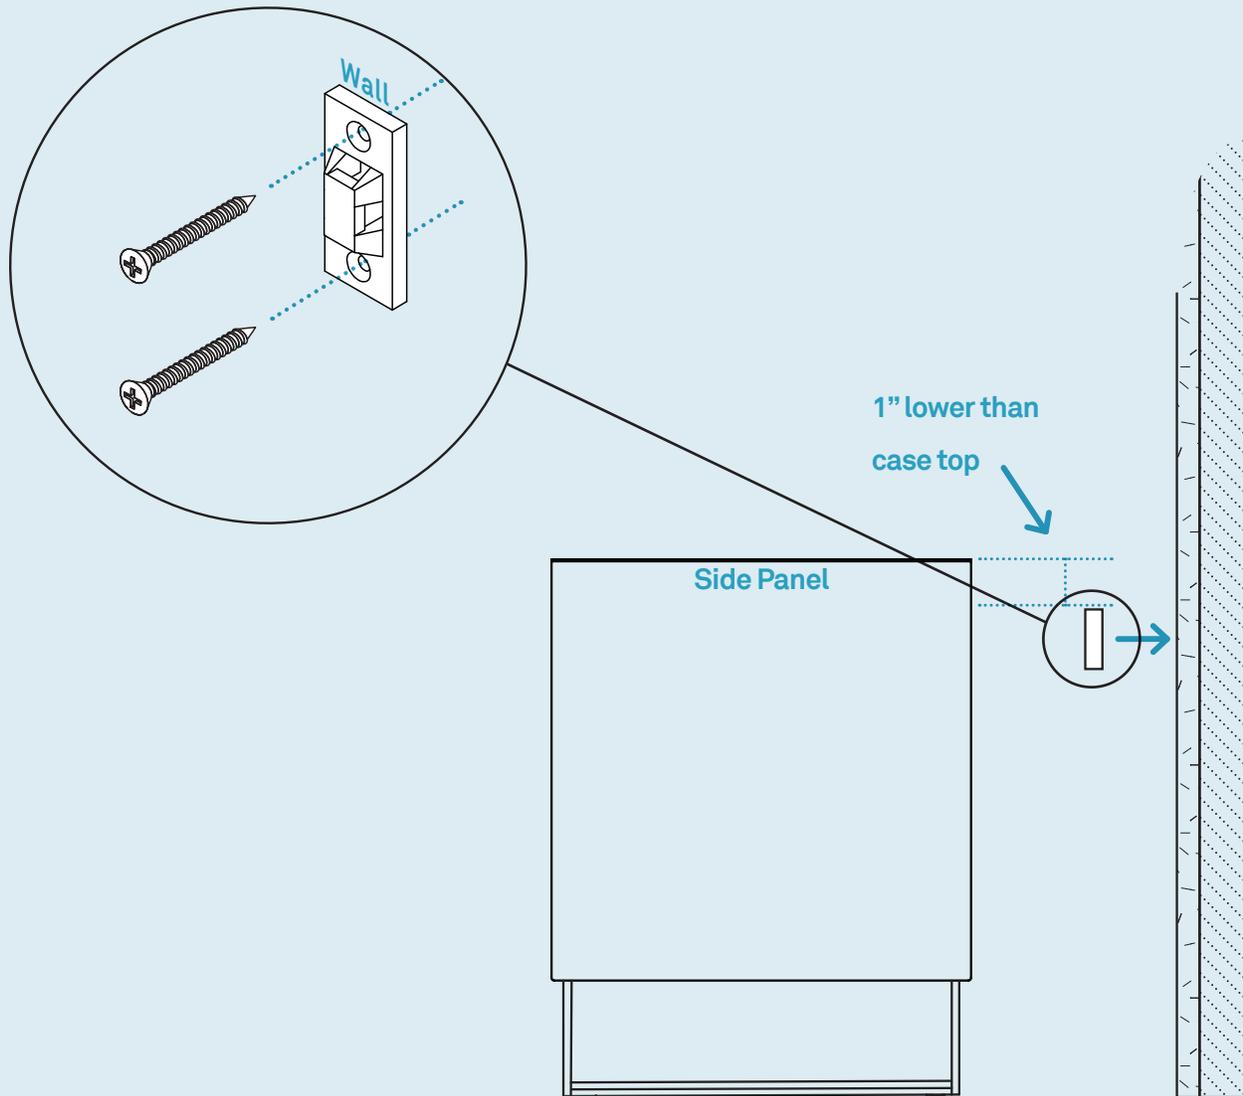

PT. 8041 X 1





PT. 1218 X 2

Step 07

INSTALL ANTI-TIP BRACKET TO CASE.



Bracket must be installed to top panel of case. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

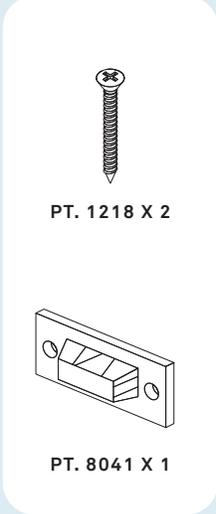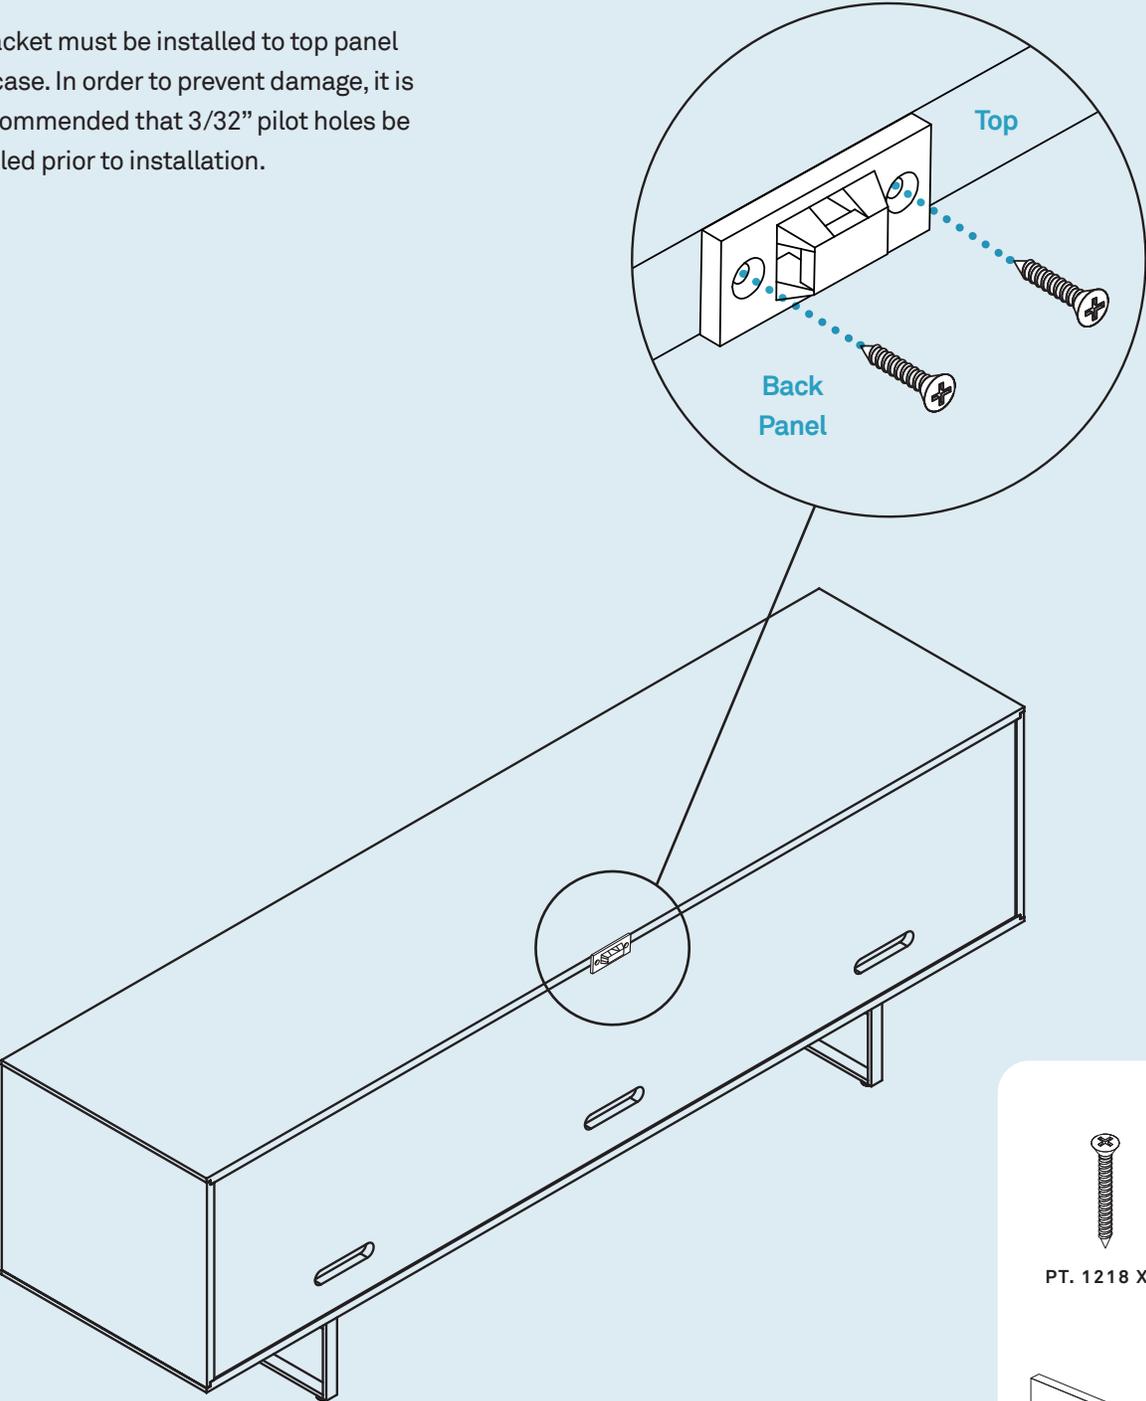

Step 08

SECURE THE CASE.

Install and tighten the strap prior to using the product.

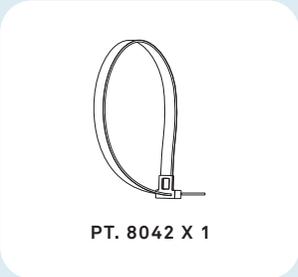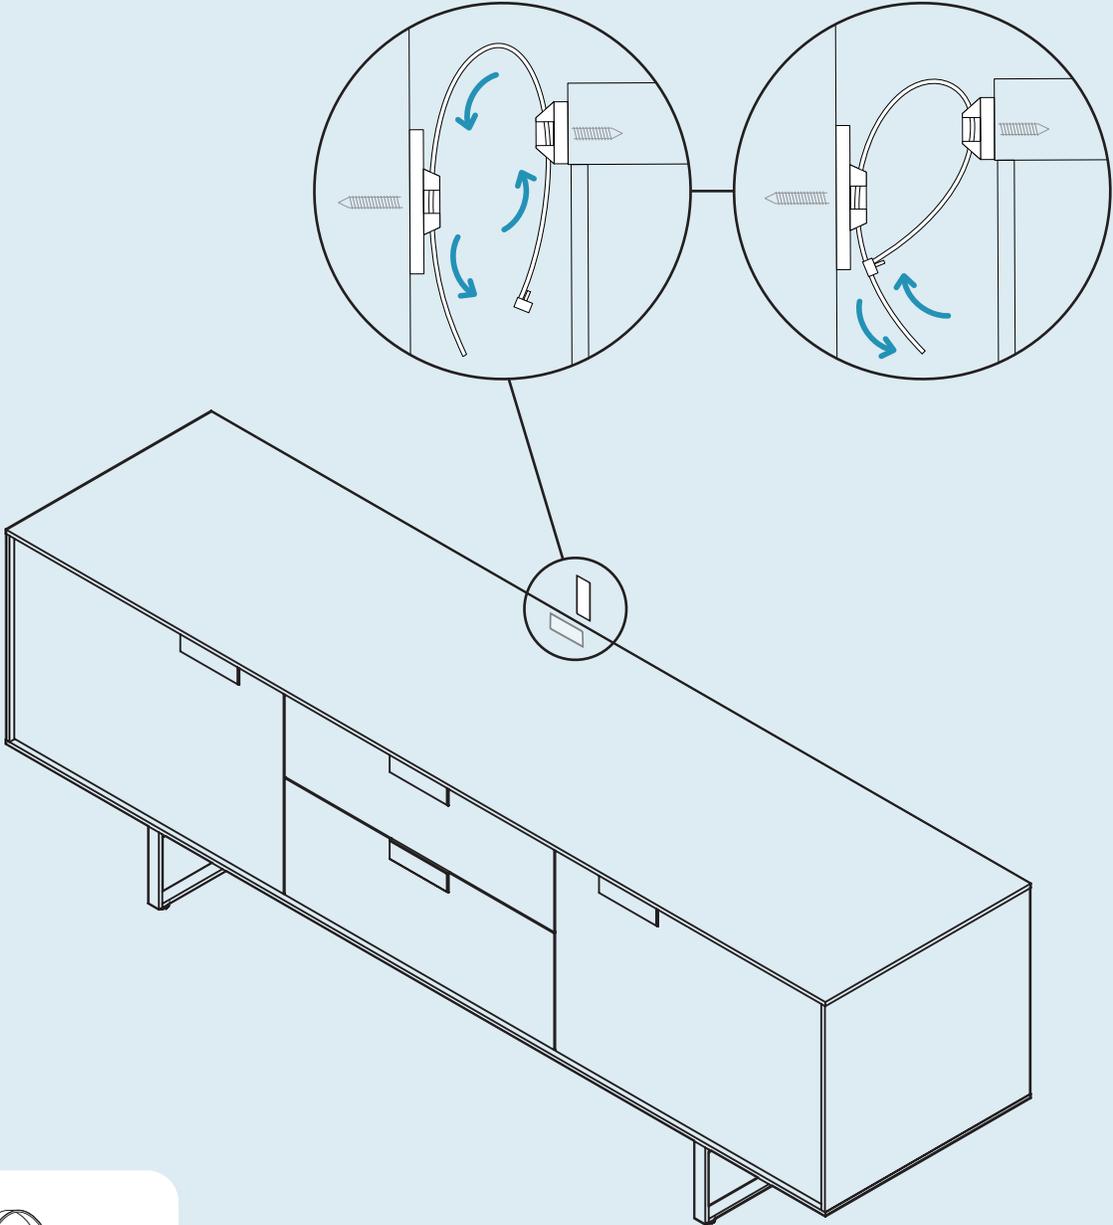

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

