


2D:3D Coat Rack



DESIGNED IN 2006

ASSEMBLY NOTES | REV 00

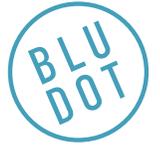

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.


Parts & Hardware



QTY

3


Pt. 1402



QTY

3

Pt. 8054

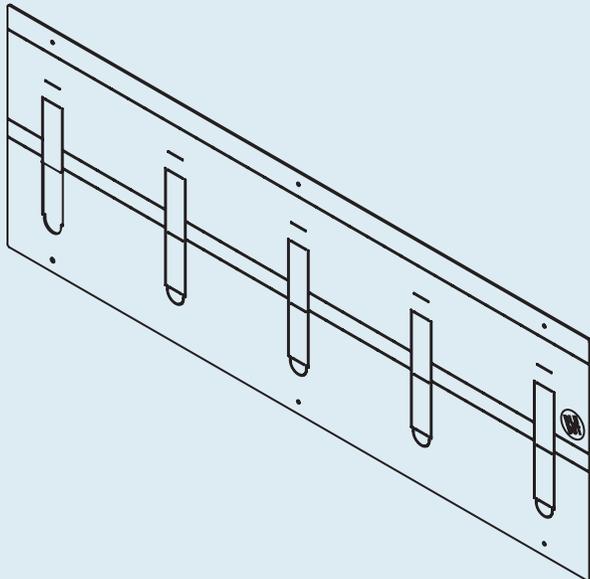

QTY


1

Coat Rack

Step 01

BEND FLAP UP.


Ensure that the coat rack is oriented in the right orientation with the logo location shown. Carefully bend the flap up as shown.

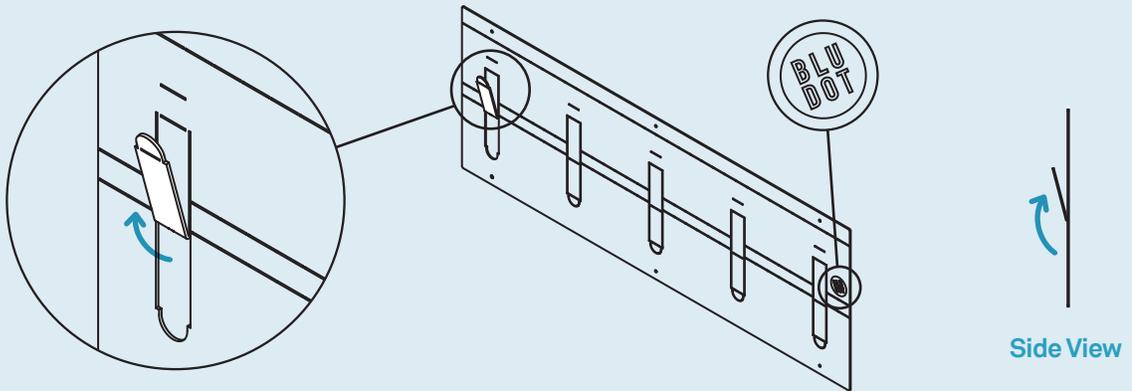

Step 02

INSERT TAB.


Bend the flap up and carefully push the tab through the slot as shown.

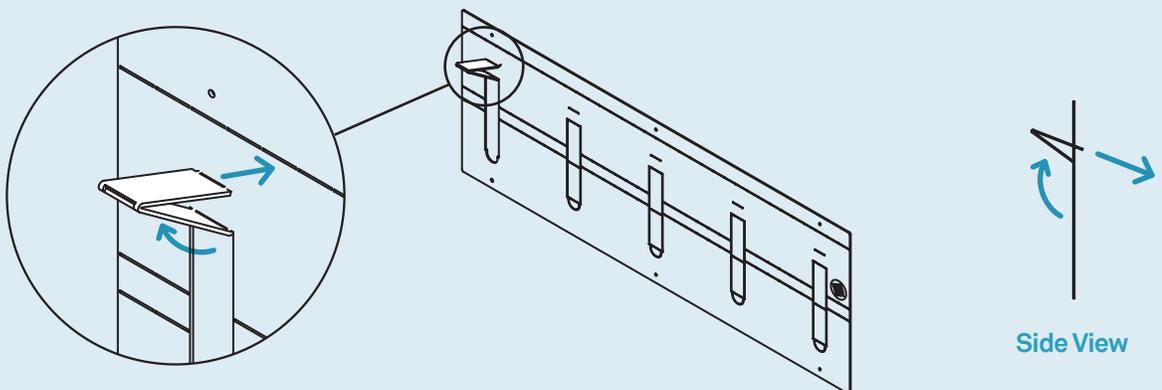

Step 03

SECURE TAB.


Bend the tab up as shown to secure the hook in place.

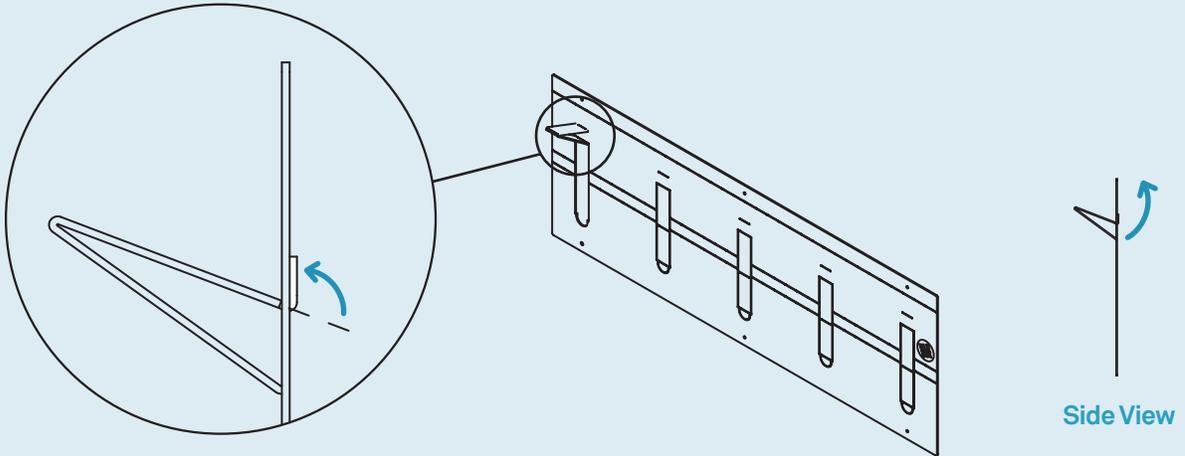

Step 04

FOLD REMAINING HOOKS.



Repeat steps 1-3 on the remaining hooks.

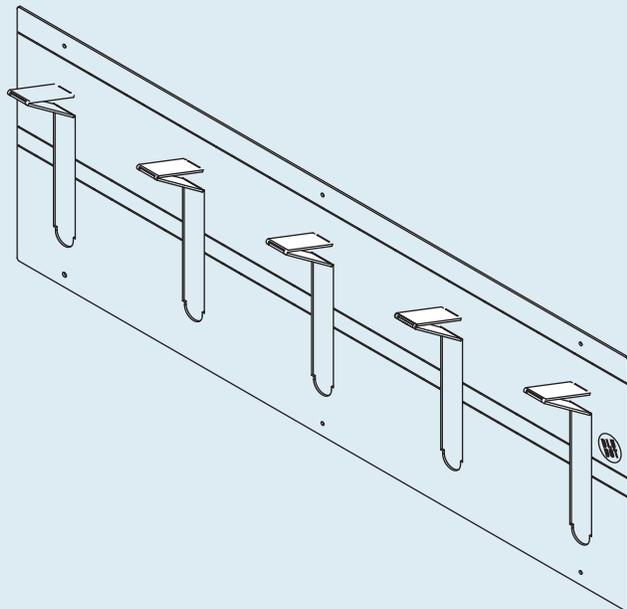

Step 05

BEND BASE BACK.

Bend along lower dotted line to make a 90 degree angle as shown.

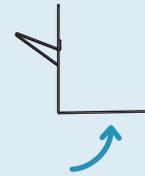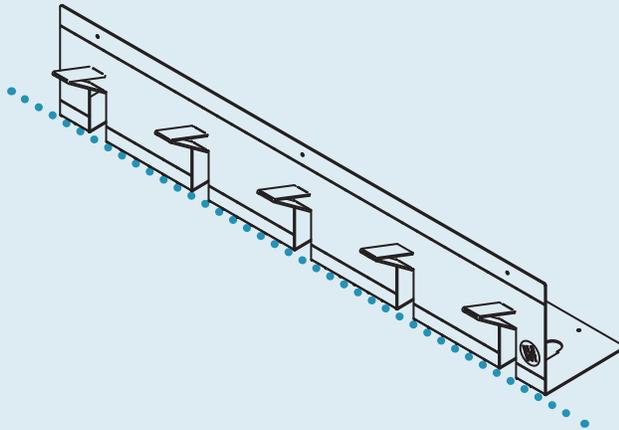


Side View

Step 06

BEND BASE UP.

Bend along remaining dotted line to make a 90 degree angle as shown.

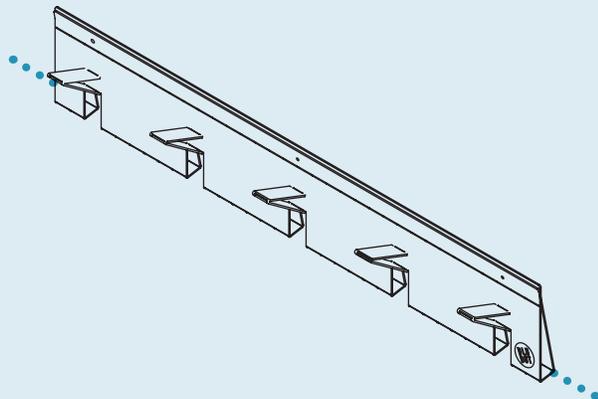


Side View

Step 07

COMPLETE ASSEMBLY.


Bend the top flange forward slightly so it is flush with the back panel to complete assembly.

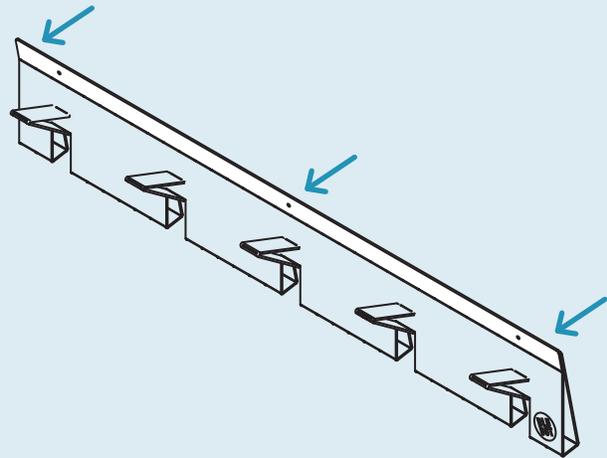

Step 08

MARK WALL LOCATIONS.

Position the coat rack on the wall in your desired location. Ensure that the coat rack is level by using a leveling device before marking the hole locations with a pencil.

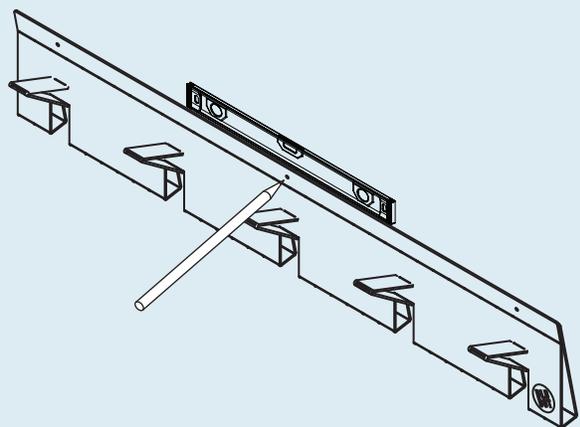

Step 09


ATTACH COAT RACK TO WALL.

Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are not positioned on a stud, drill $1/4$ " holes in the marked locations and insert wall anchor.

If the mounting locations are positioned on a stud, this step of installing wall anchors may be skipped. Instead, drill $1/8$ " pilot holes in the marked locations.

Position coat rack in place with mounting locations aligned. Install fasteners as shown.

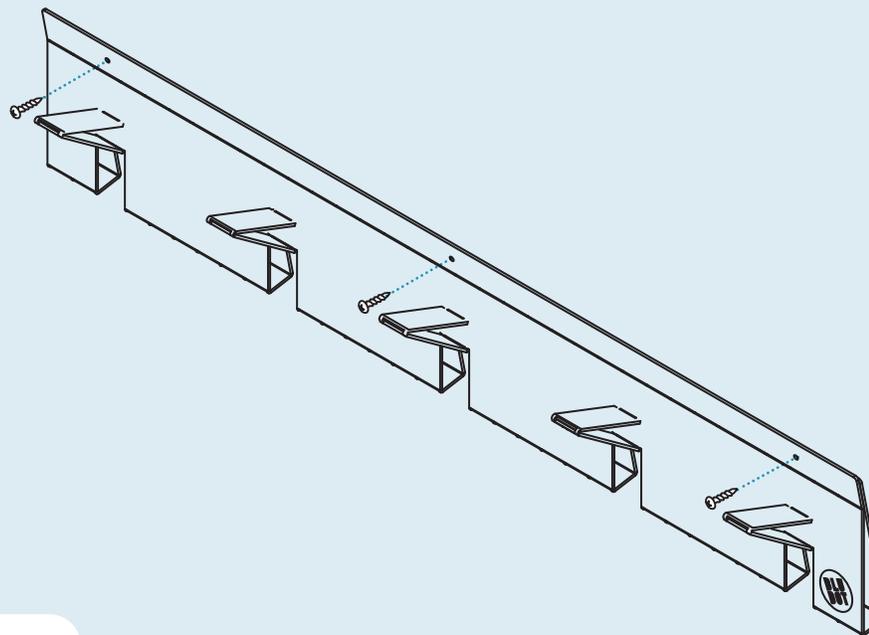

PT. 8054 x 3*



PT. 1402 x 3

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for metal furniture. Wipe completely dry with a soft cloth.

