


Candid Wall Shelf with Hooks

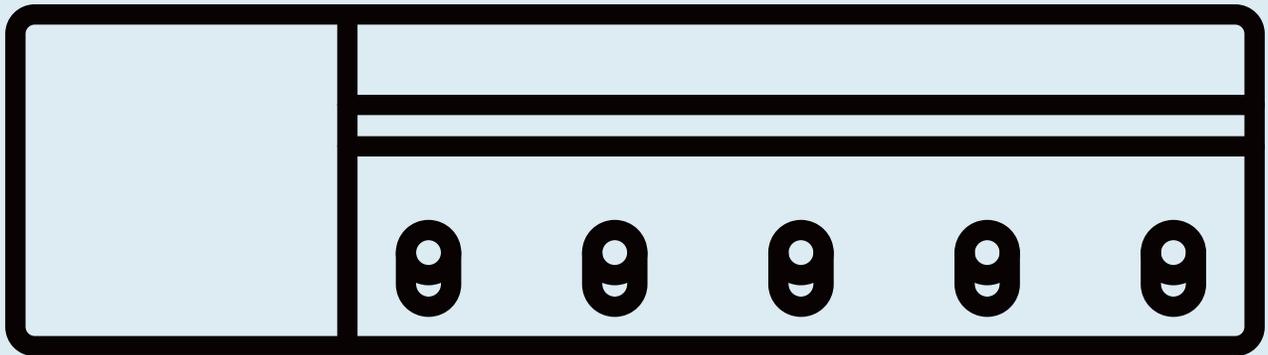

DESIGNED IN 2020

ASSEMBLY NOTES | REV 01




NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware



QTY


2

QTY

2

Pt. 8036

Pt. 1404

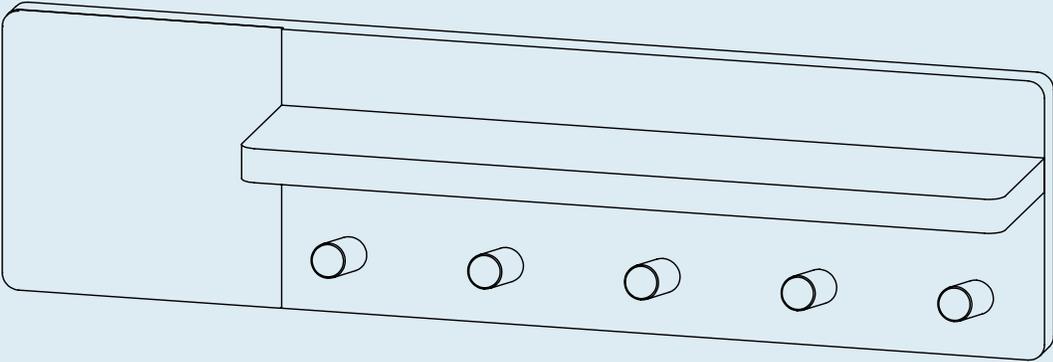

QTY

1

Wall Shelf

Step 01


INSTALL WALL SCREWS

Wall anchors and fasteners are included for installation. Please consult your local hardware professional to determine the hardware best suited for your wall type.

Mark the mounting locations spaced **16"** apart, using a level to ensure that they are horizontal.

If the mounting location is not positioned on a stud, drill a **15/64"** hole in the marked location and insert wall anchor. If the mounting location is located on a stud, this step of installing an anchor may be skipped. Instead, drill a **1/8"** pilot hole in the marked position.

Attach wall screws, leaving space between the screw head and the wall as shown.

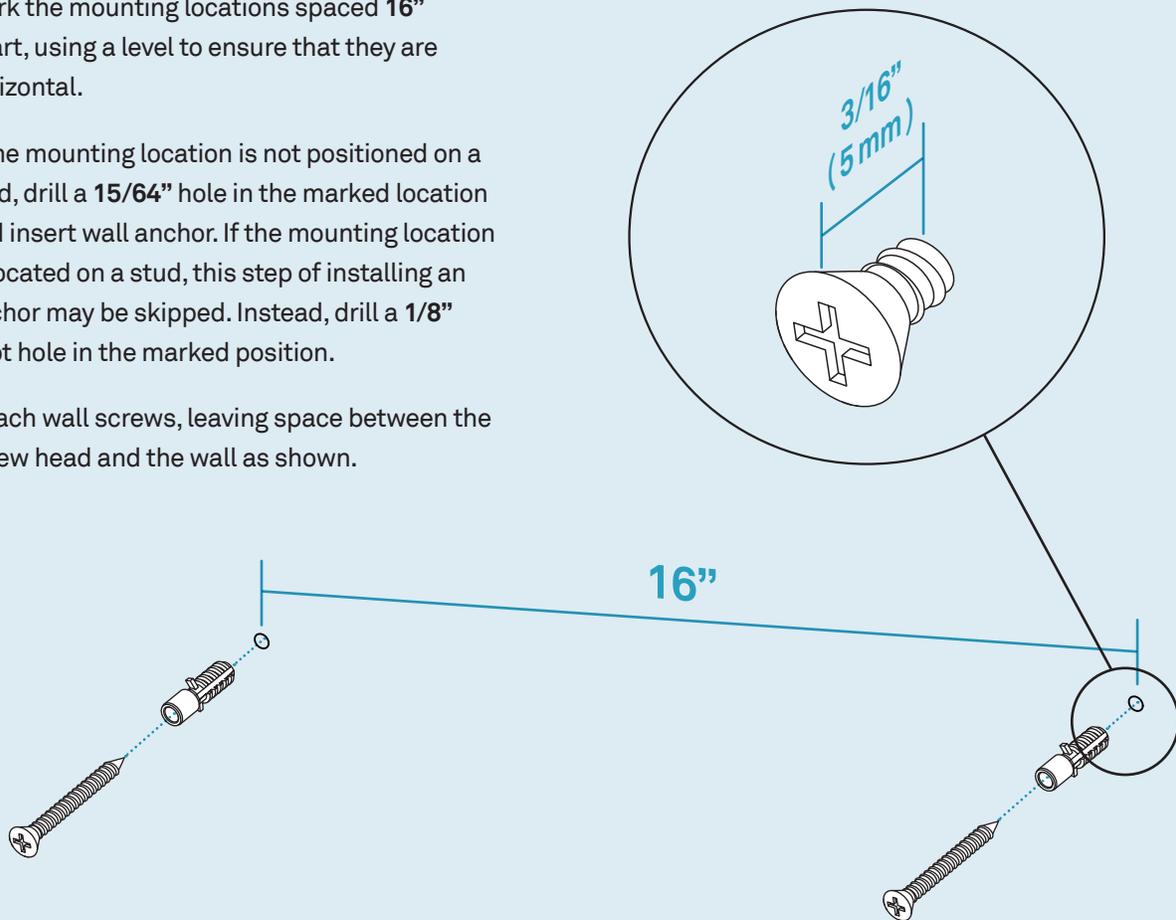

Pt. 8036 x 2*




Pt. 1404 x 2

Step 02

PLACE SHELF ON WALL SCREWS

Position the shelf onto the installed wall screws as shown. Adjust wall screws as necessary to ensure a tight fit.

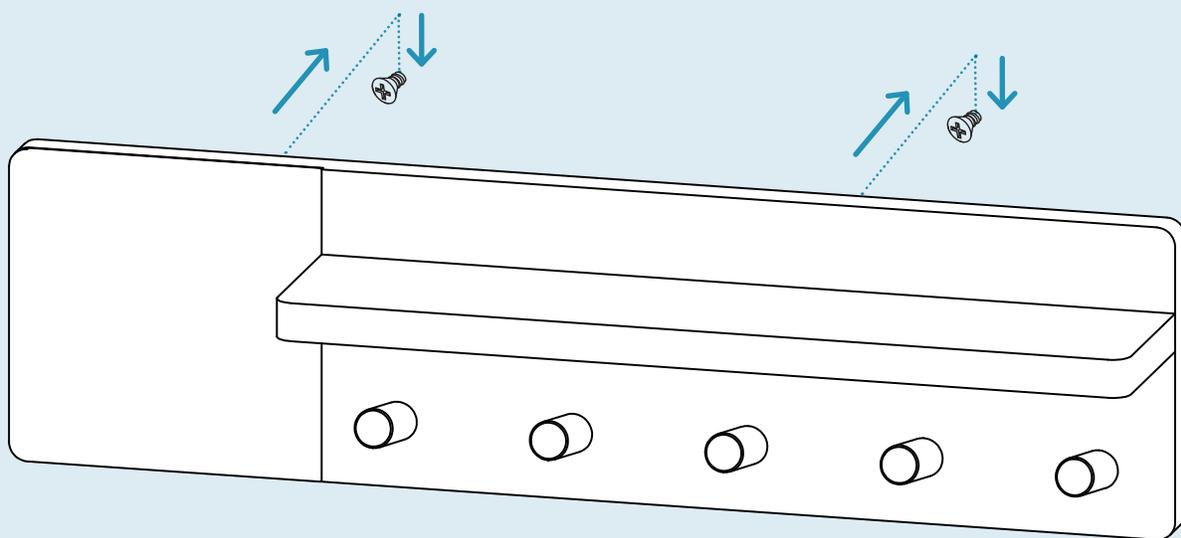

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for glass and wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

