
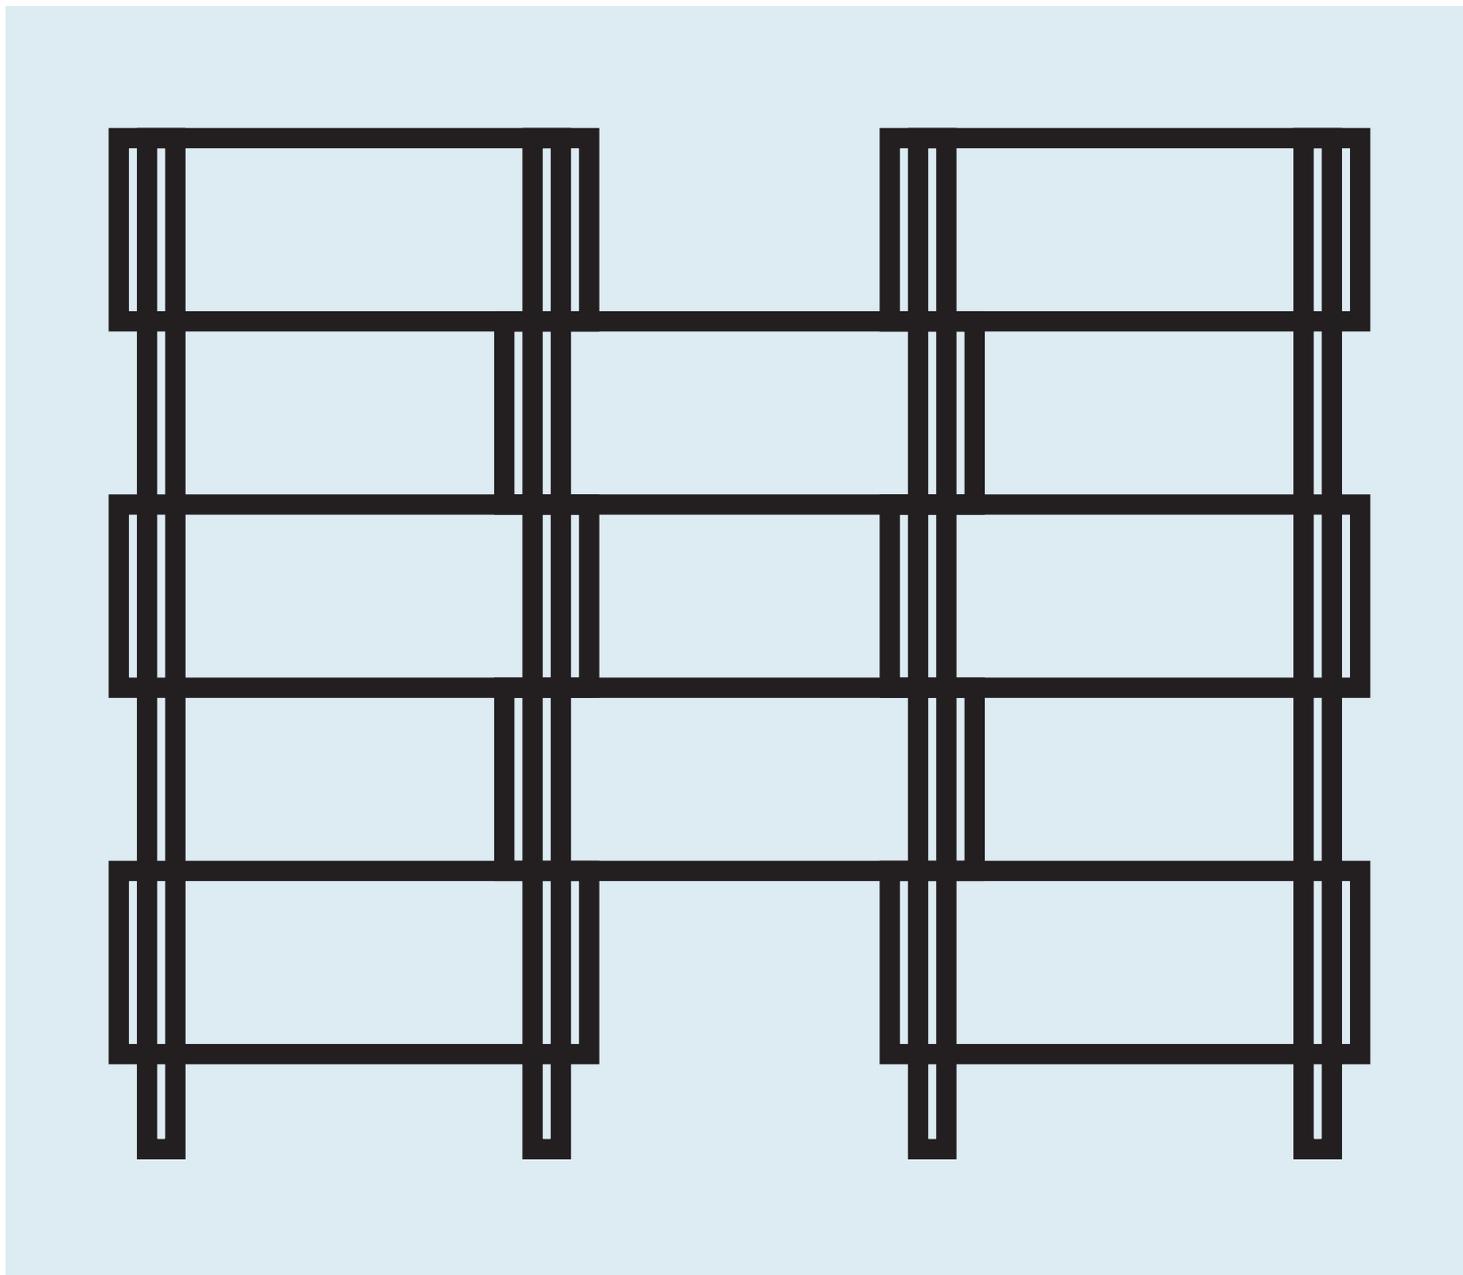


Chicago 8 Box

DESIGNED IN 1997

ASSEMBLY NOTES | REV 04

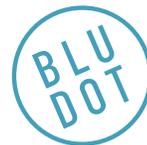

NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware



QTY 64

Pt. 1001



QTY 64

Pt. 5001




QTY 64

Pt. 5005



QTY 64

Pt. 5002



QTY 4

Pt. 8036




QTY 4

Pt. 1217




QTY 4

Pt. 1218

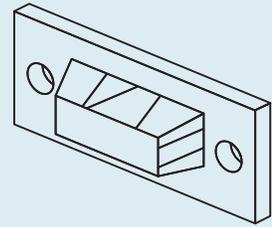


QTY 4

Pt. 8041

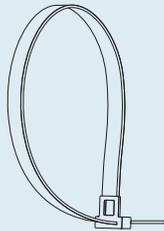


QTY 2

Pt. 8042

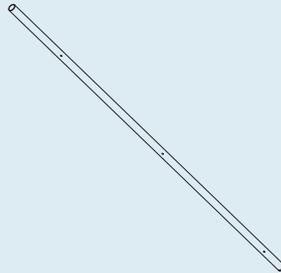


QTY 4

3 Hole Post

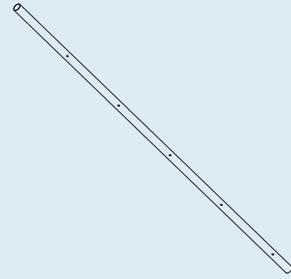


QTY 4

5 Hole Post

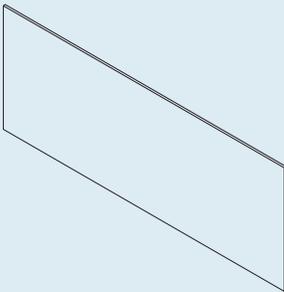


QTY 8

Back Panel

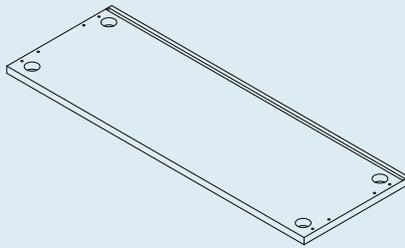

QTY 16




Horizontal Panel

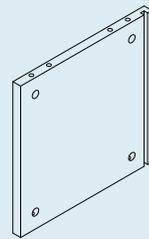


QTY 16

Side Panel


How to use the cam lock system

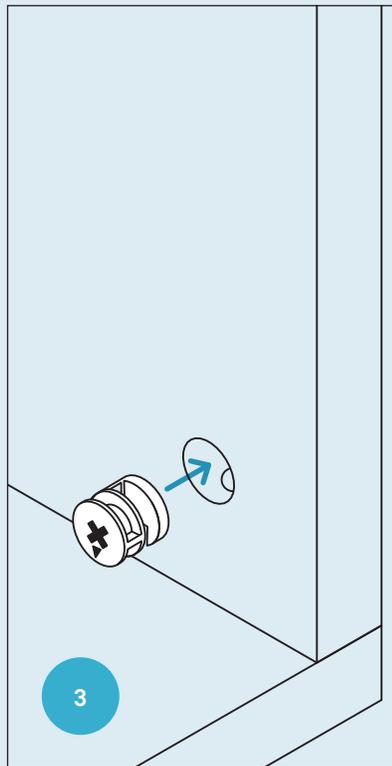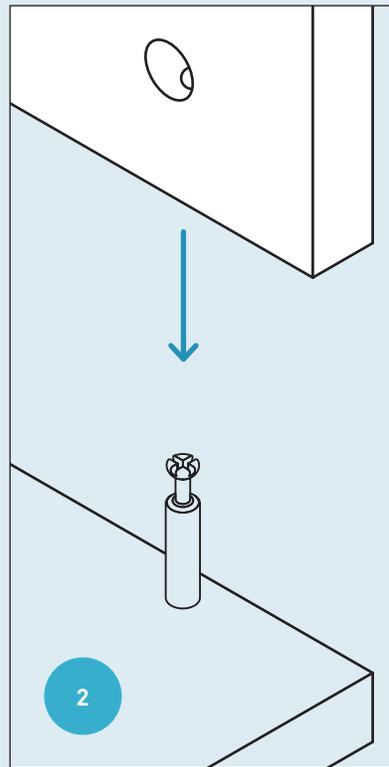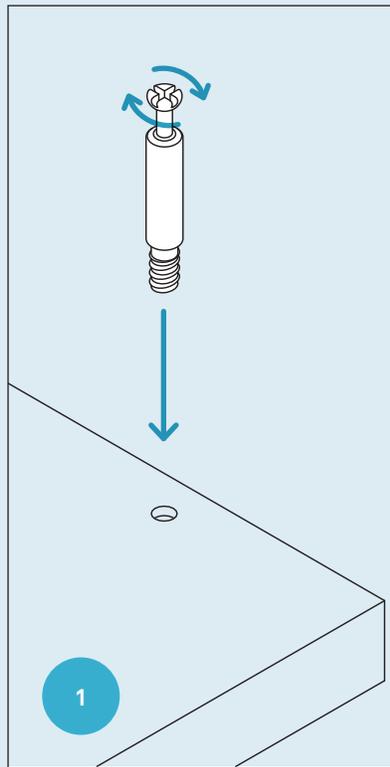

Note direction of cam arrow.

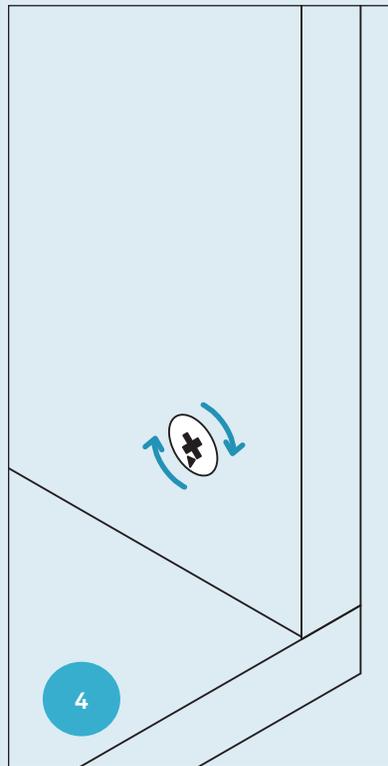

Turn cam clockwise 1/2 turn or until tight.

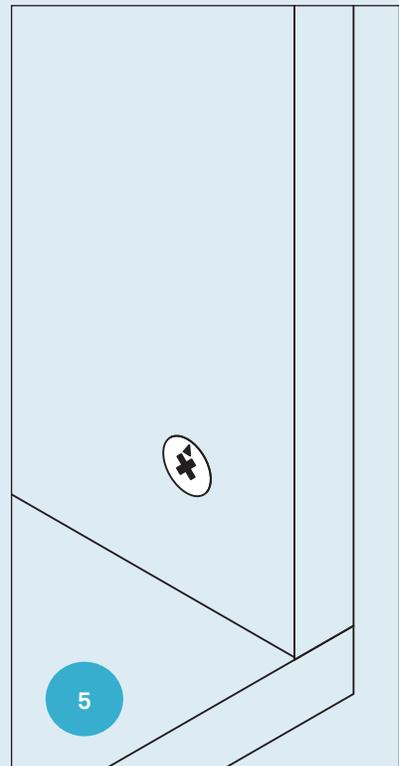


Note direction of cam arrow.

Step 01

BEGIN ASSEMBLING CASE.

Attach side panels to horizontal panel as shown using the provided hardware. Be sure to align grooves on horizontal panel and side panels. Refer to page 2 on how to use the cam lock system.

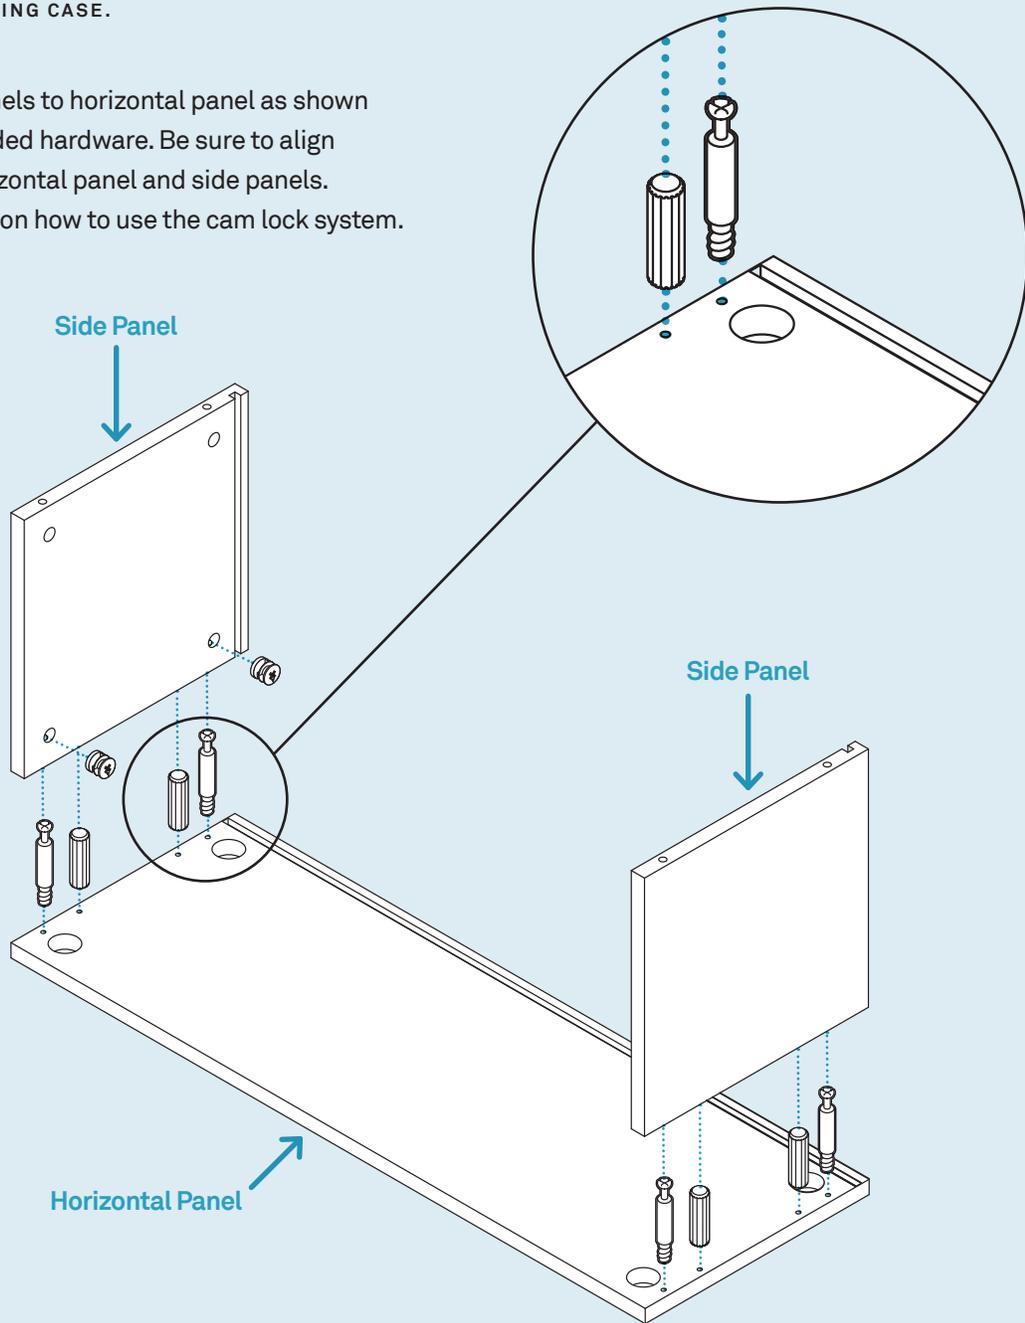

PT. 5001 X 4



PT. 5005 X 4




PT. 5002 X 4

Step 02

INSERT BACK PANEL.


Insert back panel into grooves in case.

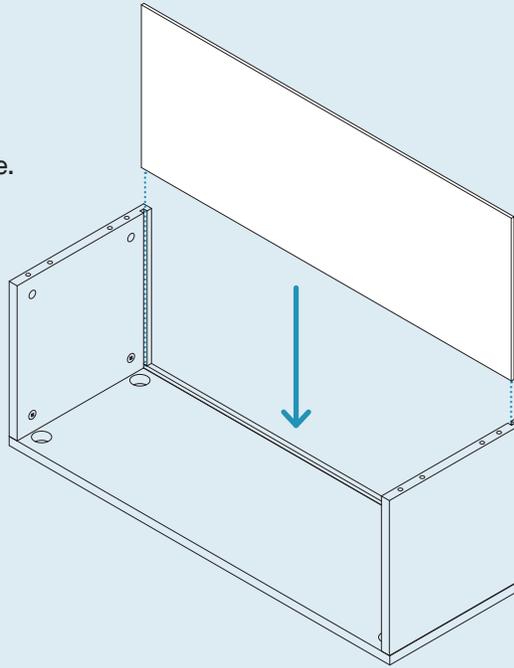

Step 03

FINISH ASSEMBLING CASE.



Finish assembling the case as shown. Repeat steps 01-03 for remaining cases. Refer to page 2 on how to use the cam lock system.

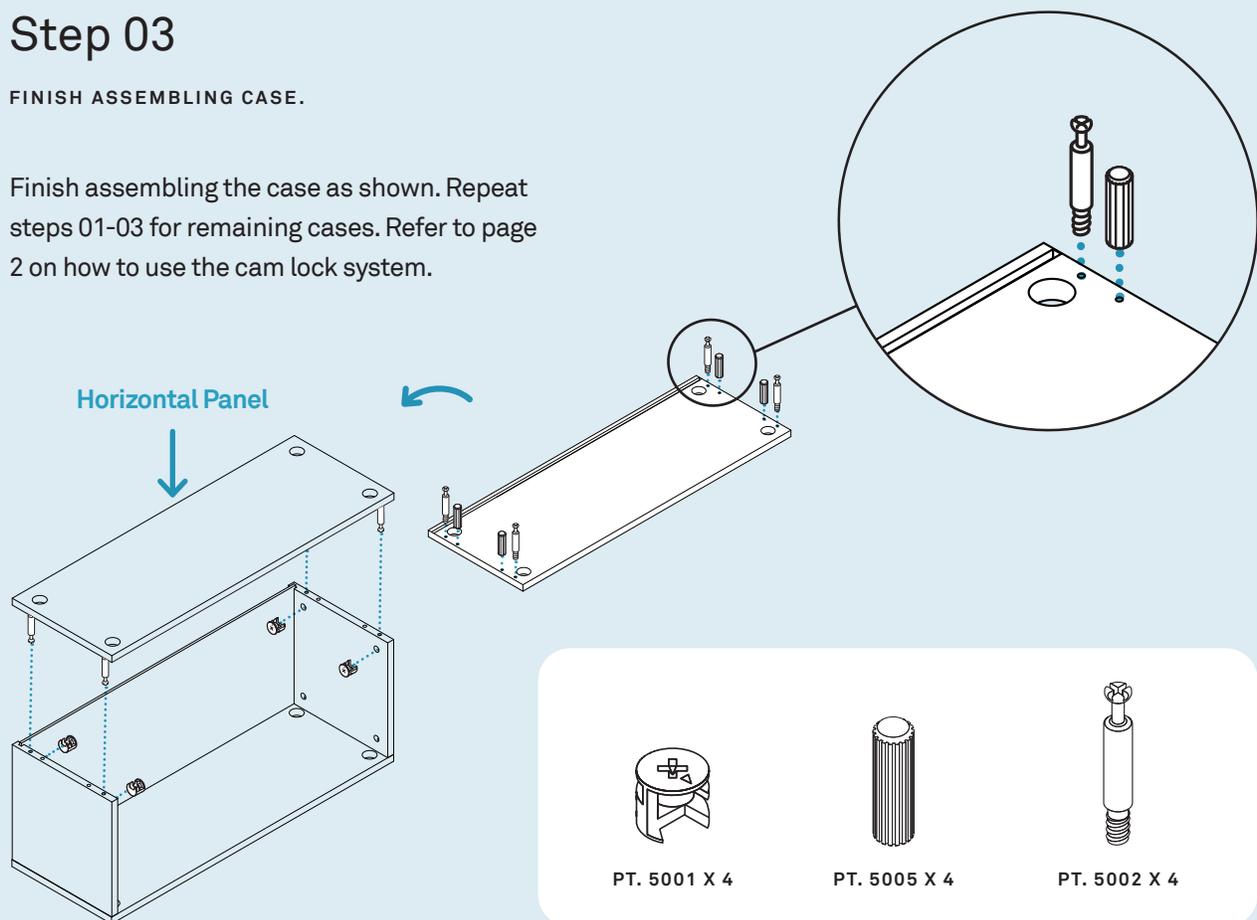

Step 04

ASSEMBLING THE POSTS.


Assemble the posts as shown using the provided hardware. Repeat step 04 for remaining posts.

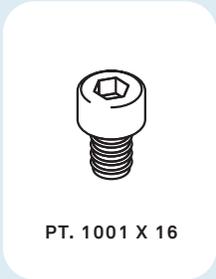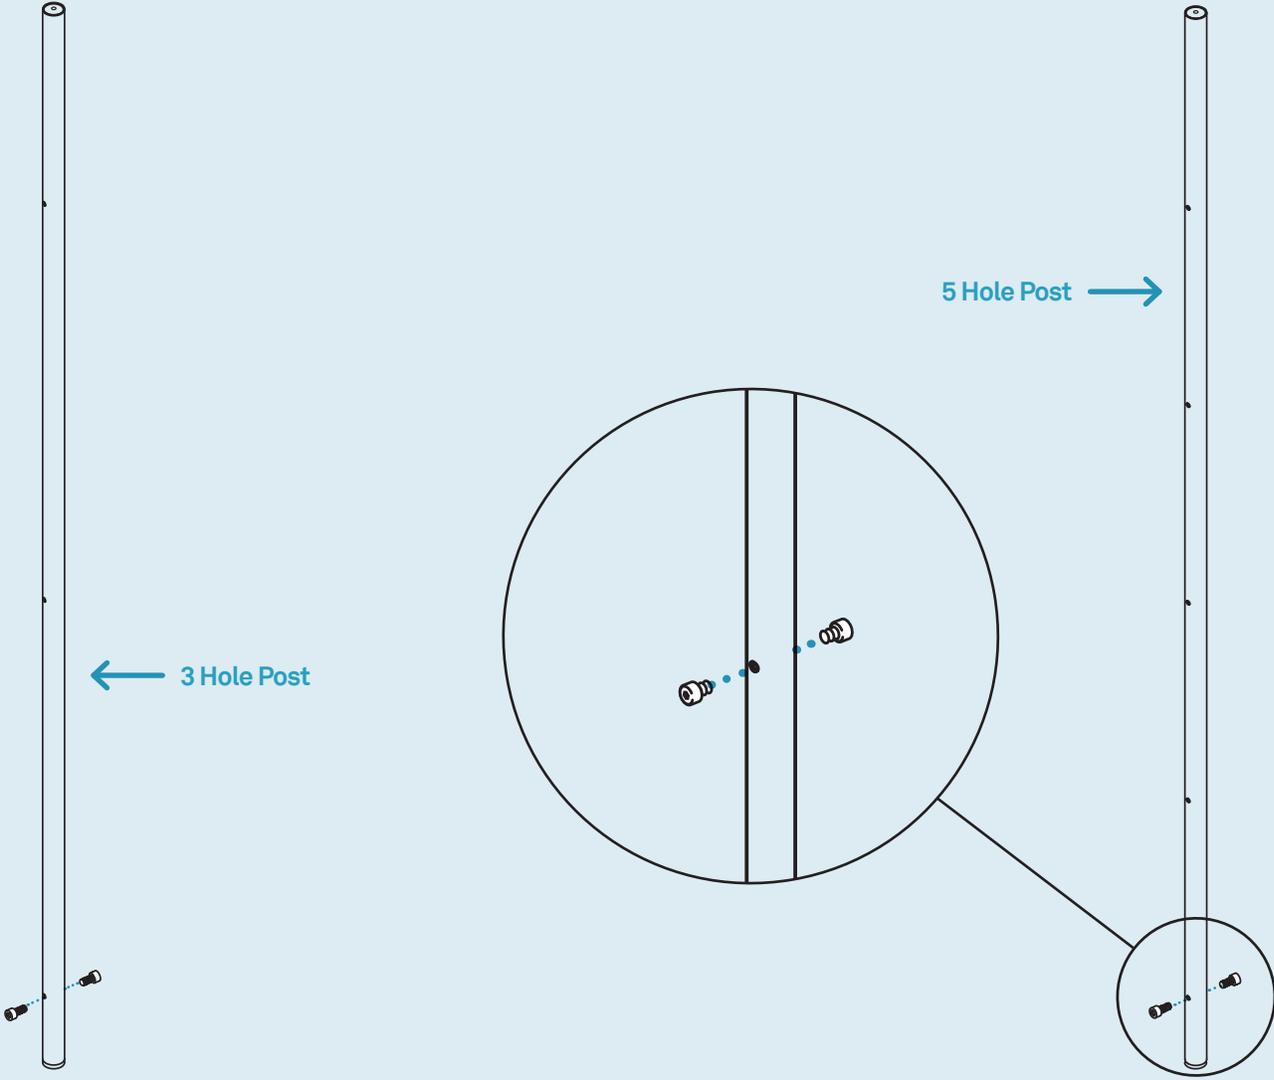

Step 05

INSTALLING THE POSTS.


Insert post as shown. After the posts have been installed, have a second person help lift and bring the cases upright.

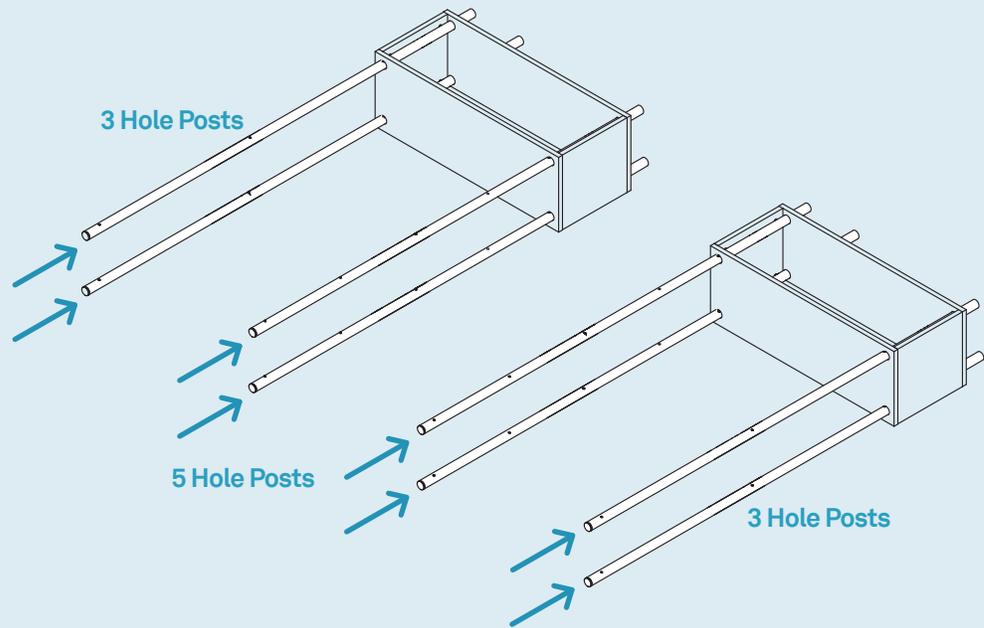

Step 06

LEVEL THE CASES.



Level the cases as shown.

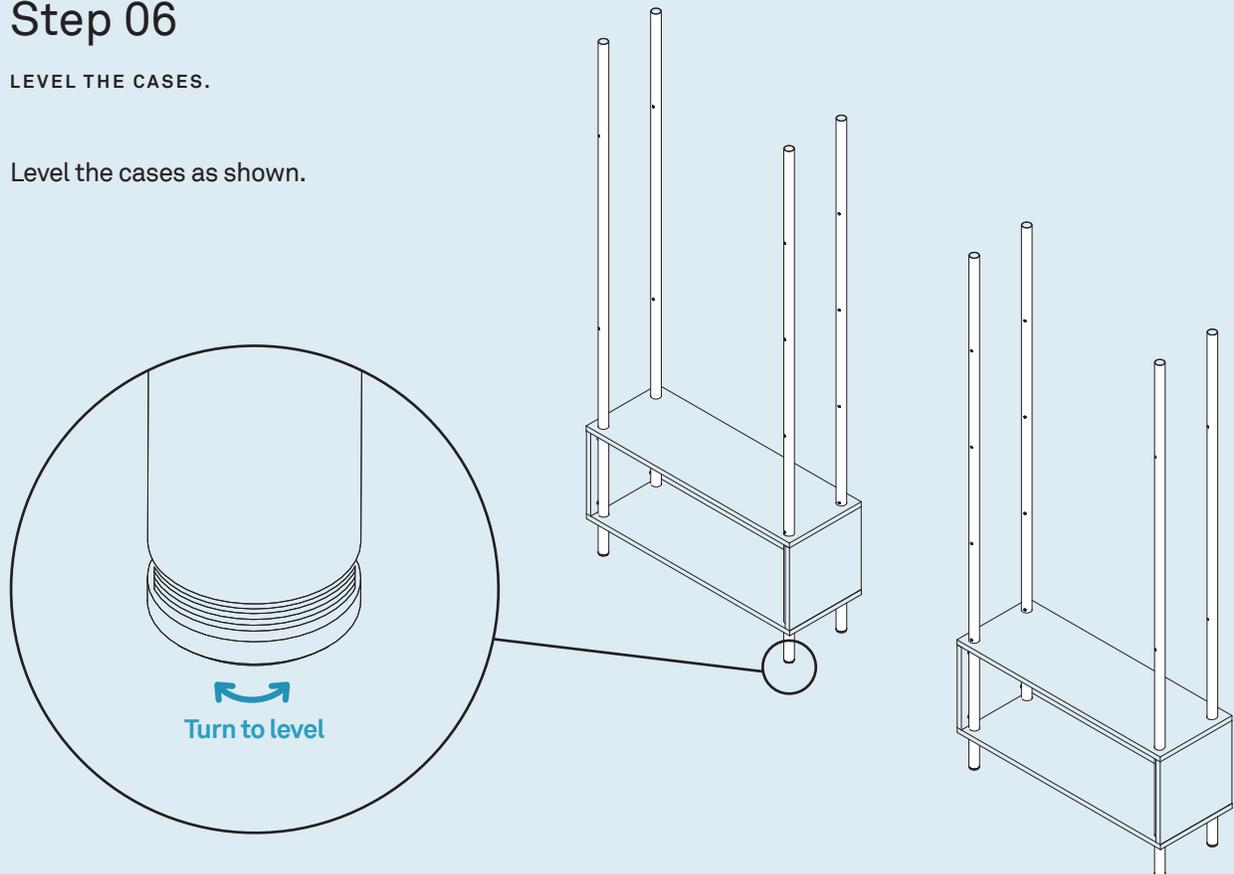

Step 07

ATTACHING THE CASES.

Attach the cases to the posts as shown using the provided hardware.

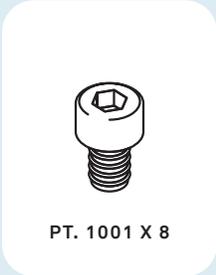
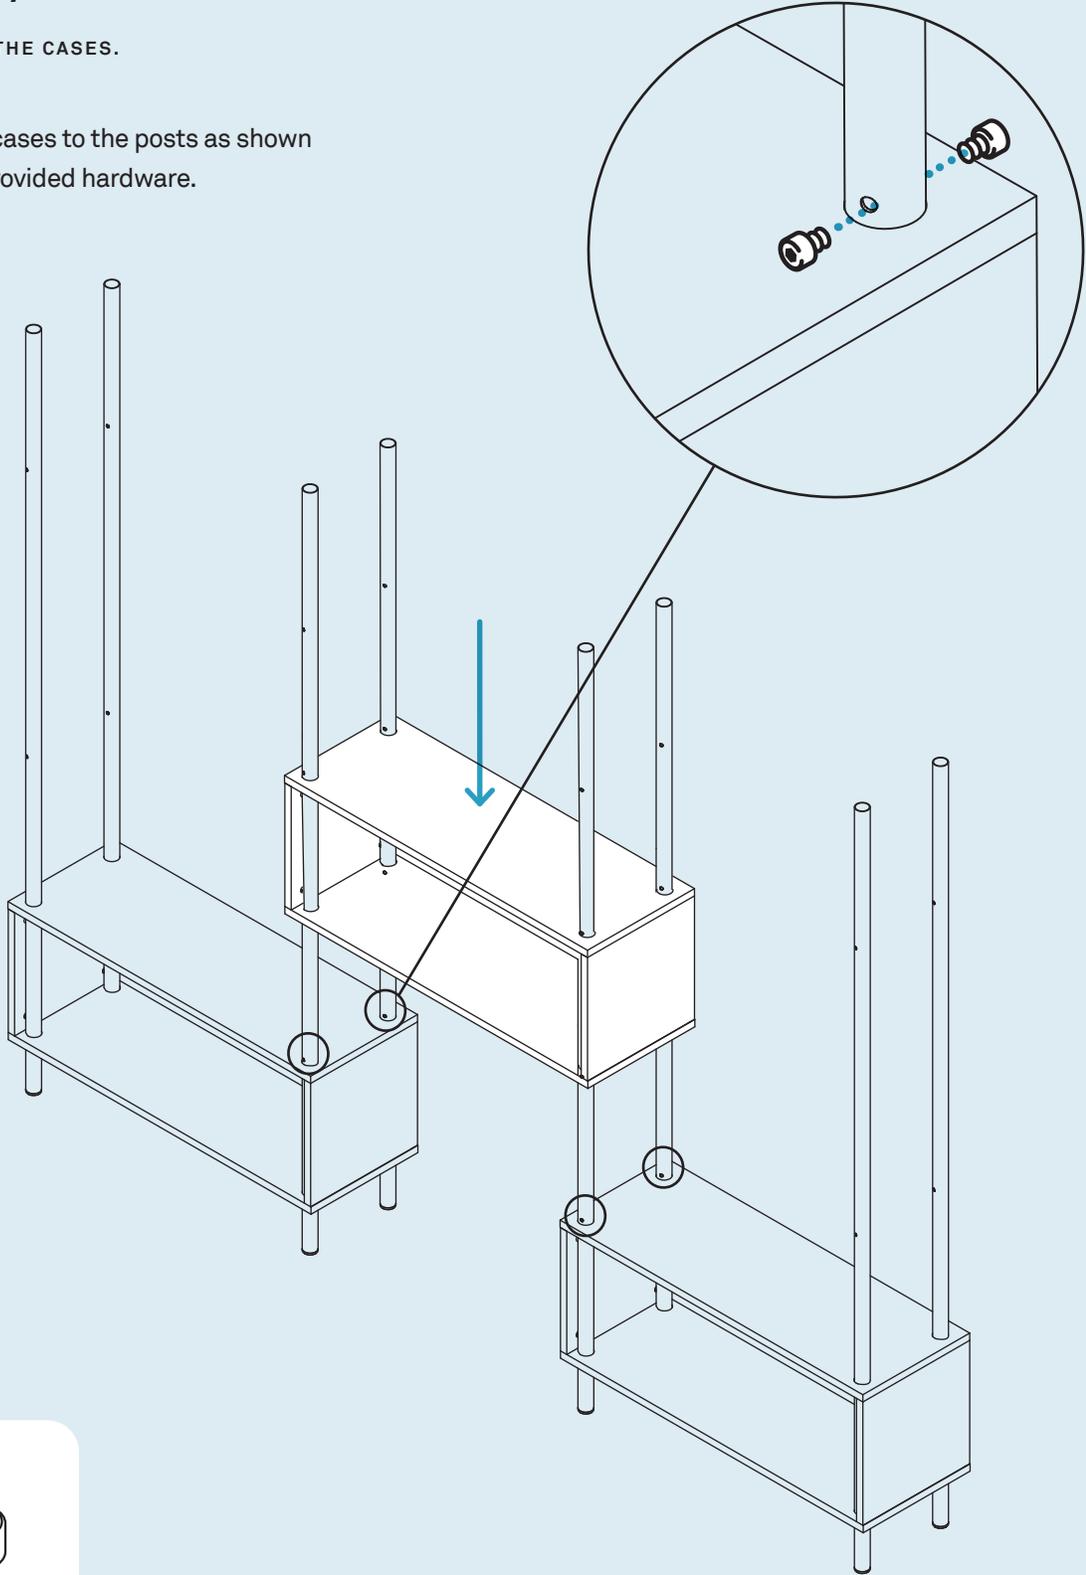


PT. 1001 X 8

Step 08

ATTACHING THE CASES.

Attach the cases to the posts as shown using the provided hardware.

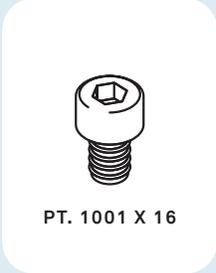
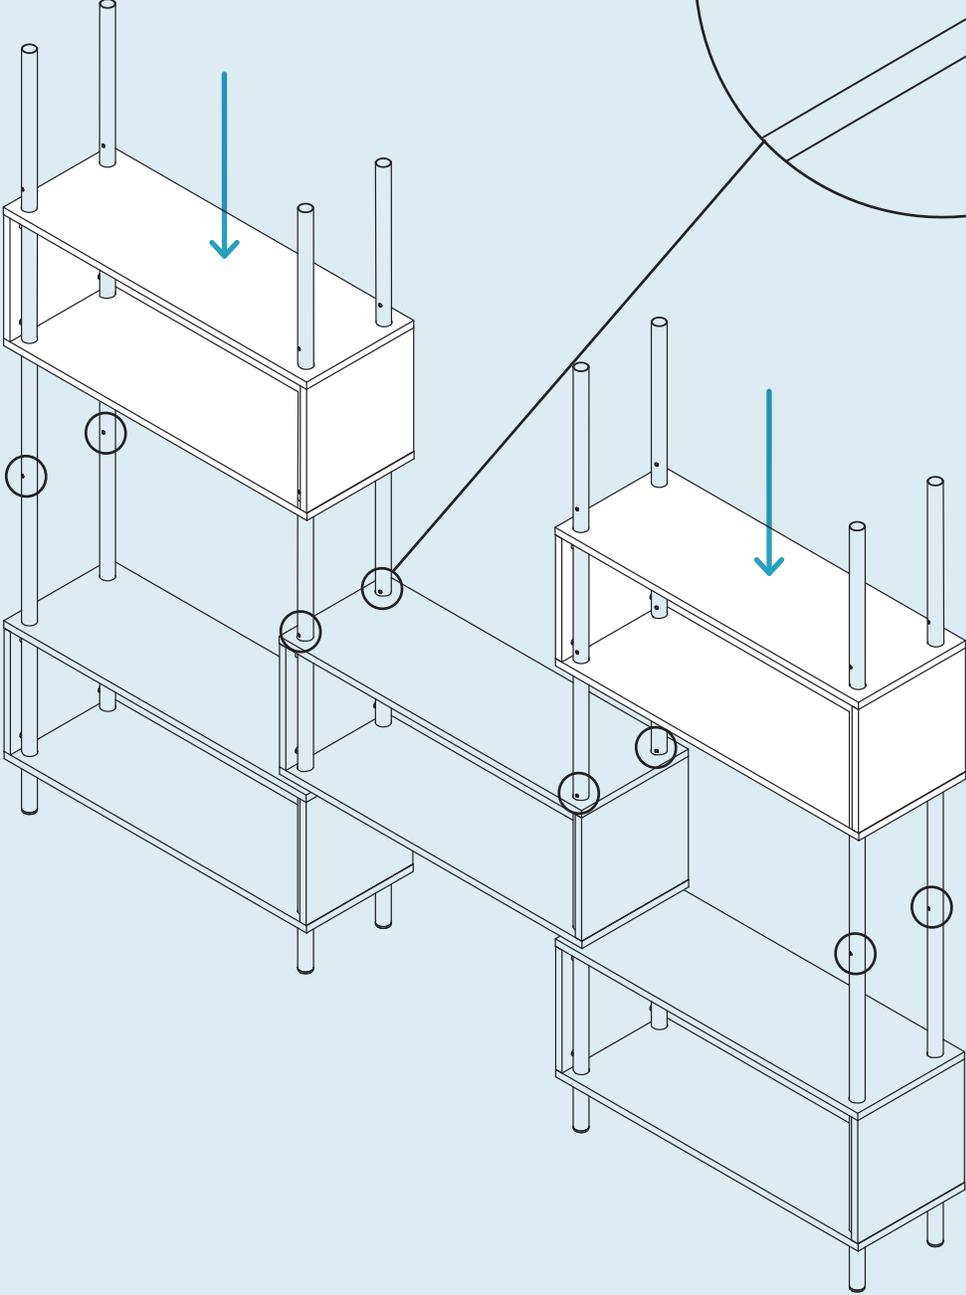


PT. 1001 X 16

Step 09

ATTACHING THE CASES.

Attach the cases to the posts as shown using the provided hardware.

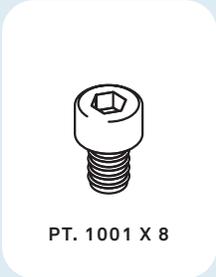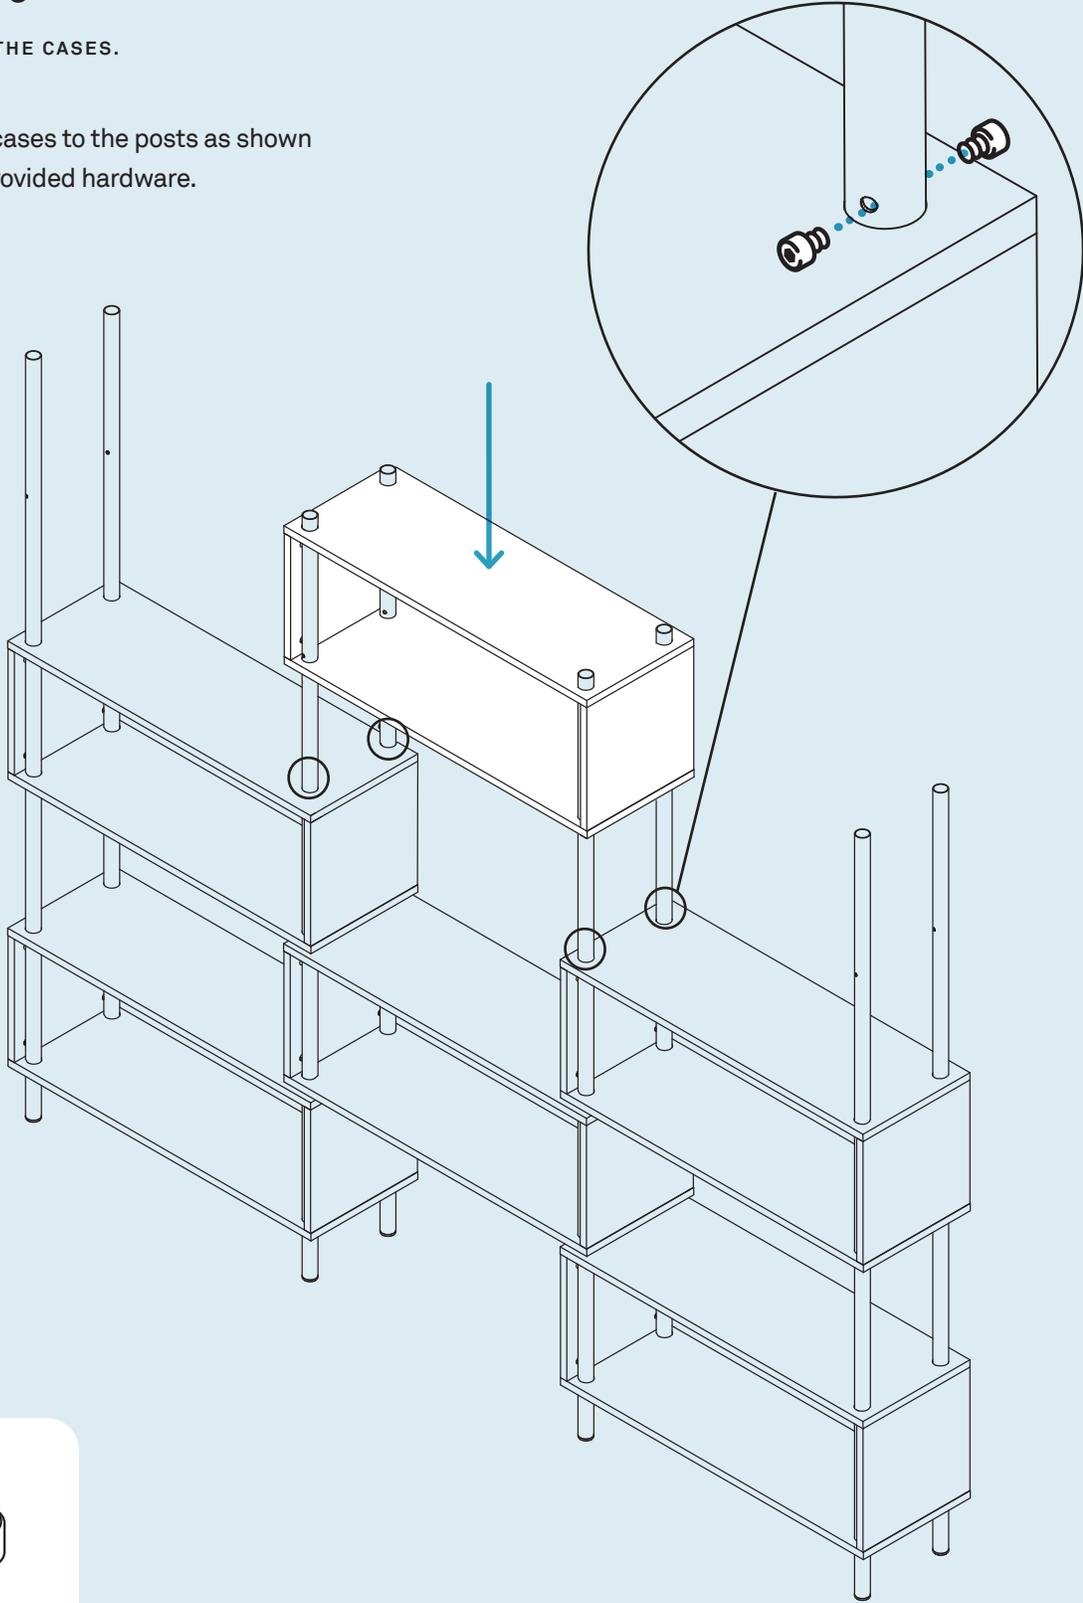


PT. 1001 X 8

Step 10

ATTACHING THE CASES.




Attach the cases to the posts as shown using the provided hardware.

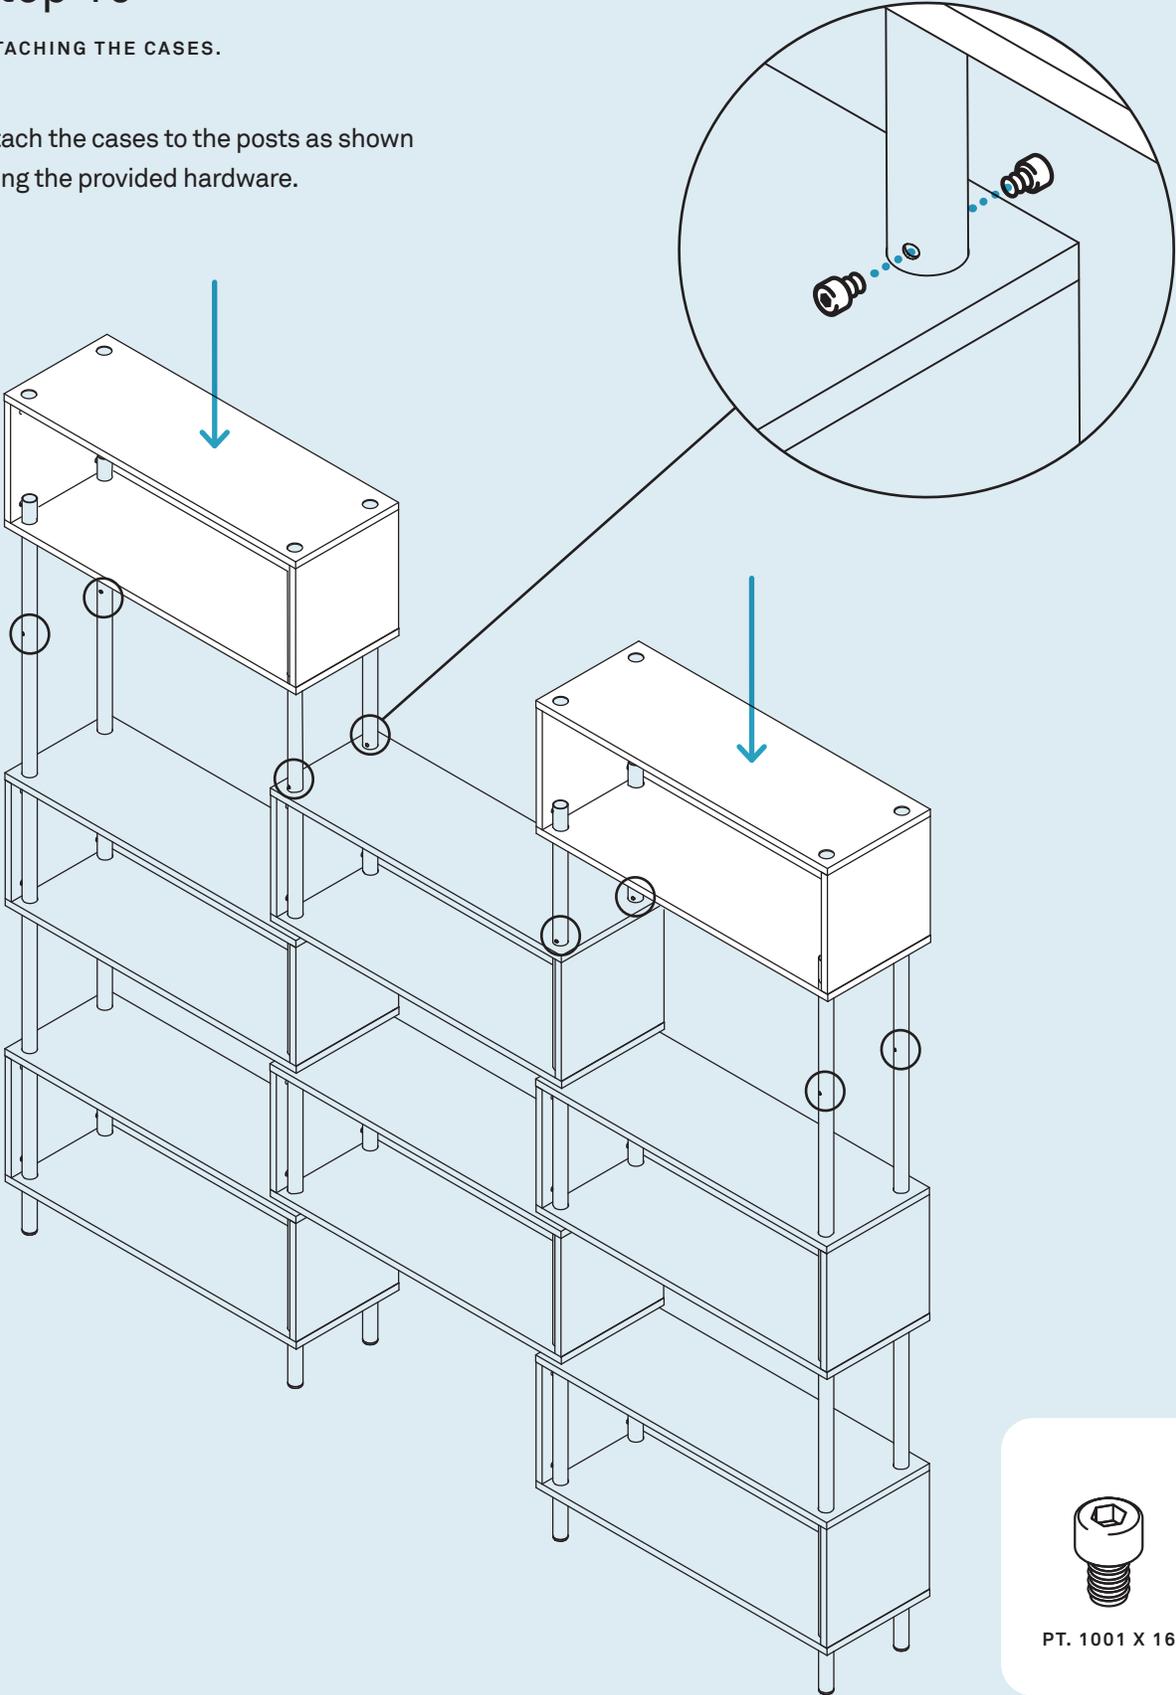

Step 11

INSTALL ANTI-TIP BRACKETS TO CASE.

Brackets must be installed to top panel of case. In order to prevent damage, it is recommended that $7/64$ " pilot holes be drilled prior to installation.

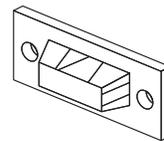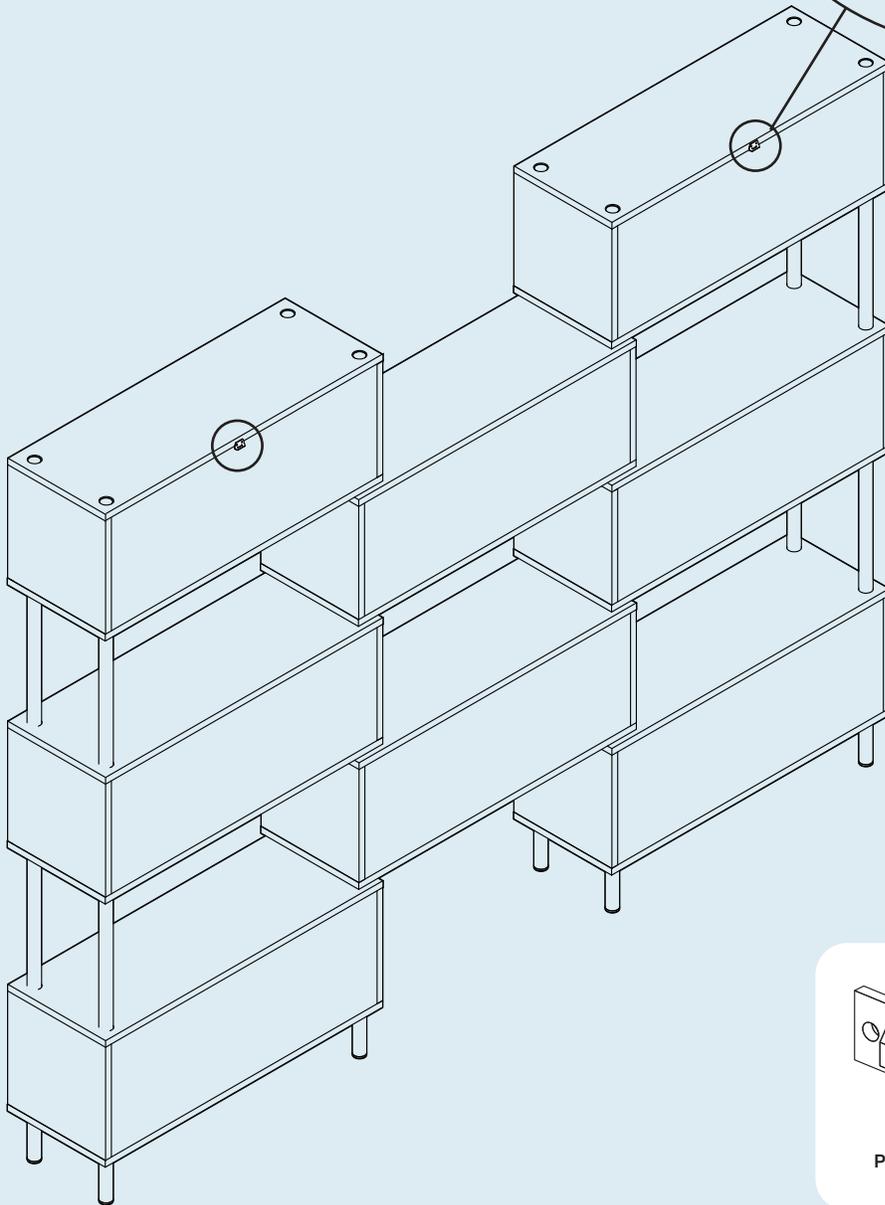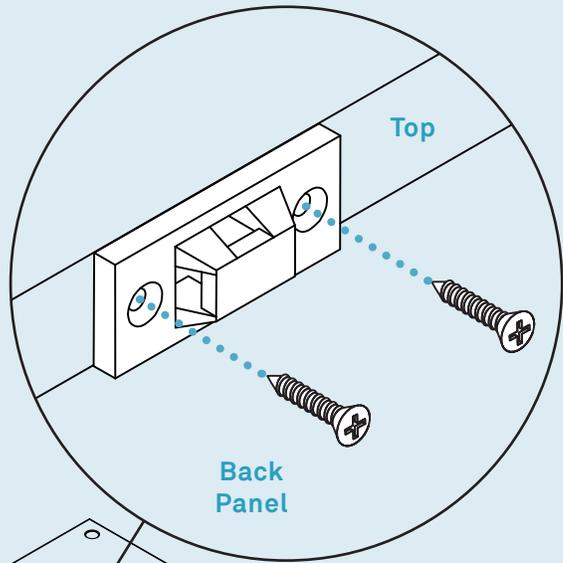

PT. 8041 x 2



PT. 1217 x 4

Step 12

ATTACH ANTI-TIP BRACKETS TO THE WALL.




Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

Position the anti-tip brackets onto the wall 1" below case top panel height as shown and mark hole locations with a pencil.

If the mounting locations are not positioned on a stud, drill $5/16''$ clearance holes in the hole locations. Press wall anchors into drilled holes.

If the hole locations are positioned on a stud, this step of installing wall anchors may be skipped. Instead, drill $7/64''$ pilot holes for the fasteners.




Secure anti-tip brackets in place using fasteners as shown.

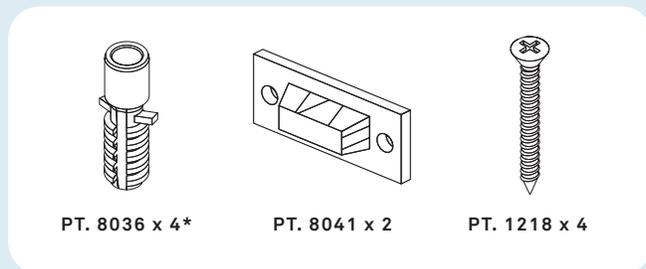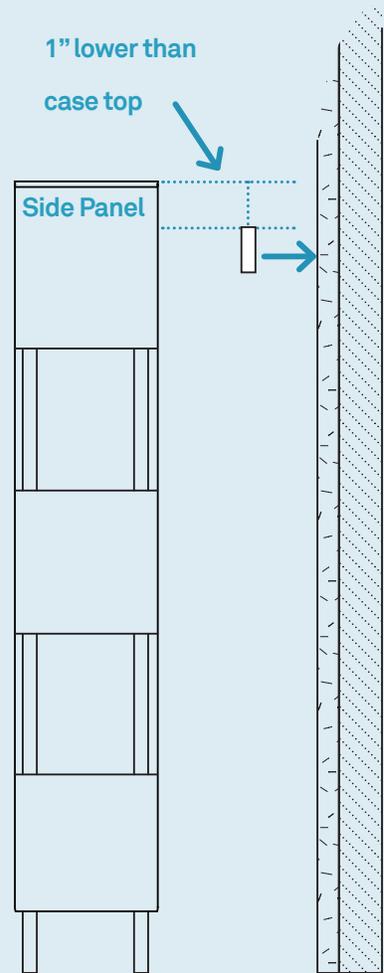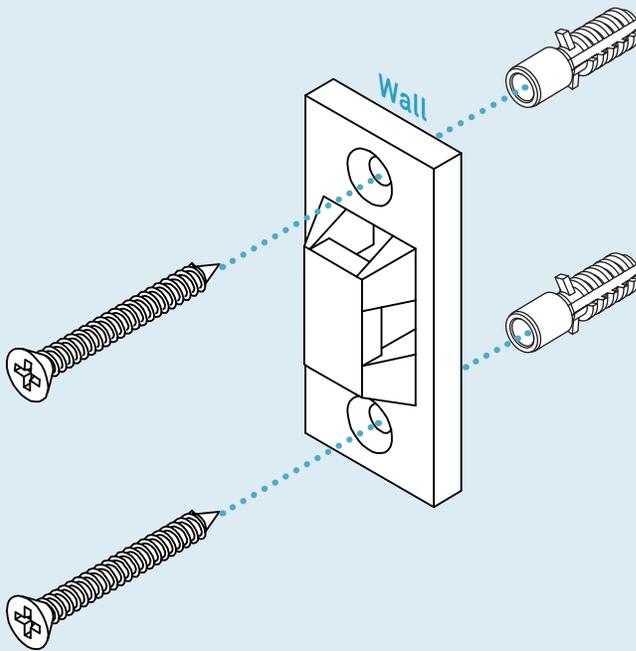

Step 13

SECURE THE CASE.

Install and tighten the strap prior to using the product.

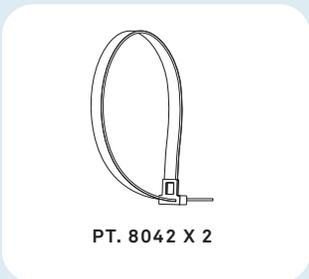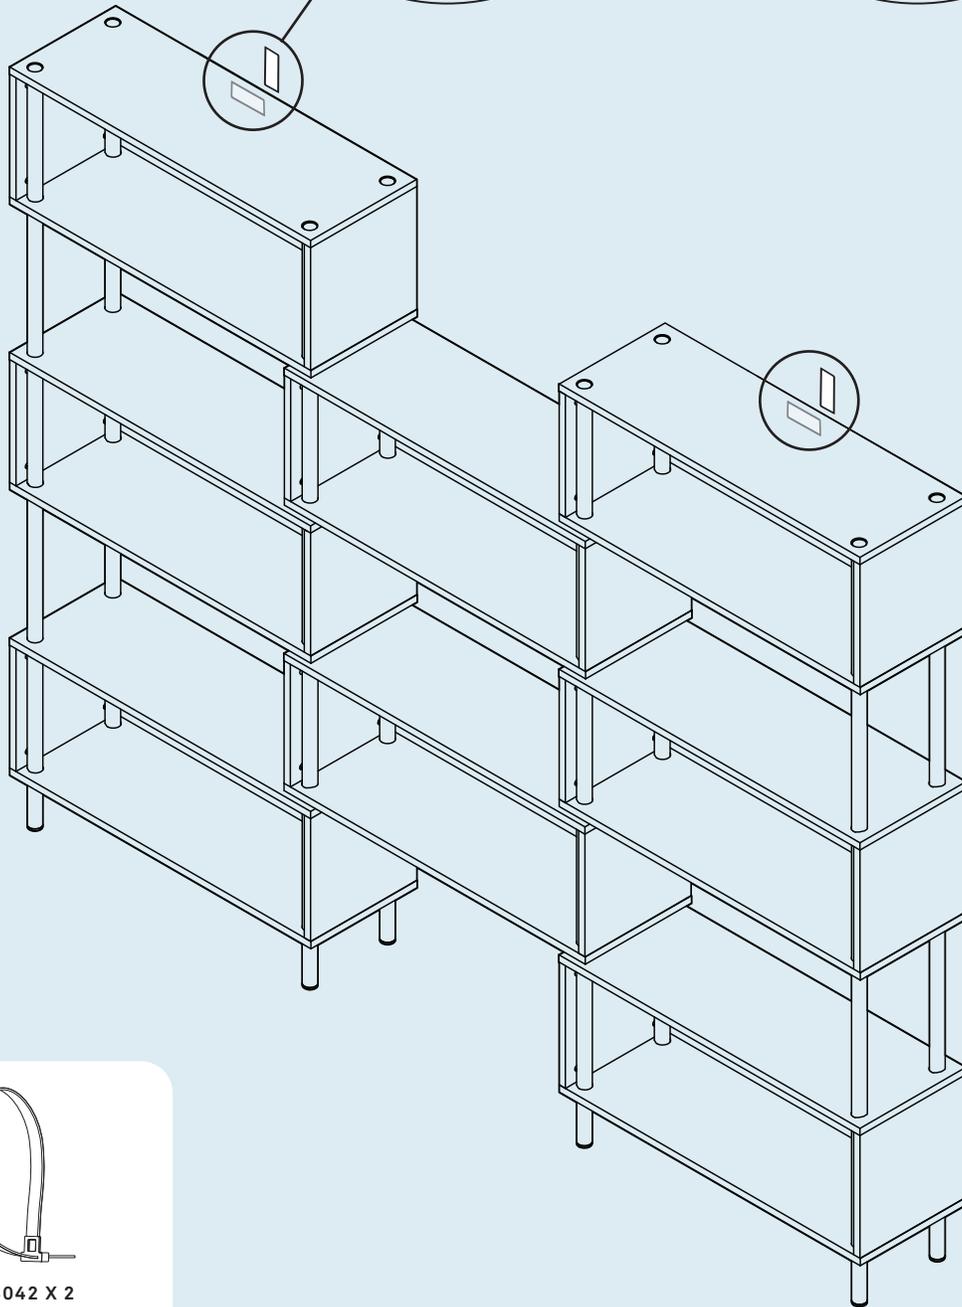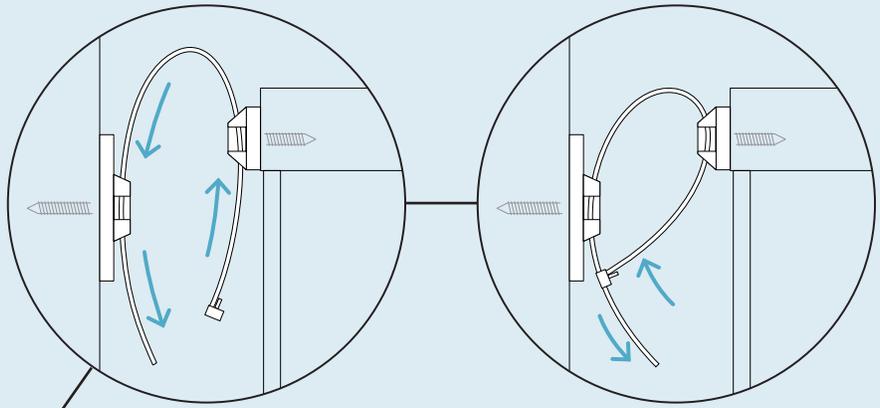

PT. 8042 X 2

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.



