


Diplomat Sleeper Sofa

DESIGNED IN 2010

ASSEMBLY NOTES | REV 00

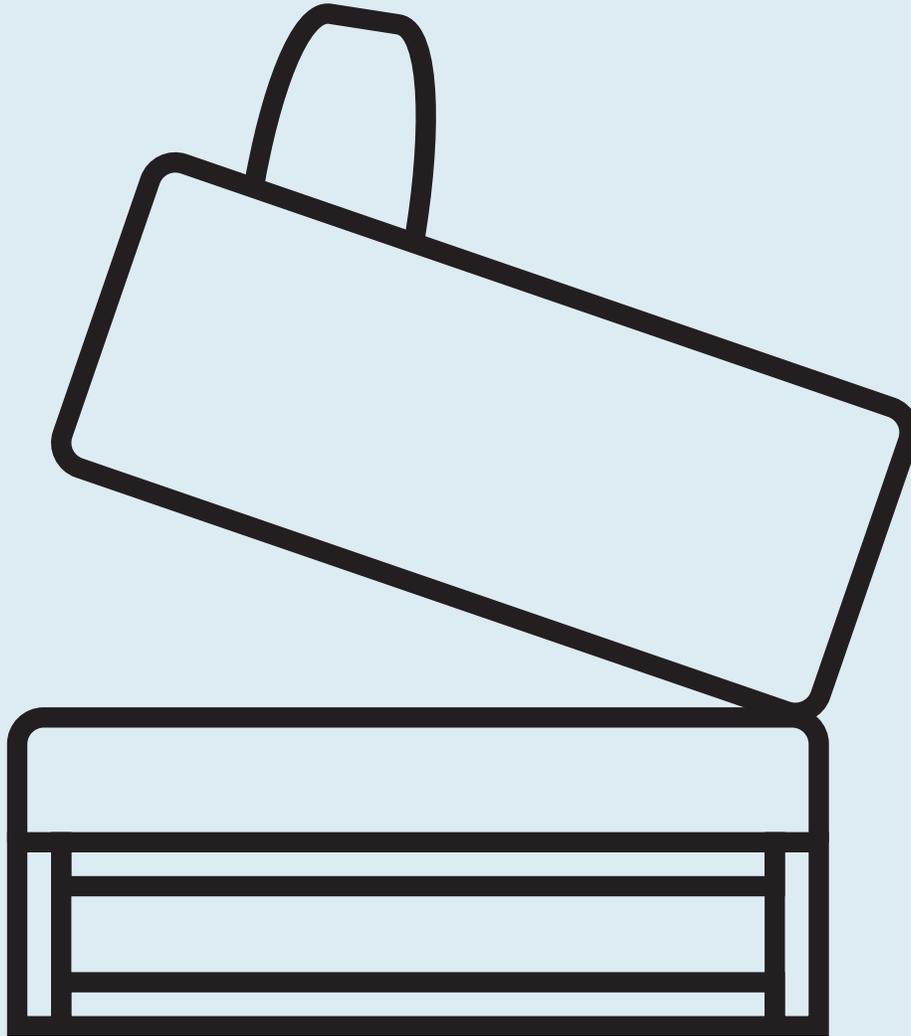


NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 8

Pt. 3002



QTY 8

Pt. 3001




QTY 8

Pt. 1109




QTY 1

Pt. 9004

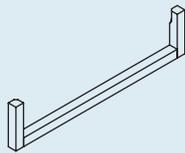


QTY 2

Leg

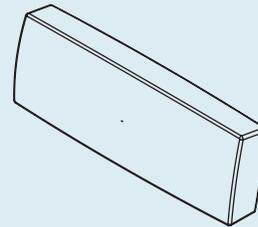

QTY 2

Back Cushion

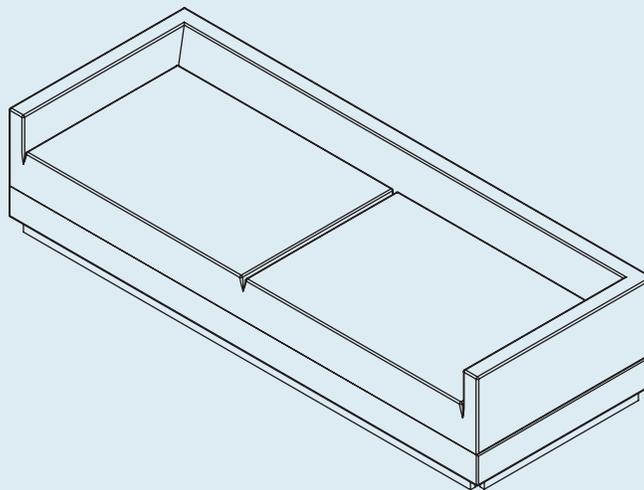



QTY 1

Sleeper Sofa

Step 01

ATTACH LEGS.

Attach the legs to the sofa using the hardware provided as shown. Partially tighten bolts at first until all hardware is fully aligned, then finish tightening.

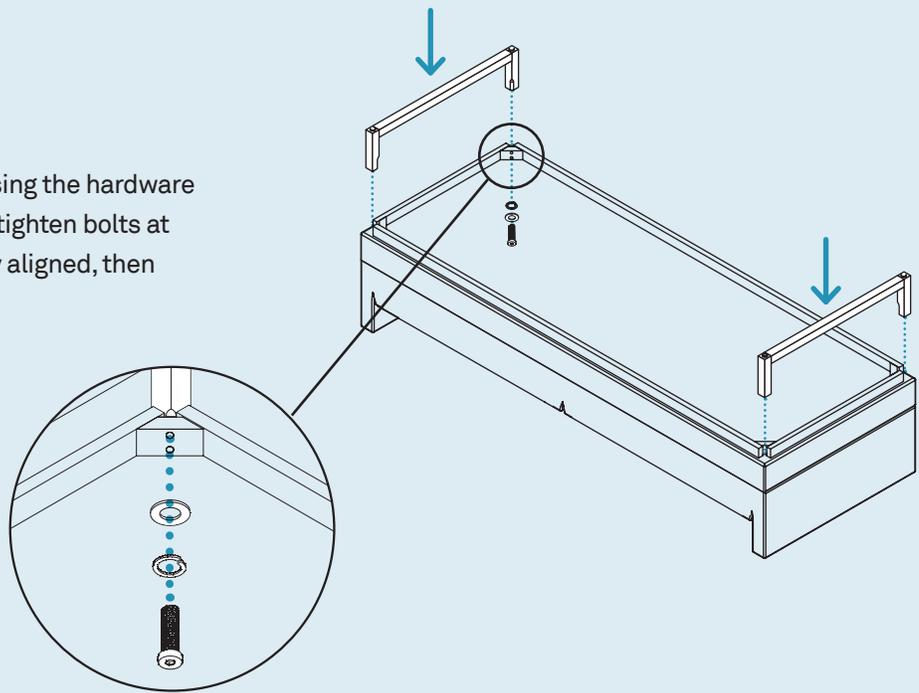

Pt. 3002 x 8



Pt. 3001 x 8



Pt. 1109 x 8




Pt. 9004 x 1

Step 02

ATTACH BACK CUSHIONS.


Carefully turn the sofa upright with the assistance of another individual. Place back cushions in place as shown.

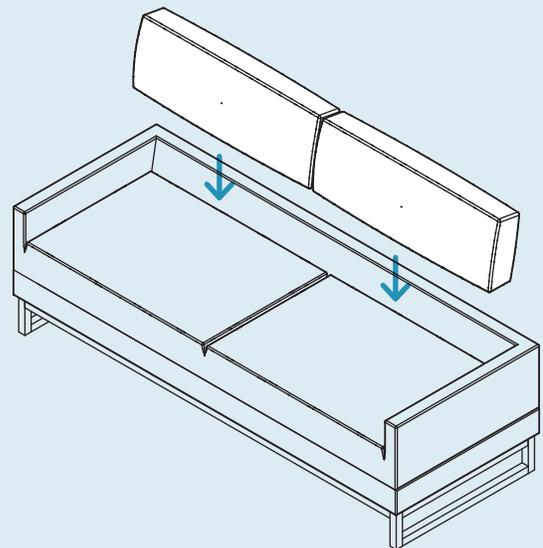

Step 03

CONVERT TO SLEEPER.

Convert the sofa into a sleeper by removing the back cushions and orienting the sofa as shown.

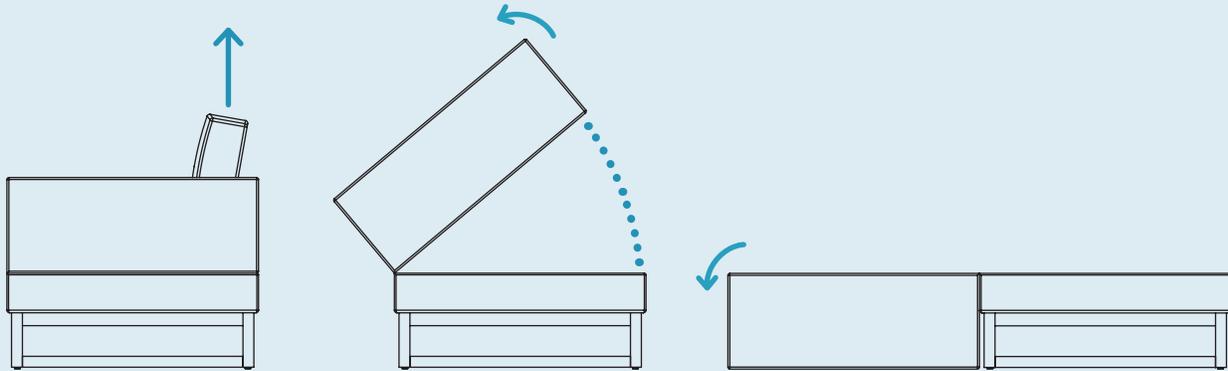

Additional Information

CLEAN

Vacuum your upholstery regularly. Clean wood base with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.