


Dodu Bed Collection

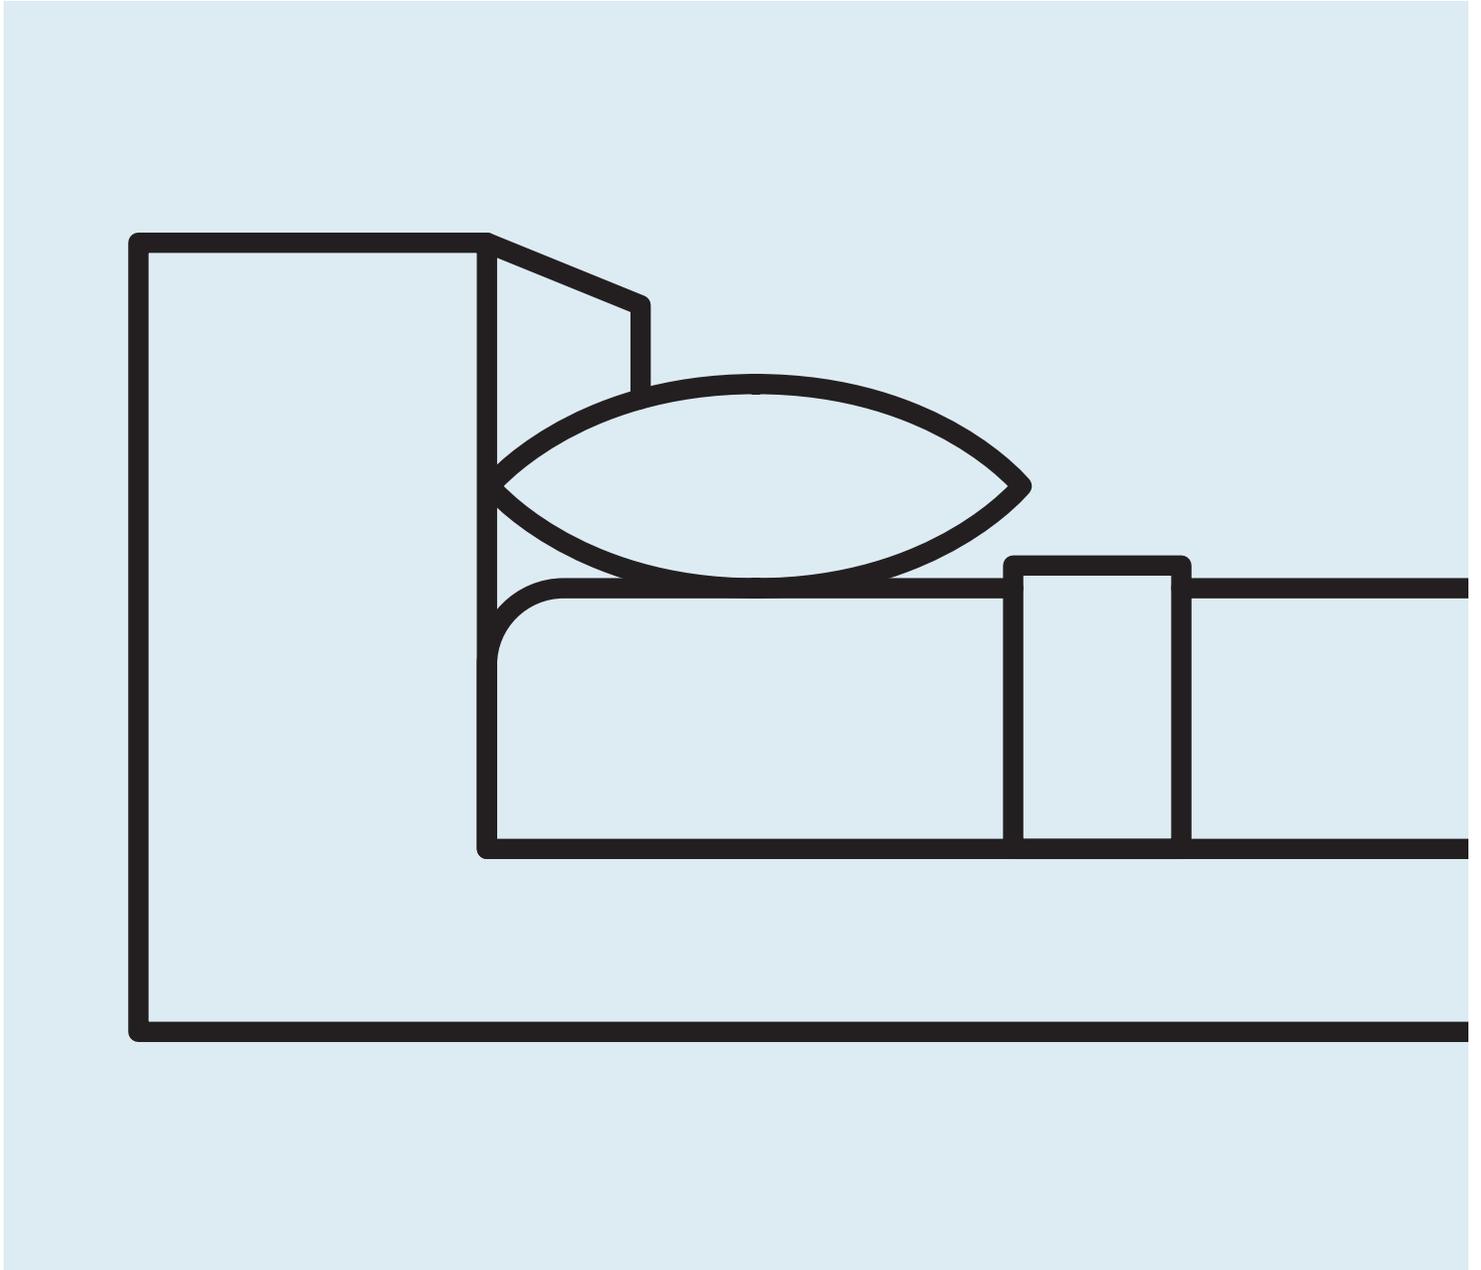

DESIGNED IN 2006

ASSEMBLY NOTES | REV 00




NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware



QTY 20

Pt. 3001



QTY 20

Pt. 3002




QTY 20

Pt. 1604




QTY 1

Pt. 9016

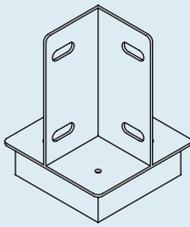


QTY 2

Front Corner Bracket

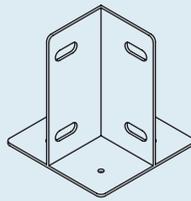

QTY 2

Rear Corner Bracket

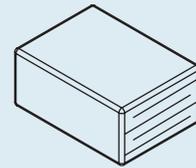


QTY 1

Slip Cover




QTY 1

Center Leg

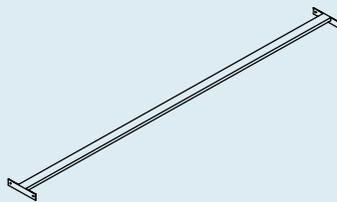


QTY 1

Center Rail

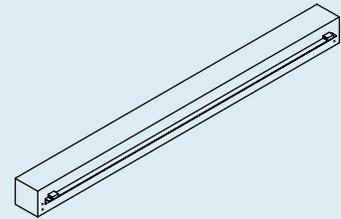


QTY 2

Side Rail

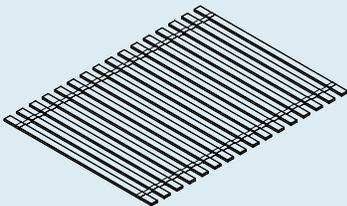


QTY 1

Slats

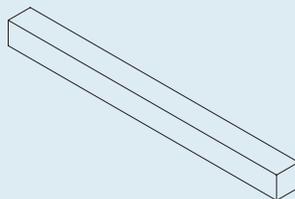

QTY 1

Footboard

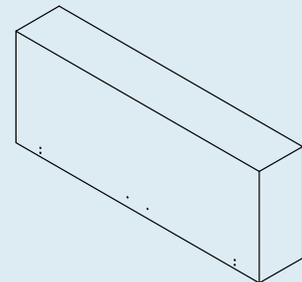

QTY 1


Headboard

Step 01

INSTALL CENTER LEG.

Assemble the bed on a soft, clean surface with the assistance of another individual.


Attach leg to center rail by threading it into place as shown.

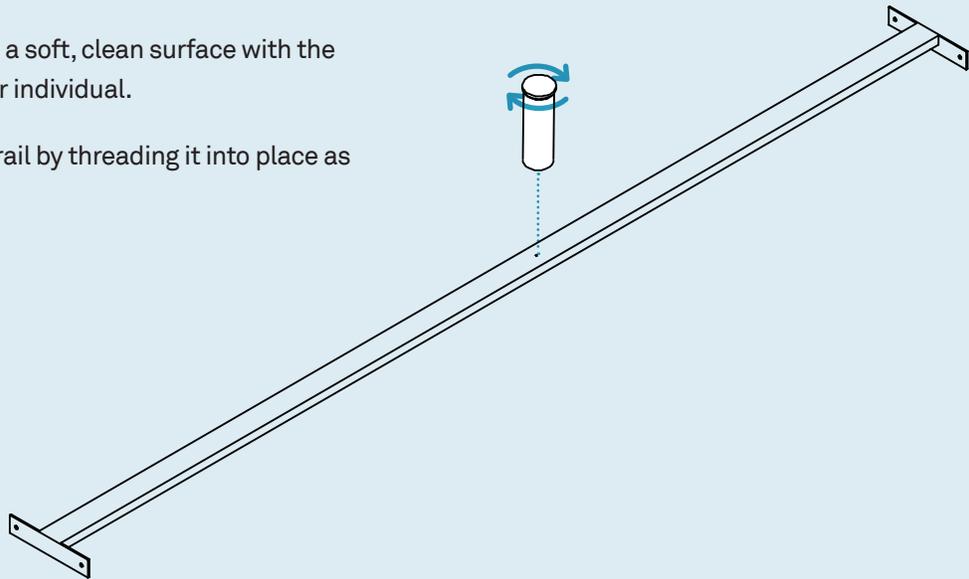

Step 02

ATTACH SIDE RAILS TO HEADBOARD AND FOOTBOARD.



Carefully align and push down on side rails to engage hooks into headboard and footboard.

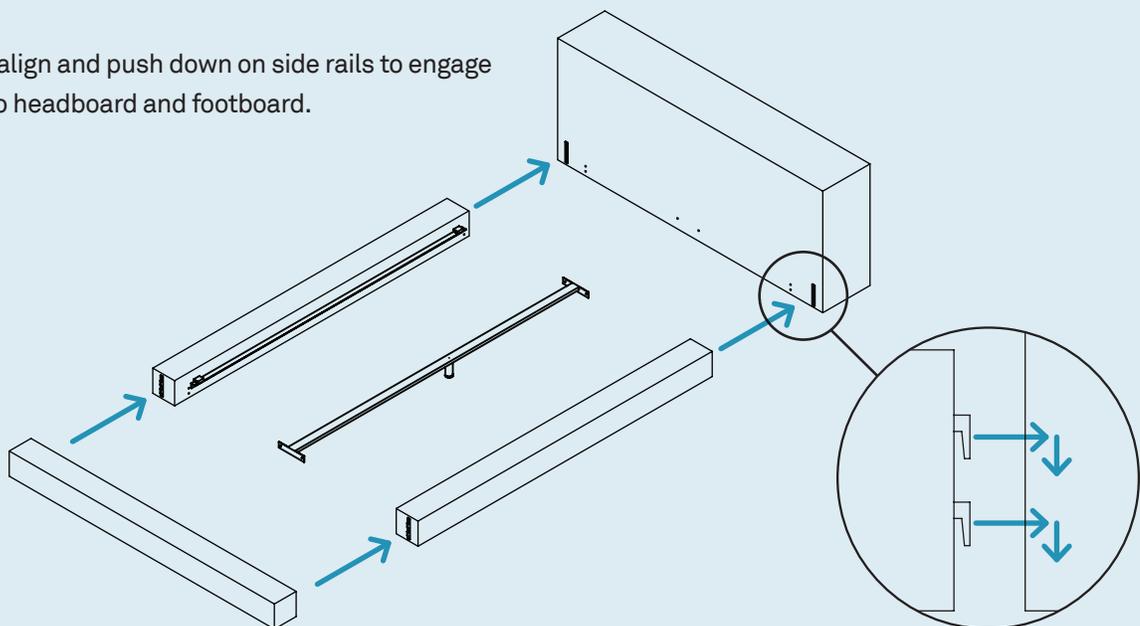

Step 03

SECURE HEADBOARD.

Secure headboard and center rail in place using provided hardware as shown. Do not fully tighten the hardware until all of the bolt locations are aligned.

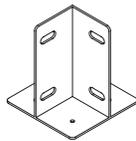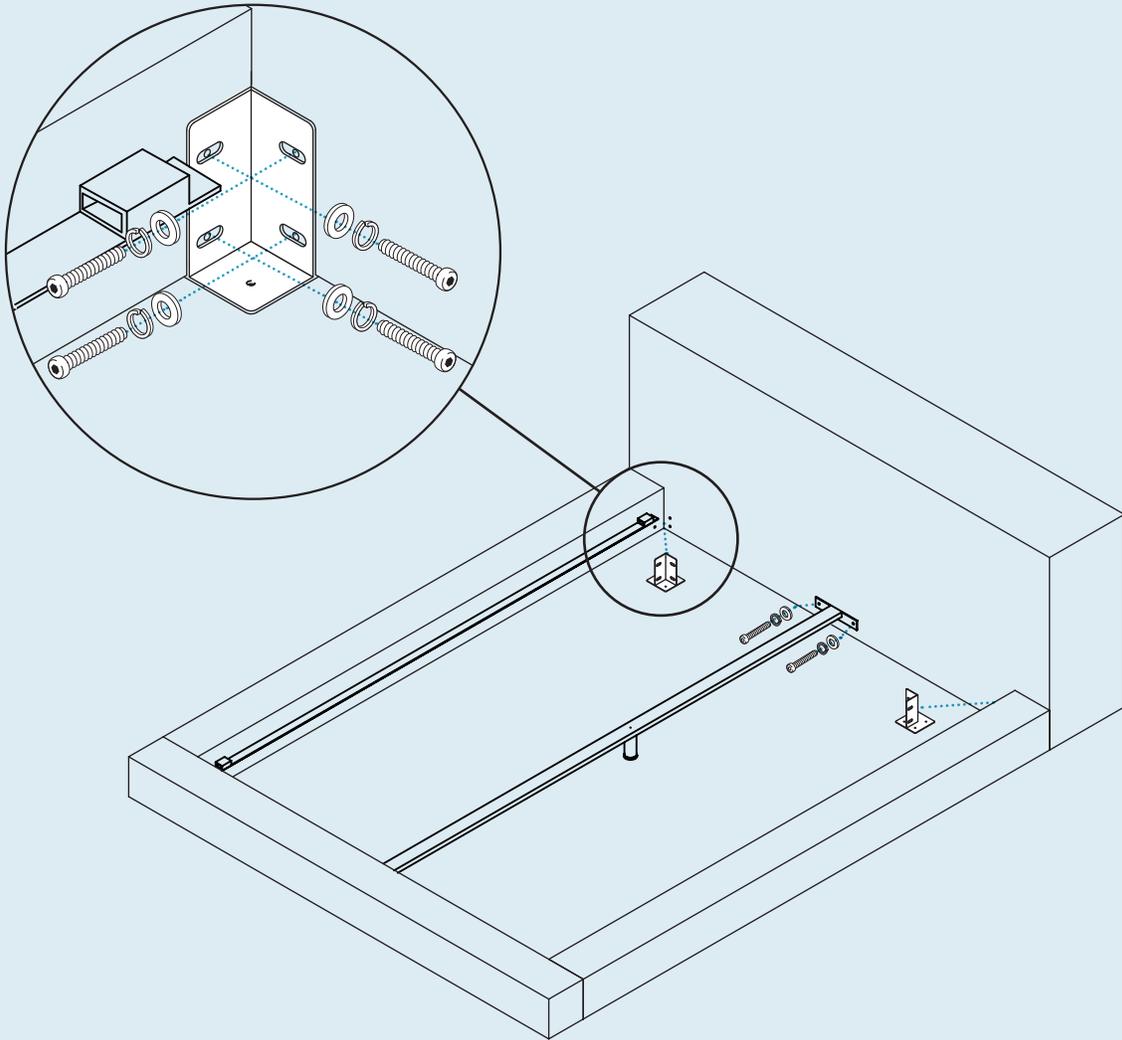

Rear Corner Bracket x 2



PT. 3001 x 10



PT. 3002 x 10



PT. 1604 x 10





PT. 9016 x 1

Step 04

SECURE FOOTBOARD.


Secure footboard and center rail in place using provided hardware as shown. Do not fully tighten the hardware until all of the bolt locations are aligned.

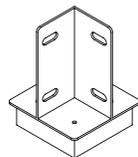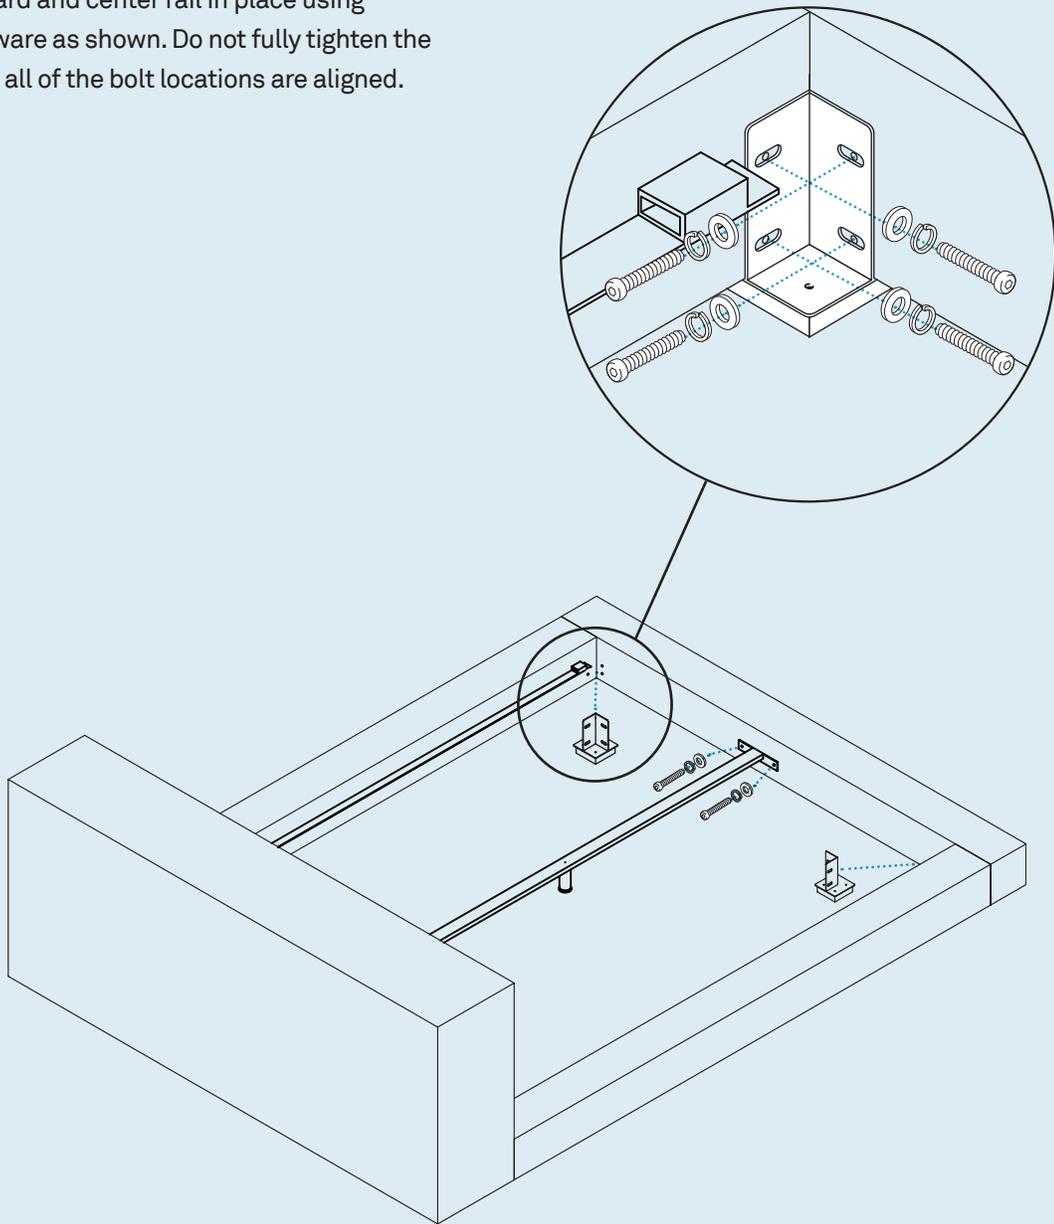

Front Corner Bracket x 2



PT. 3001 x 10



PT. 3002 x 10



PT. 1604 x 10




PT. 9016 x 1

Step 05

ATTACH SLIP COVER.


Starting at headboard, secure hook and loop fasteners onto frame. Continue toward footboard keeping edges smooth and in line with frame edges. Turn adjustable glide on center leg clockwise or counterclockwise as needed to level bed.

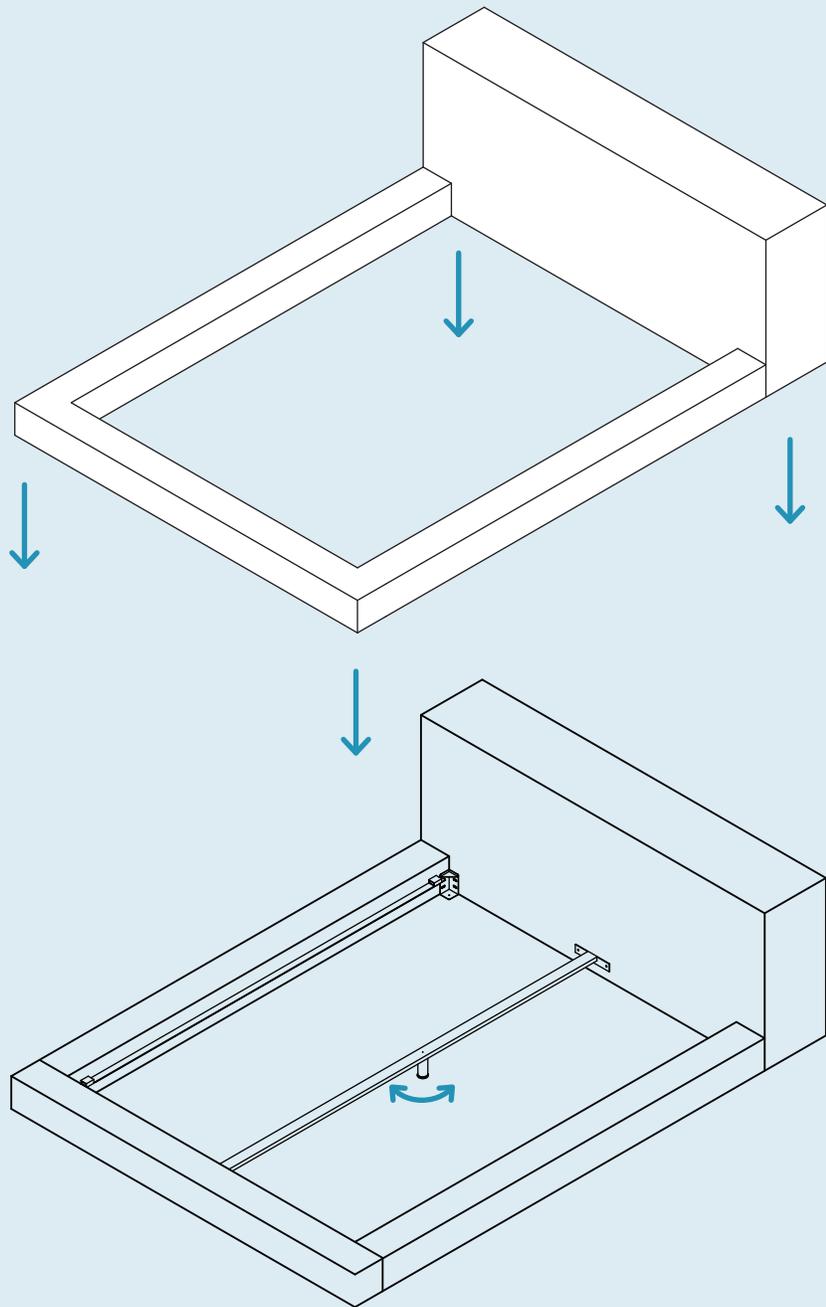

Step 06

INSTALL SLATS.

Starting at the headboard, unroll slats along frame. Ensure first and last slat are secured by metal blocking.

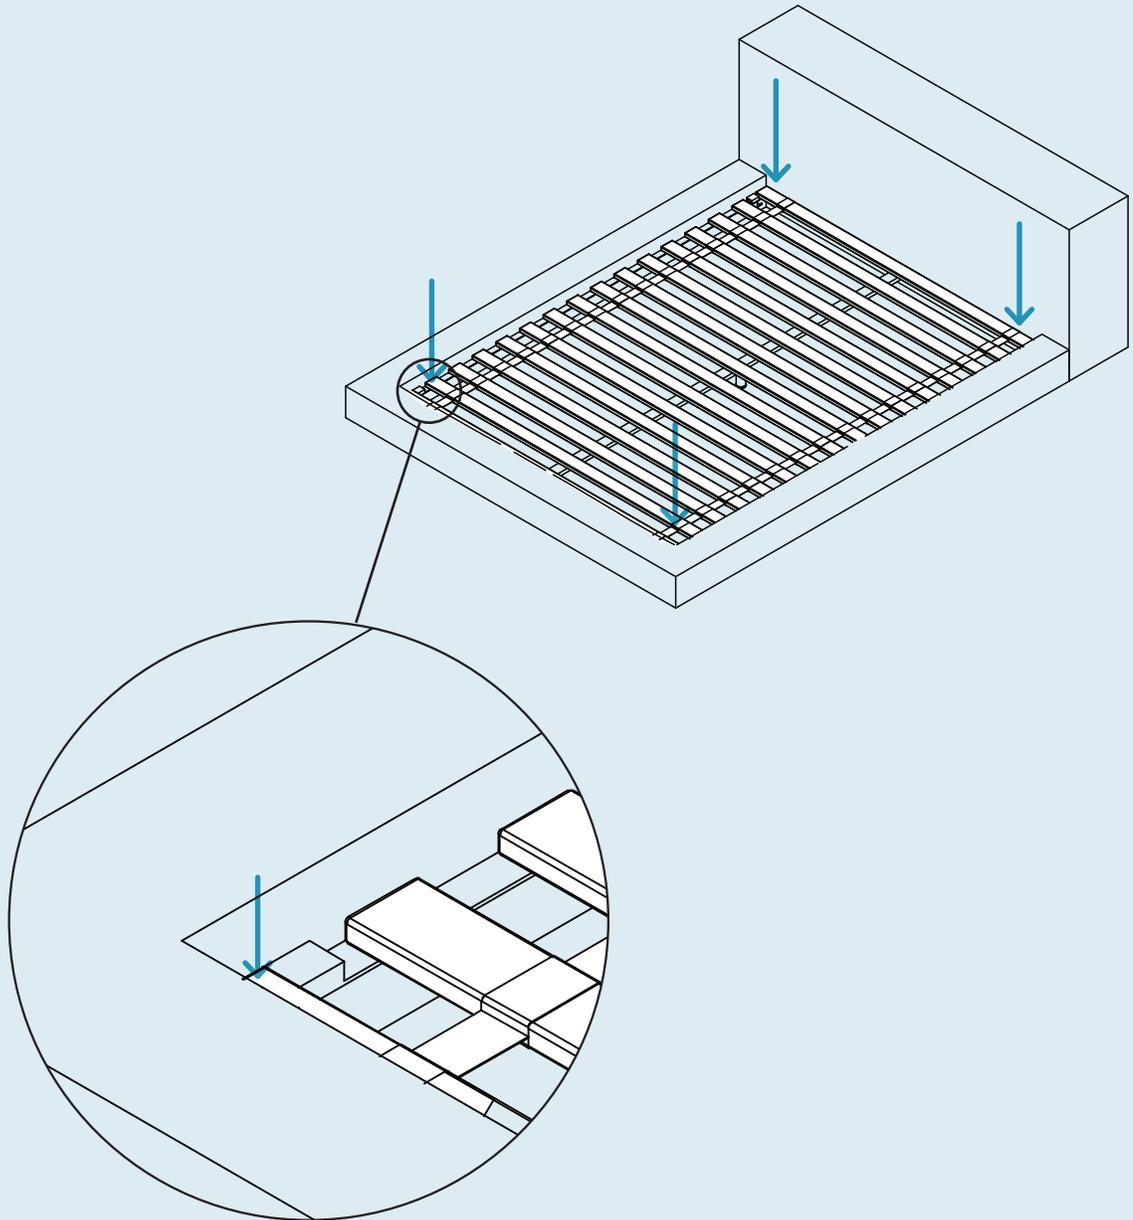

Additional Information

CLEAN

Vacuum your upholstery regularly.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

