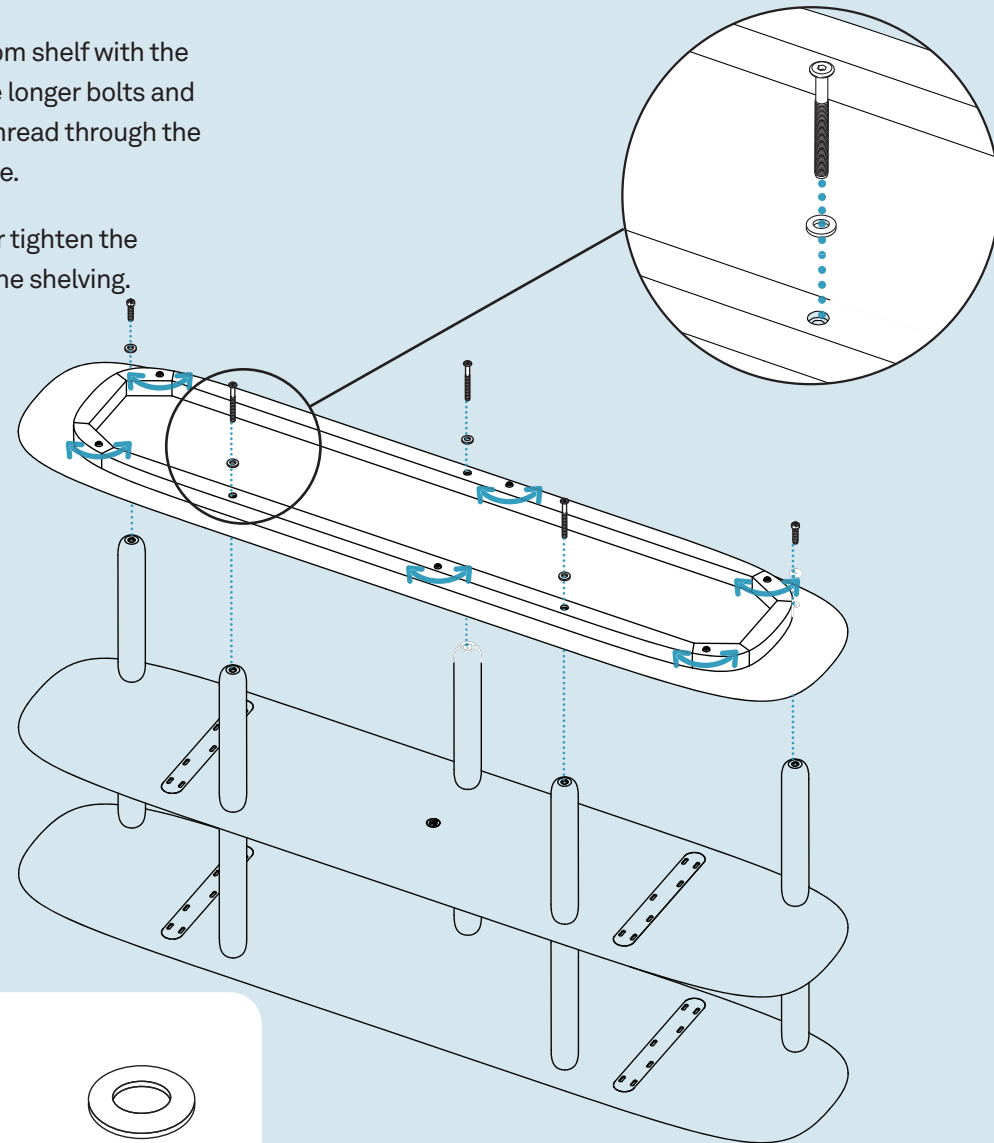


Step 03

ASSEMBLE THE BOTTOM SHELF

Align the holes in the bottom shelf with the threaded uprights. Use the longer bolts and washers where the bolts thread through the thicker sections of the base.

Once assembled, loosen or tighten the adjustable glides to level the shelving.



PT 1677 x 3



PT 1098 x 2



PT 3007 x 5

Additional Information



CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

Driftgood Shelving

DESIGNED IN 2024

ASSEMBLY NOTES | REV 01

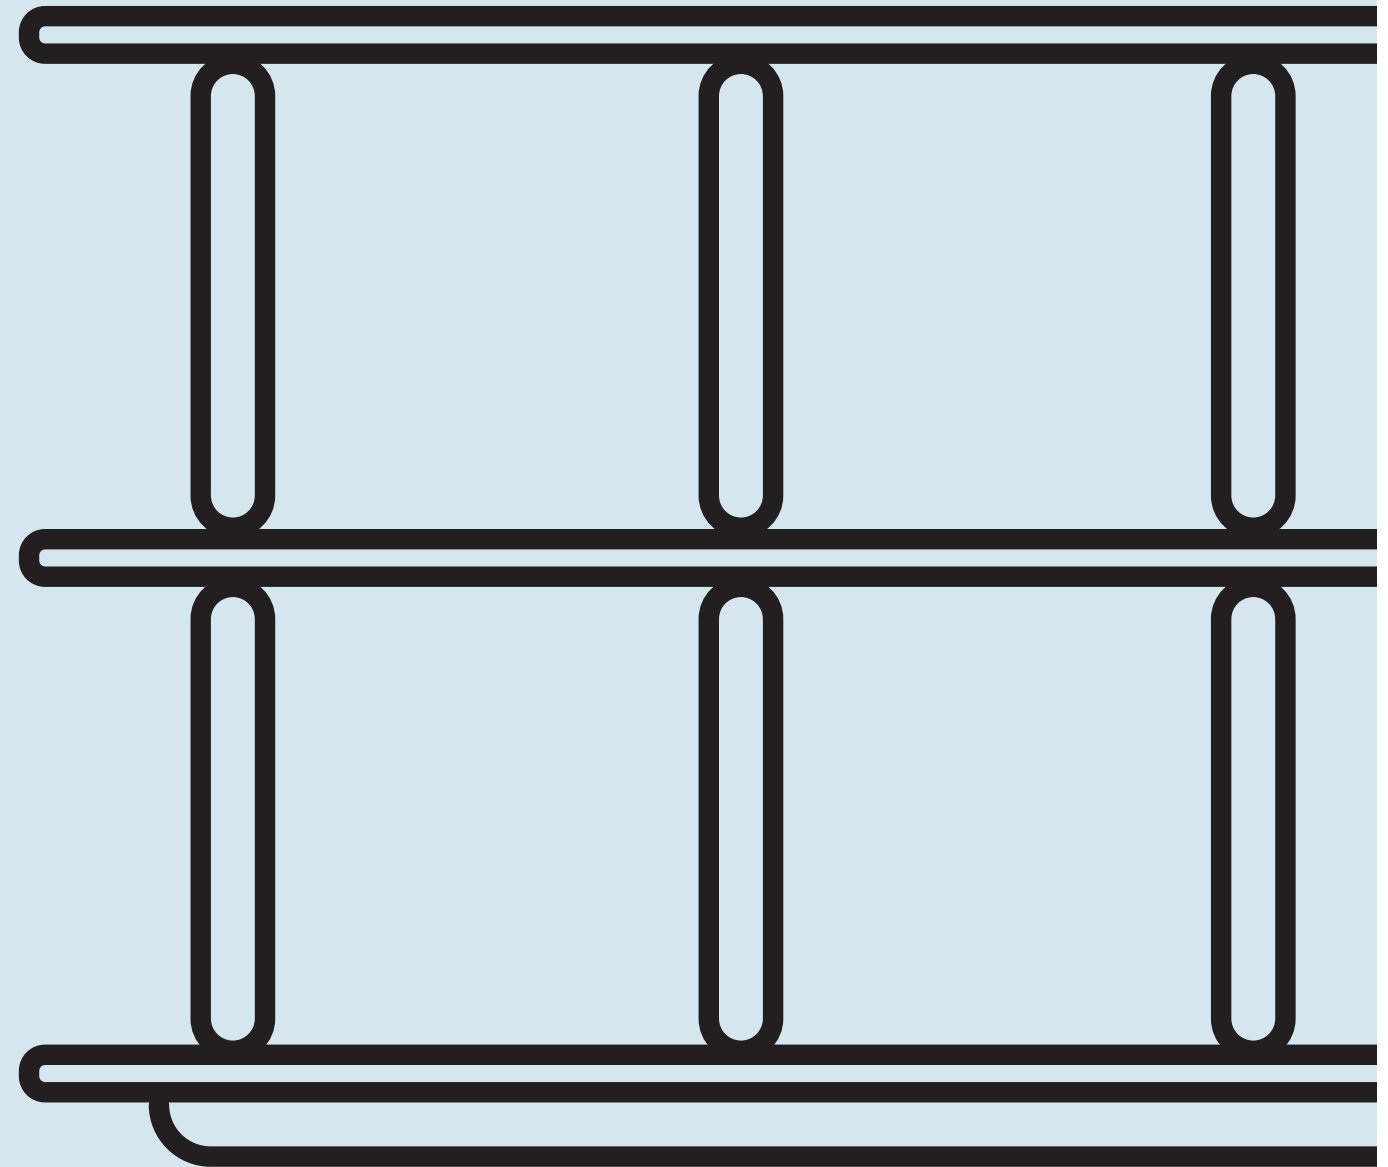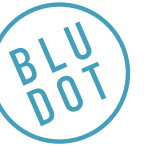

NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

@BLUDOT




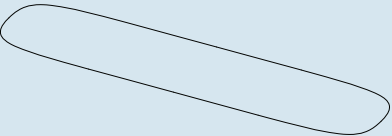
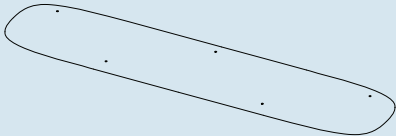
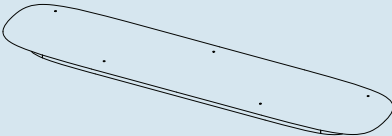
We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.



BLU DOT DESIGN & MANUFACTURING, INC.

DESIGNED IN MINNEAPOLIS, MN



Parts & Hardware

		
QTY 1	QTY 3	QTY 2
Pt. 9001 Allen Wrench	Pt. 1677 M8x75mm Bolt	Pt. 1685 M8x40mm Bolt
		
QTY 5	QTY 5	QTY 5
Pt. 3007 M8 Flat Washer	Bottom Upright	Top Upright
		
QTY 1	QTY 1	QTY 1
Top Shelf	Middle Shelf	Bottom Shelf

Step 01

ASSEMBLE THE TOP SHELF

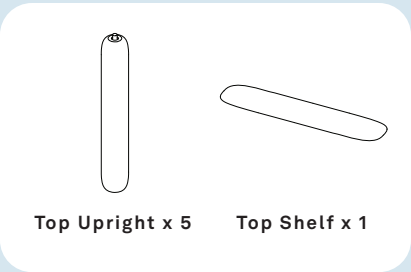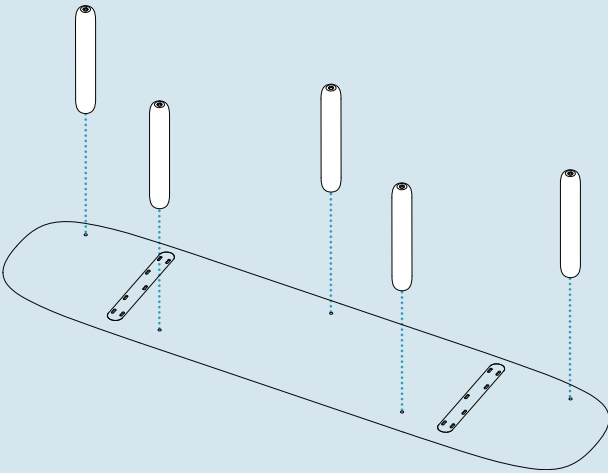Place the top shelf upside down on a soft surface. Thread the uprights with short studs into the threaded inserts on the underside.



Step 02

ASSEMBLE THE MIDDLE SHELF

Align the holes in the middle shelf with the threaded uprights. Thread the uprights with long studs through the middle shelf and tighten until hand tight.

