
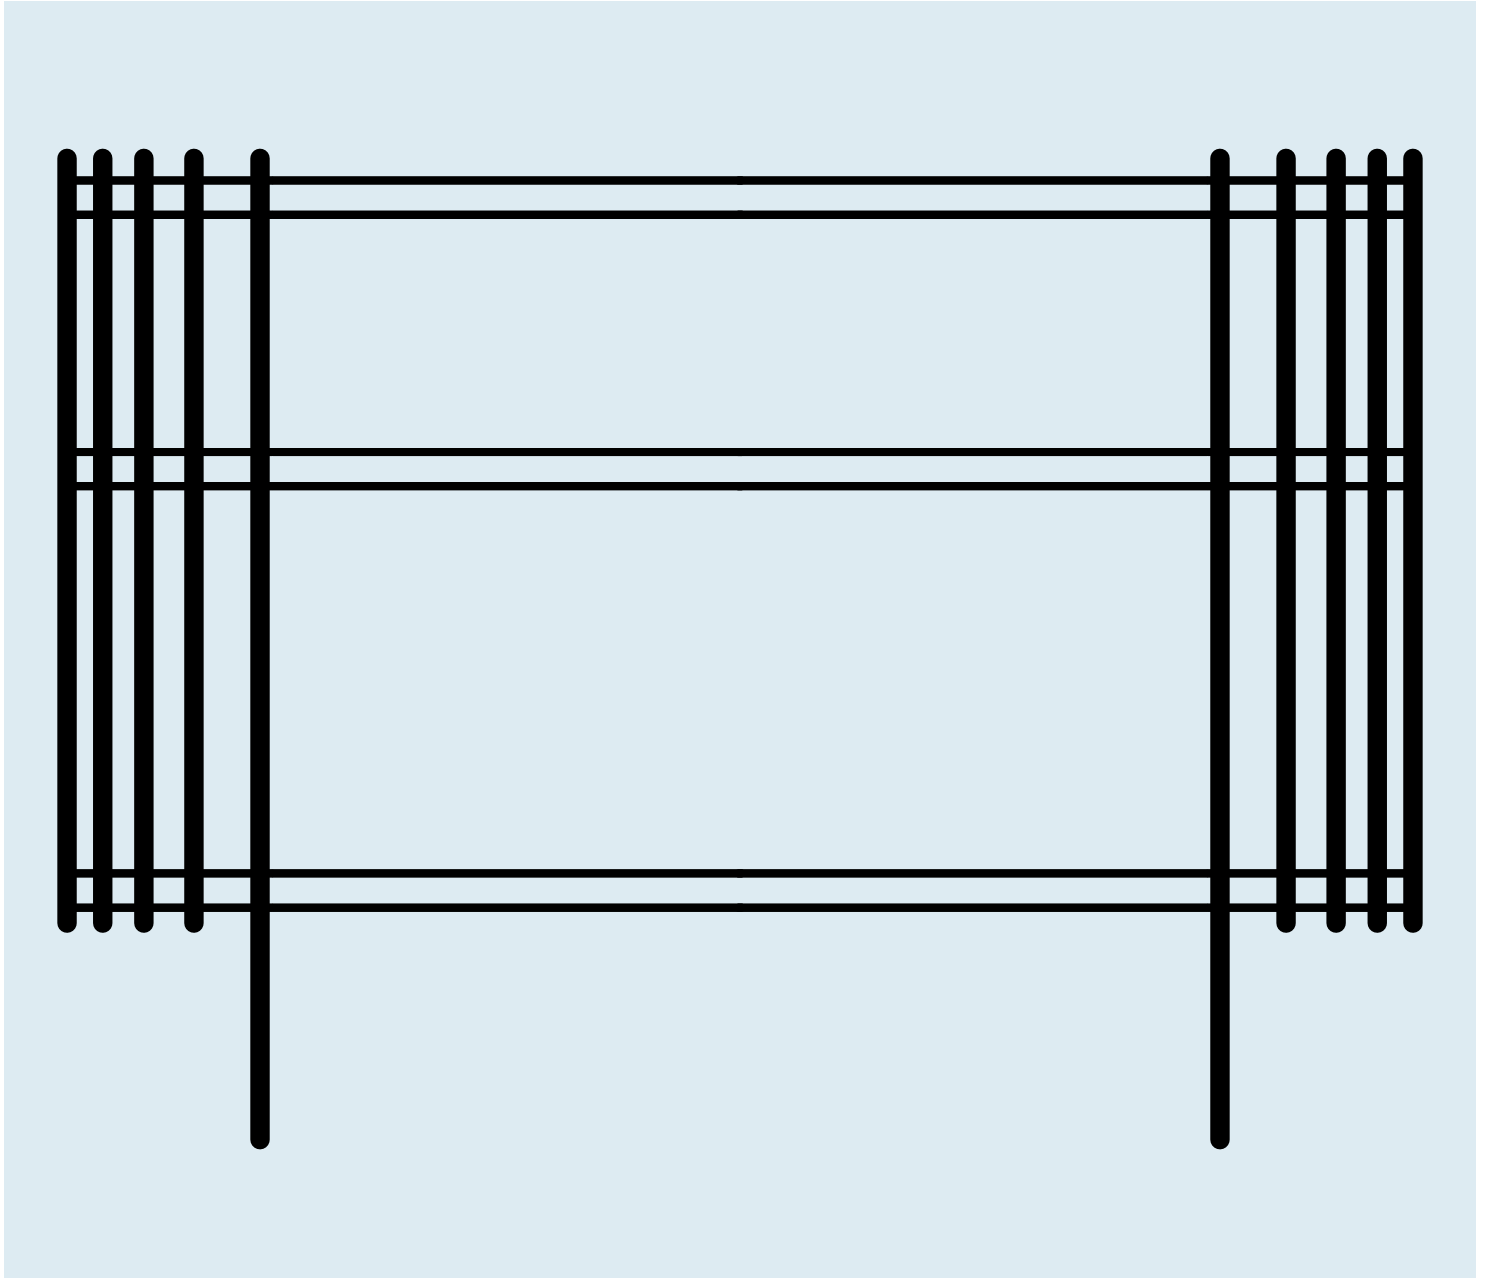


Forum Console

DESIGNED IN 2024

ASSEMBLY NOTES | REV 00

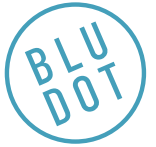


NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 18

Pt. 1083
M6 x 15mm Bolt




QTY 18

Pt. 3001
M6 Lock Washer




QTY 18

Pt. 3002
M6 Flat Washer

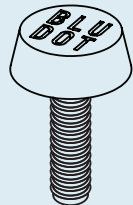


QTY 4

Pt.4022
Adjustable Glide

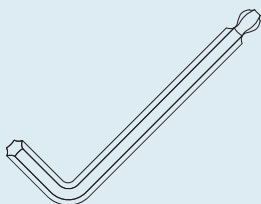


QTY 1

Pt. 9017
M6 Allen Key

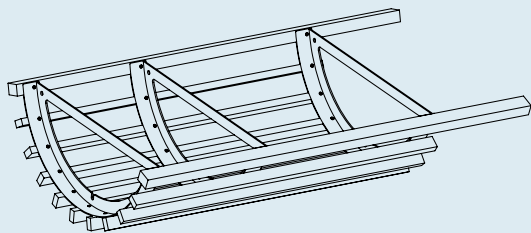

QTY 2

Side support

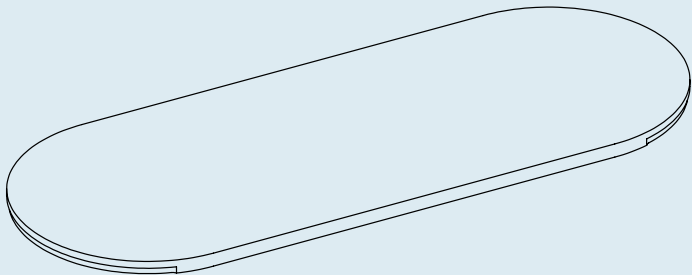




QTY 3

Shelves


Step 01

ASSEMBLING ONE SIDE


Lay one side support on a soft surface, then align the bottom shelf and thread the bolts in by hand to start. Repeat for the other shelves.

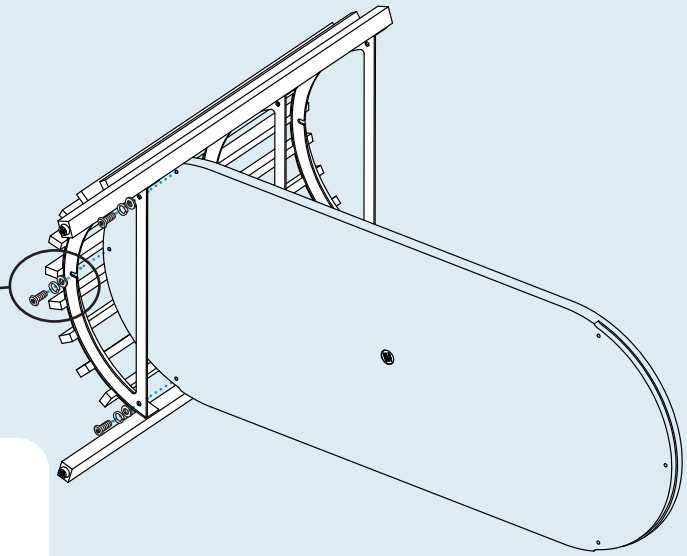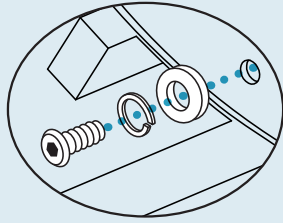

PT. 1083 x 9



PT. 3001 x 9






PT. 3002 x 9


Step 02

ATTACHING THE REMAINING SIDE


Align the remaining side support and thread bolts in by hand. Once both sides are attached, tighten the bolts until snug.

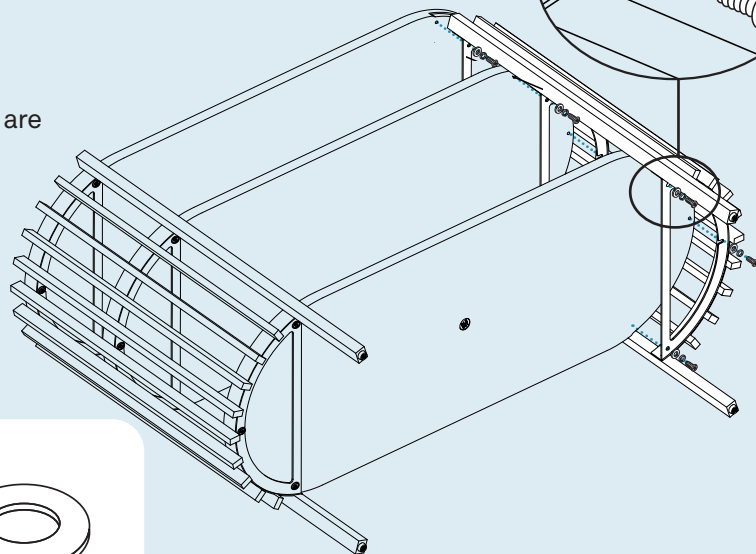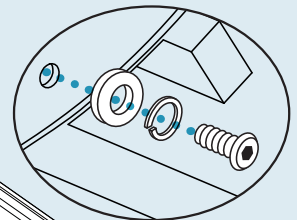

PT. 1083 x 9



PT. 3001 x 9





PT. 3002 x 9

Step 03

LEVELING THE GLIDES

Tighten or loosen the adjustable glides to level the console.

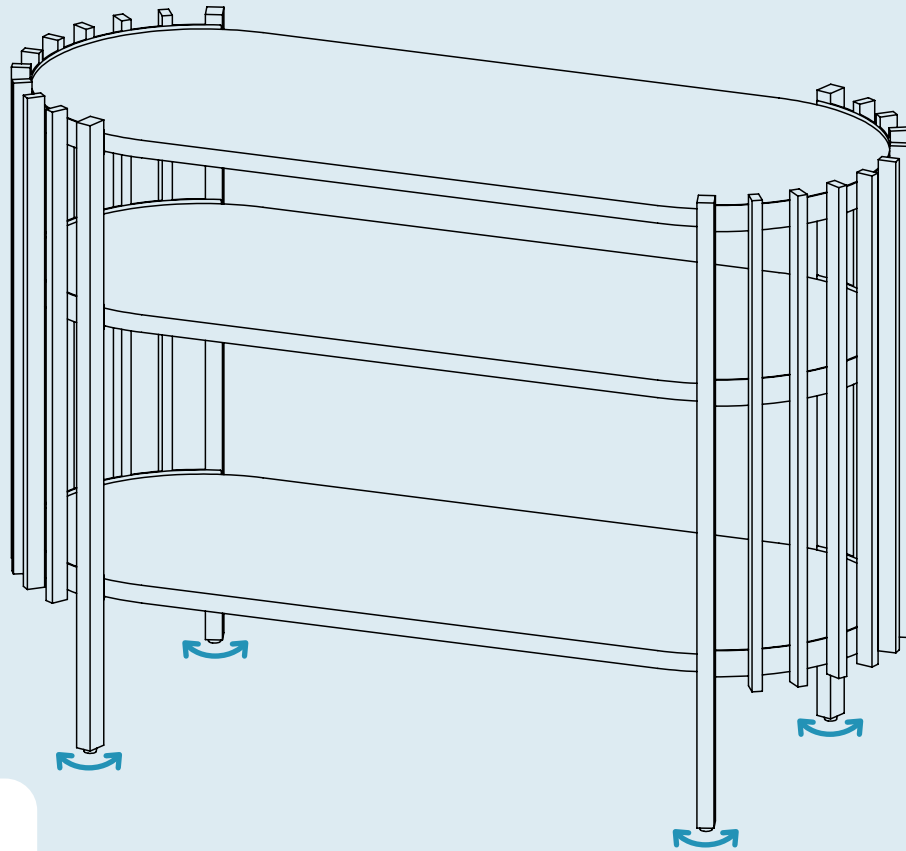

PT. 4022 x 4

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

