


Hitch Add-On Kit

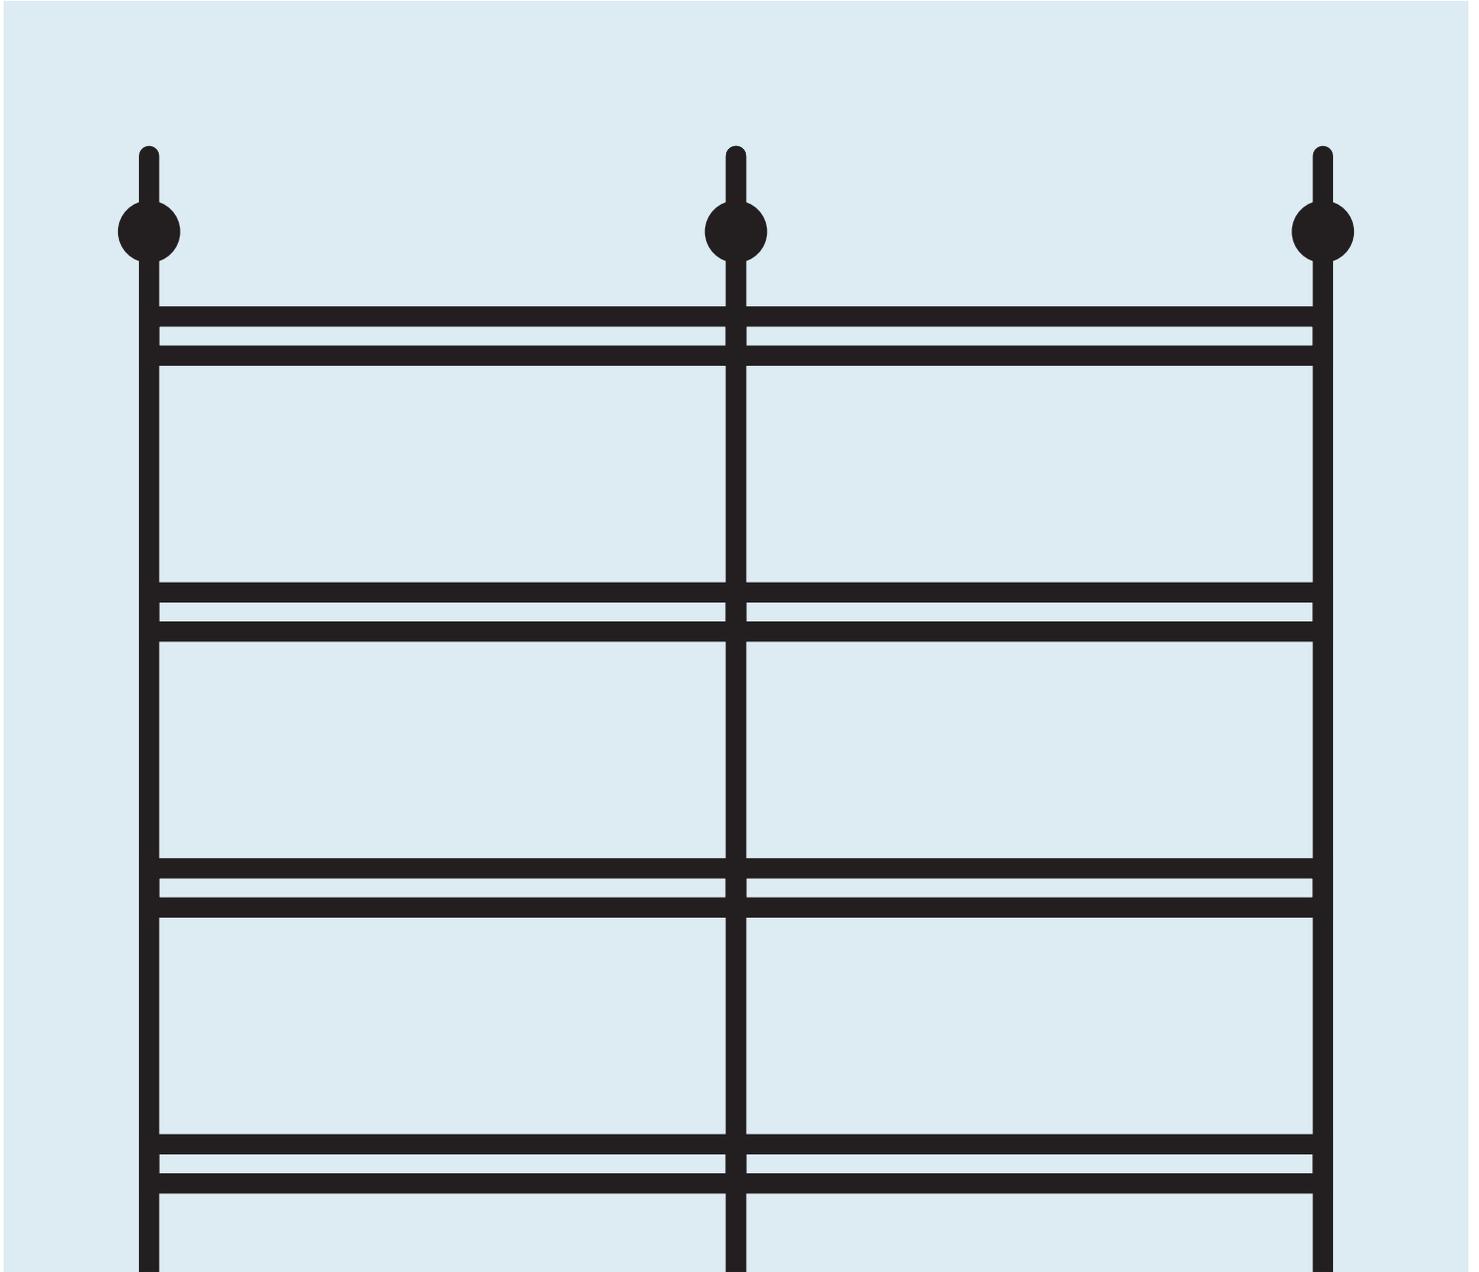

DESIGNED IN 2013

ASSEMBLY NOTES | REV 00




ABOUT TIME YOUR WALLS GOT HITCHED.

Powder coated uprights and wood shelves make you the master of your own book case destiny. Single units stand alone. Gang up multiples to create mass appeal.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware

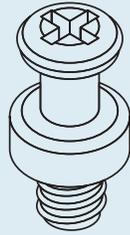

QTY 16*


Pt. 5021

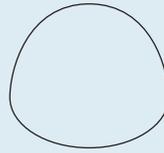

QTY 2


Pt. 8020

*Bookcase ships with x20 Pt 5021

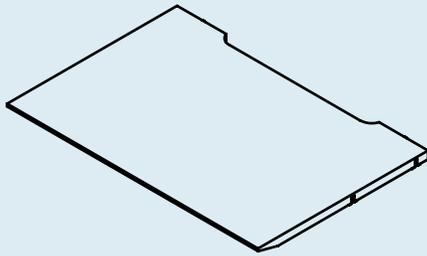


QTY 1†

Desk Panel

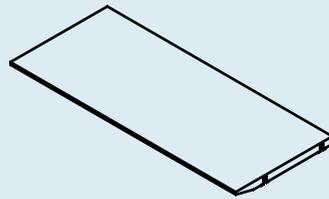

QTY 3†

Shelf Panel



QTY 1

Center Frame



† Bookcase ships x5 Shelf Panels and x0 Desk Panels.

Step 01

ASSEMBLING THE CENTER FRAME.

Using a phillips head screwdriver, attach hardware to the center frame as shown.

NOTE: The add-on kit comes with a middle leg and utilizes the hitch leaning starter kit legs. If previous hitch starter kit is assembled, please disassemble before continuing to the next step.

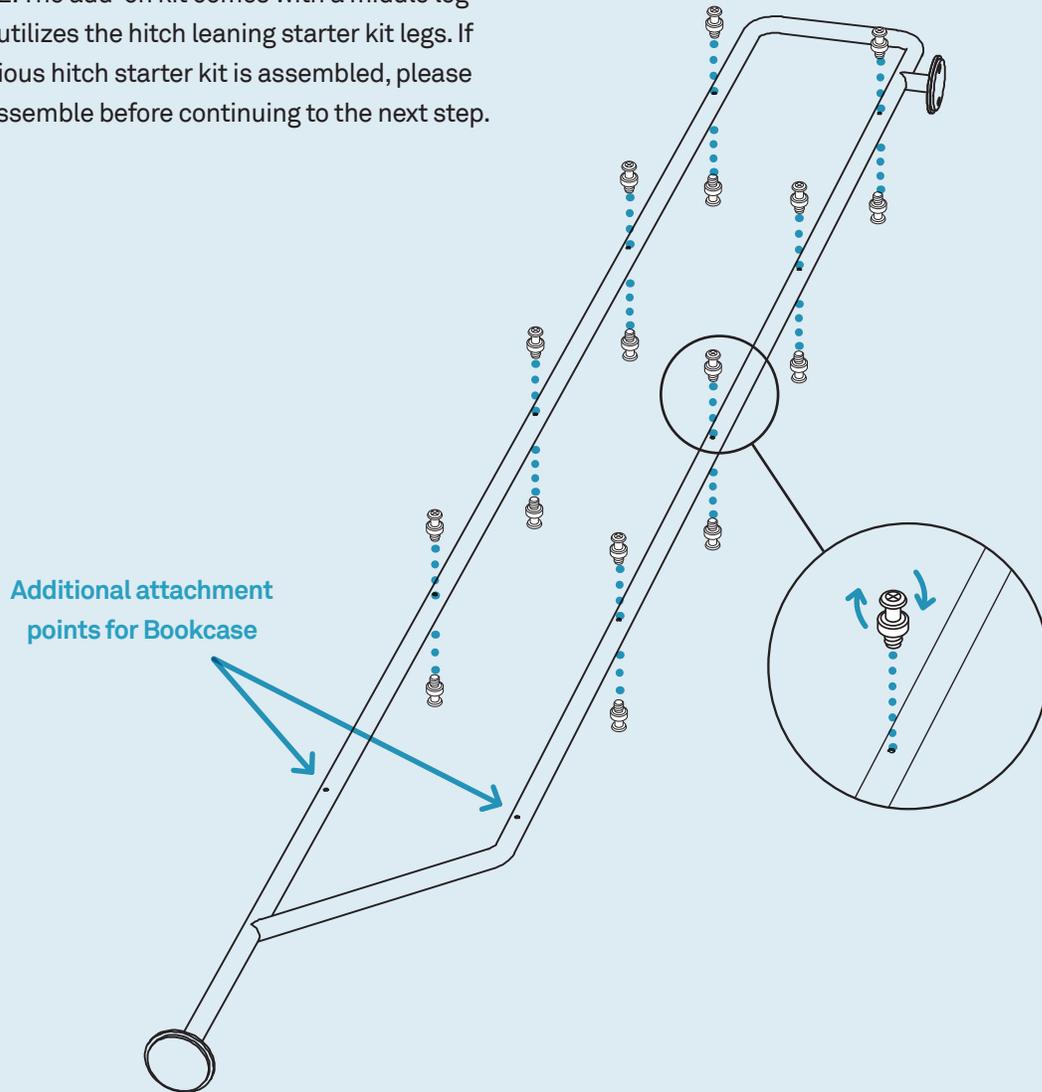


PT. 5021 x 16*

Step 02

ATTCHING TO A WALL.

Space the frames as shown below. Use a pencil and the pre-attached brackets to mark the attachment hardware locations. Use the hardware best suited to your particular wall to secure the product.


NOTE: Wall attachment hardware is not provided. We recommend consulting your local hardware professional for the attachment hardware best suited to your particular wall.

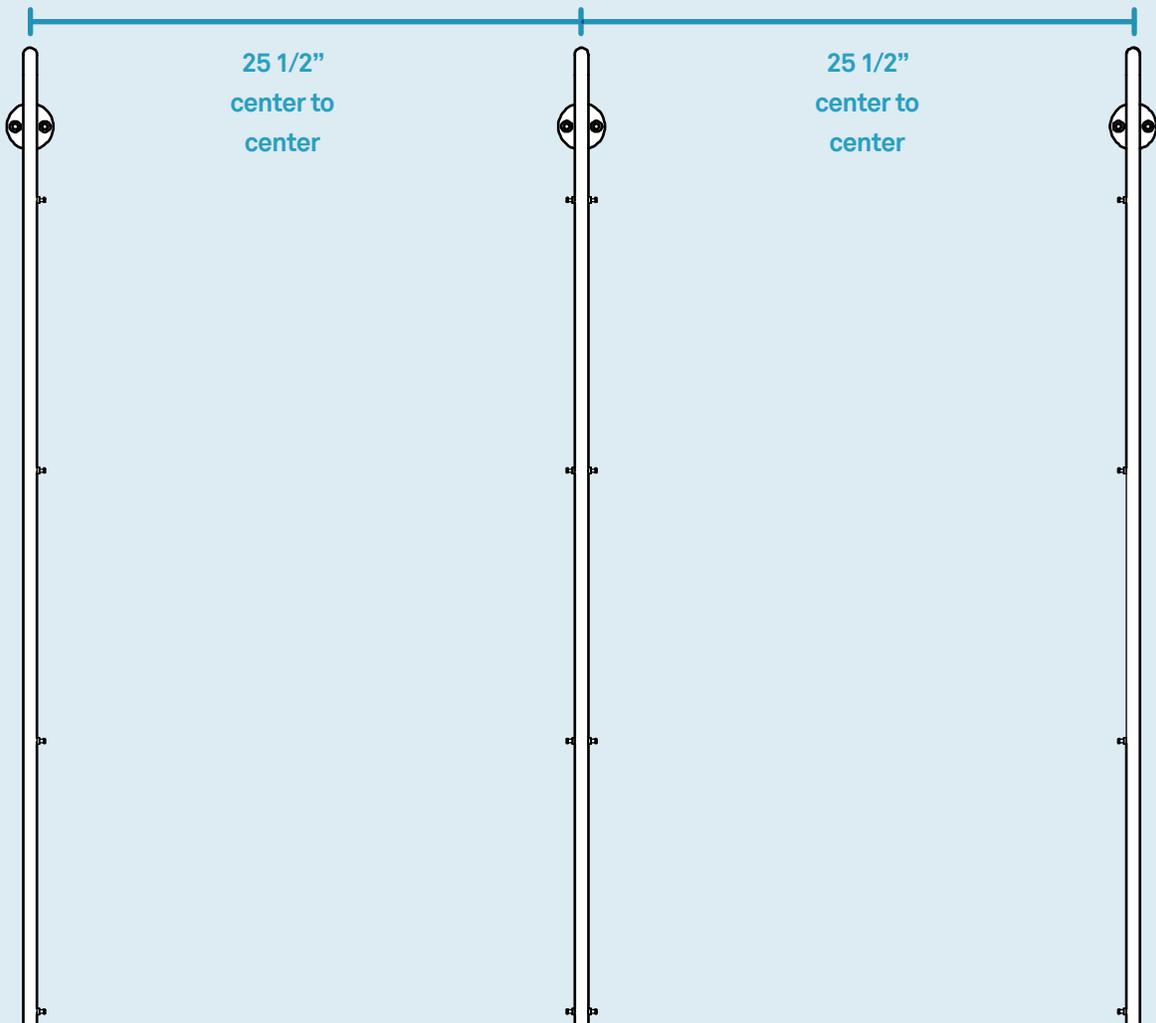



Step 03

ATTACHING THE SHELVES.

Attach Pt 8020 to the back face of the lowest shelf as shown. Align the pre-attached shelf hardware with PT. 5021. Slide down shelves and tighten the shelf hardware as shown. Repeat for the remaining shelves.

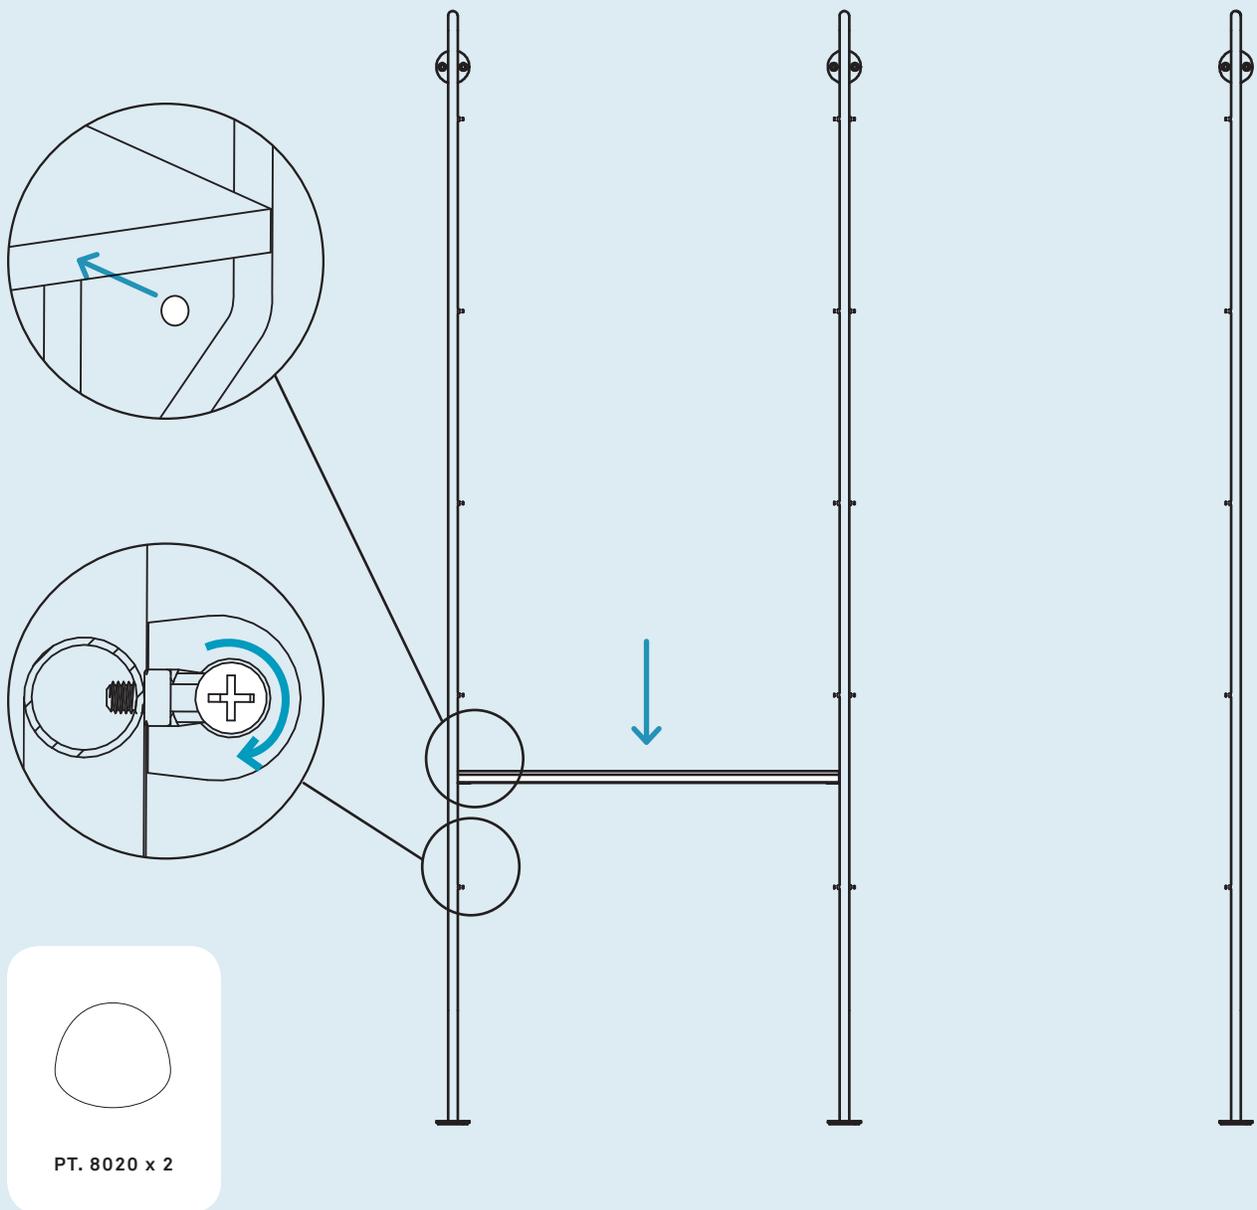





Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

