


Hunker Bed

DESIGNED IN 2016

ASSEMBLY NOTES | REV 02

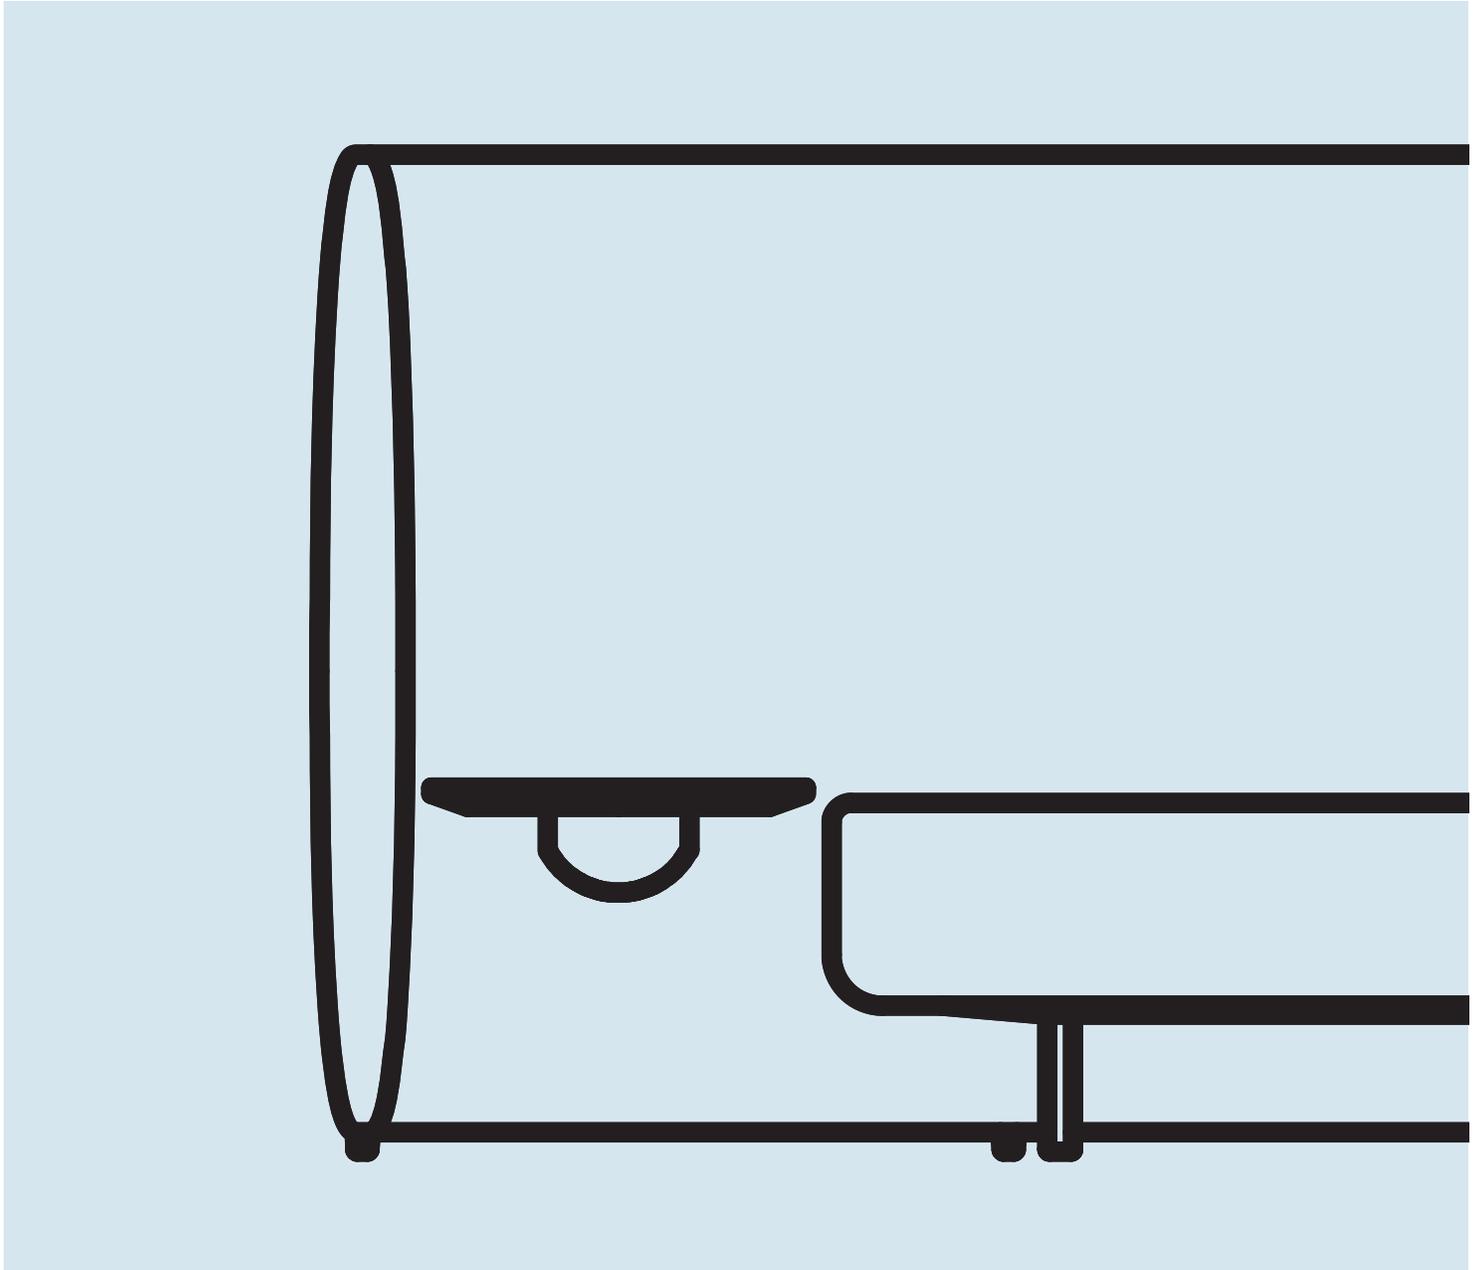

HUNK A HUNK OF BURNING LOVE.

Surround yourself with serenity with Hunker. Integrated nightstands team up with an enveloping headboard providing a safe space for all your nocturnal endeavors.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 8

Pt. 1679



QTY 8

Pt. 3005




QTY 8

Pt. 3007




QTY 14

Pt. 1678



QTY 20

Pt. 3001




QTY 20

Pt. 3002




QTY 6

Pt. 1603

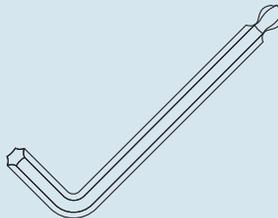


QTY 1

Pt. 9016

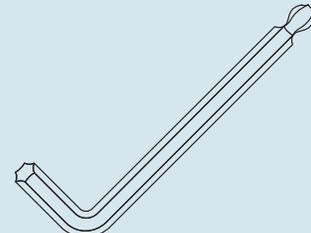

QTY 1


Pt. 9017

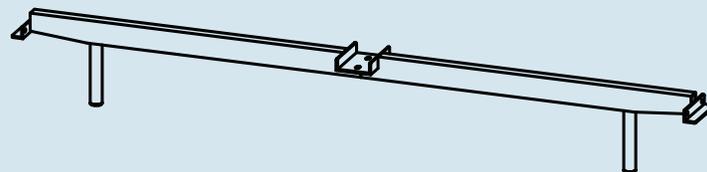

QTY 1


Footboard Rail

Parts & Hardware

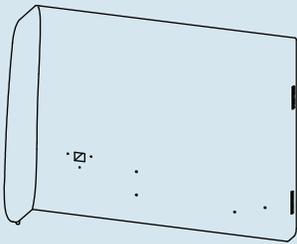

QTY 1

Headboard - Left

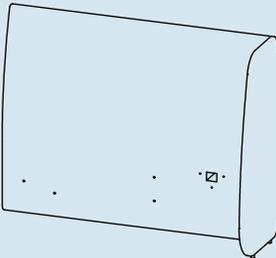


QTY 1

Headboard - Right




QTY 1

Ledger Board

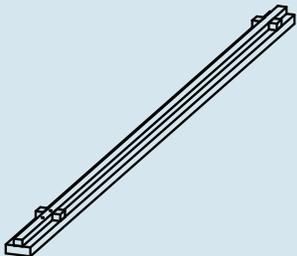


QTY 1

Center Rail

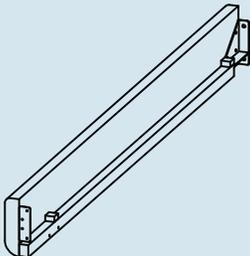

QTY 1

Side Rail - Left

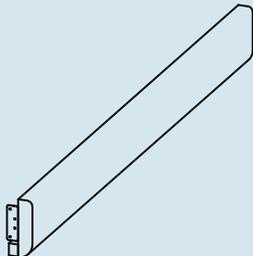


QTY 1

Side Rail - Right



QTY 1

Footboard

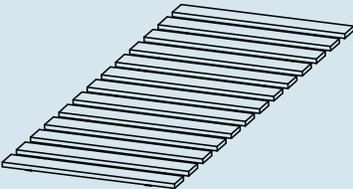

QTY 2

Slats



QTY 2

Nightstand Bracket



QTY 2

Nightstand Panel



QTY 1

Center Foot




QTY 1

Slipcover

Step 01

ASSEMBLE HEADBOARD.

Place headboard sections on their back. With 2 people assemble the headboard as shown using the pre-attached lock tabs.

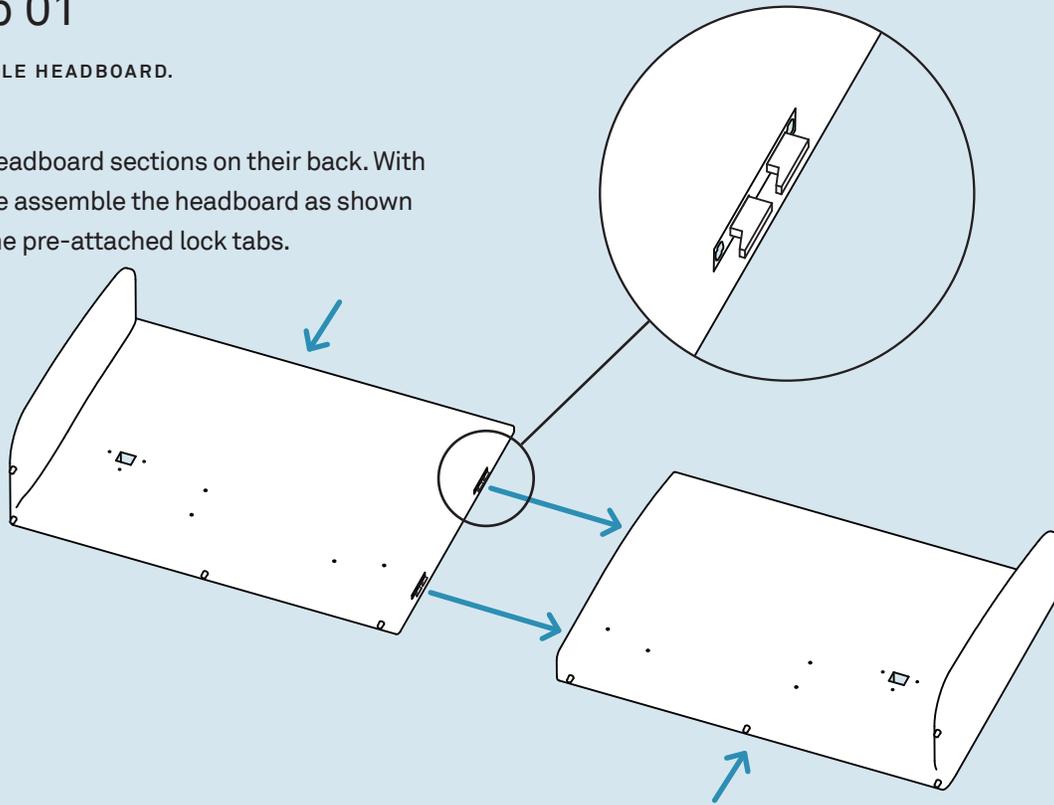

Step 02

ATTACH LEDGER BOARD.

Attach the ledger board as shown using the provided hardware.




PT. 1679 x 4




PT. 3005 x 4



PT. 3007 x 4

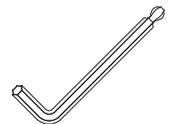

PT. 9017 x 1

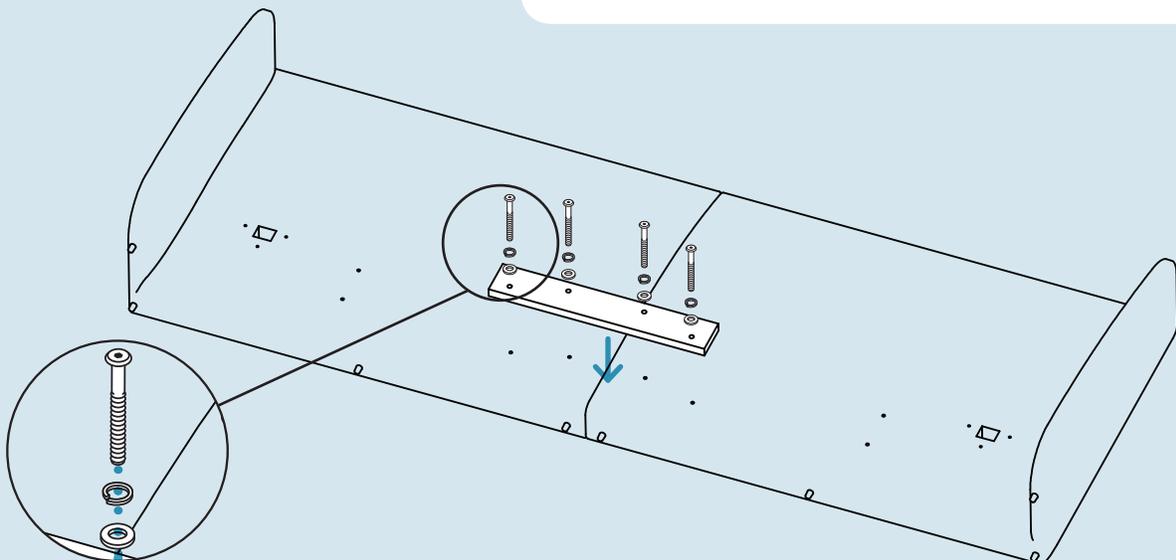


Step 03

ASSEMBLE CENTER SUPPORT.

Assemble the center support as shown using the provided hardware.

NOTE: The called out attachment points provide adjustability during step 05.

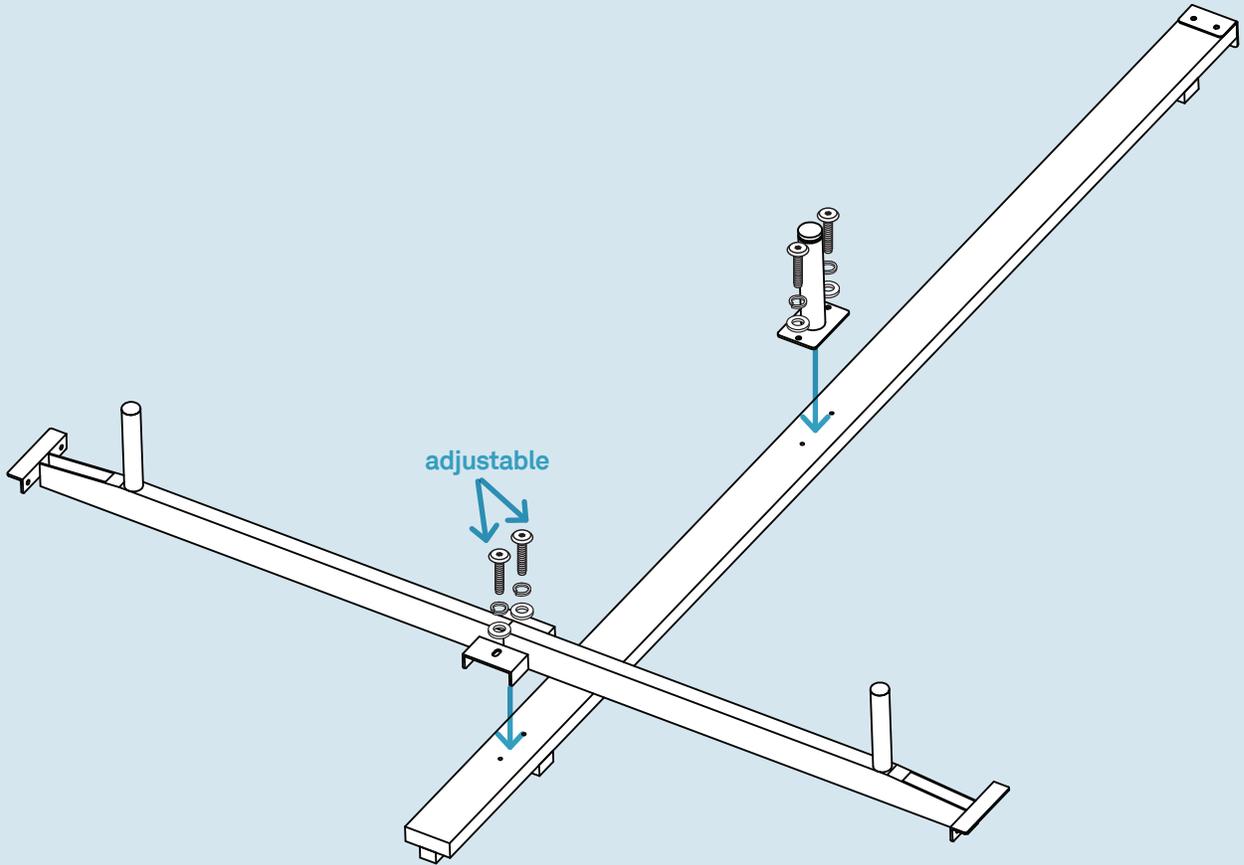

PT. 1678 x 4



PT. 3001 x 4



PT. 3002 x 4




PT. 9016 x 1

Step 04

ATTACH CENTER SUPPORT.

With 2 people, place the headboard upright. Attach center support to headboard using the pre-attached drop-in connector.

NOTE: Move the side rails into position as shown on the floor to aid in step05 assembly.



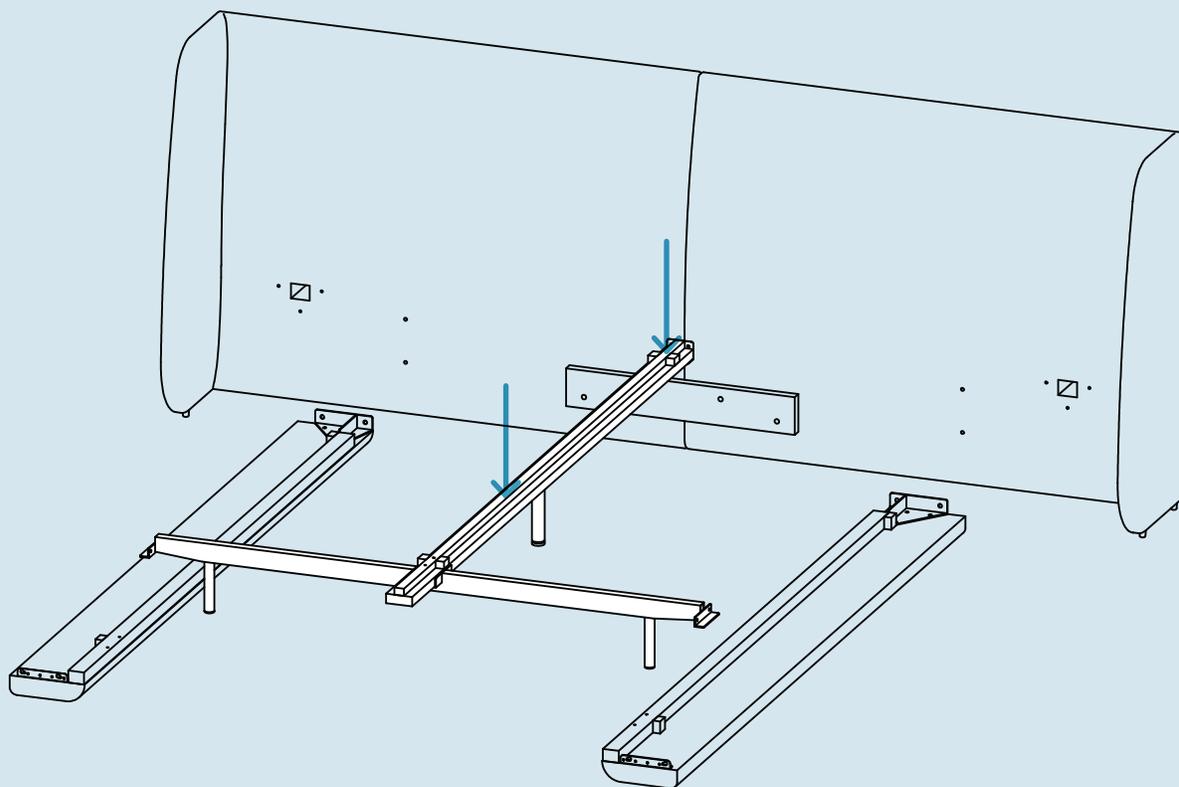


Step 05

ATTACH SIDE RAILS.

Attach the side rails as shown using the provided hardware.


NOTE: The called out attachment points can be temporarily loosened to aid in center support attachment. Fully tighten all bolts before moving to step06.

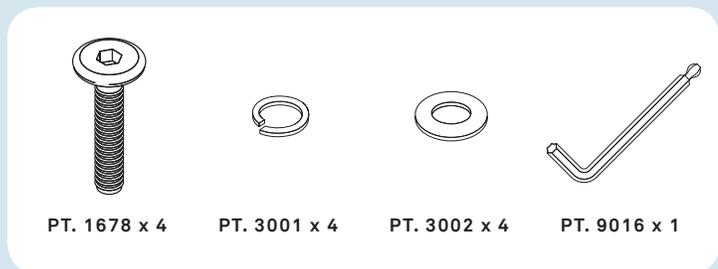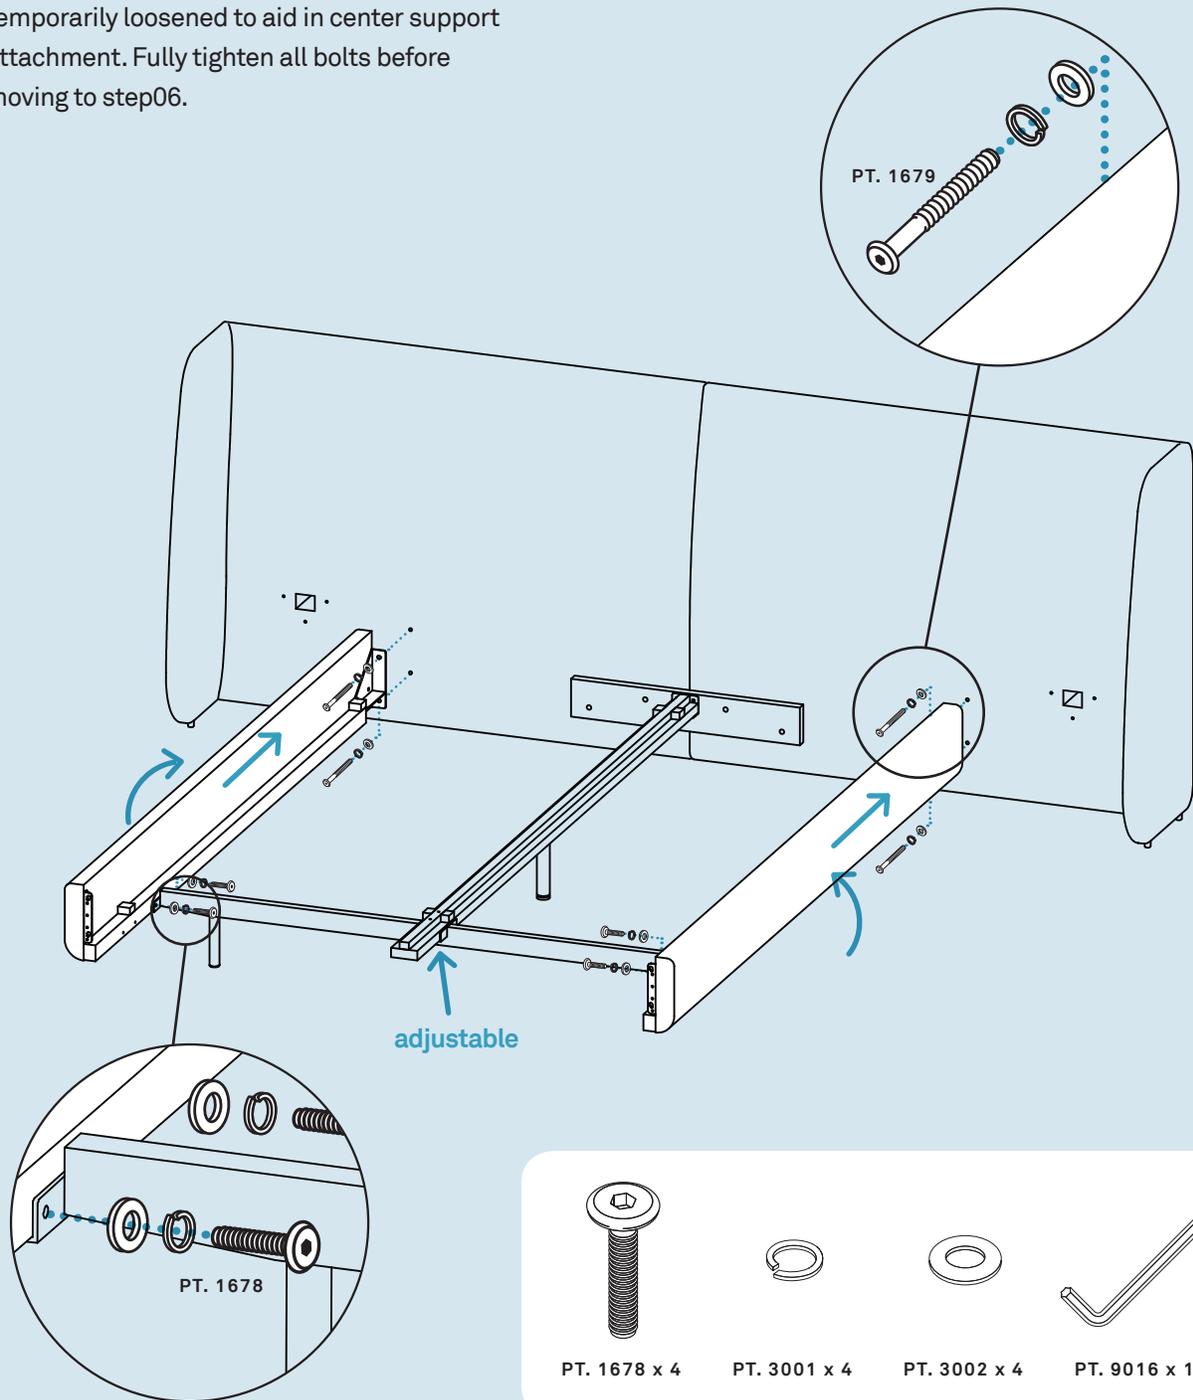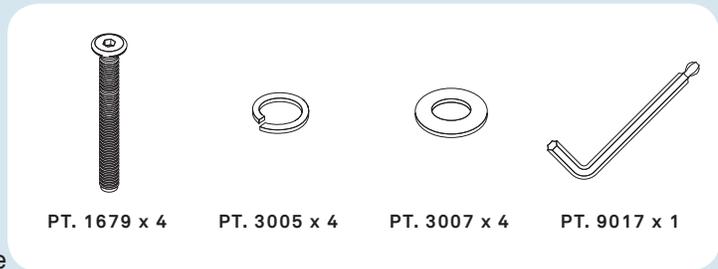

Step 06

ATTACH FOOTBOARD.


Attach footboard as shown using the pre-attached connectors.

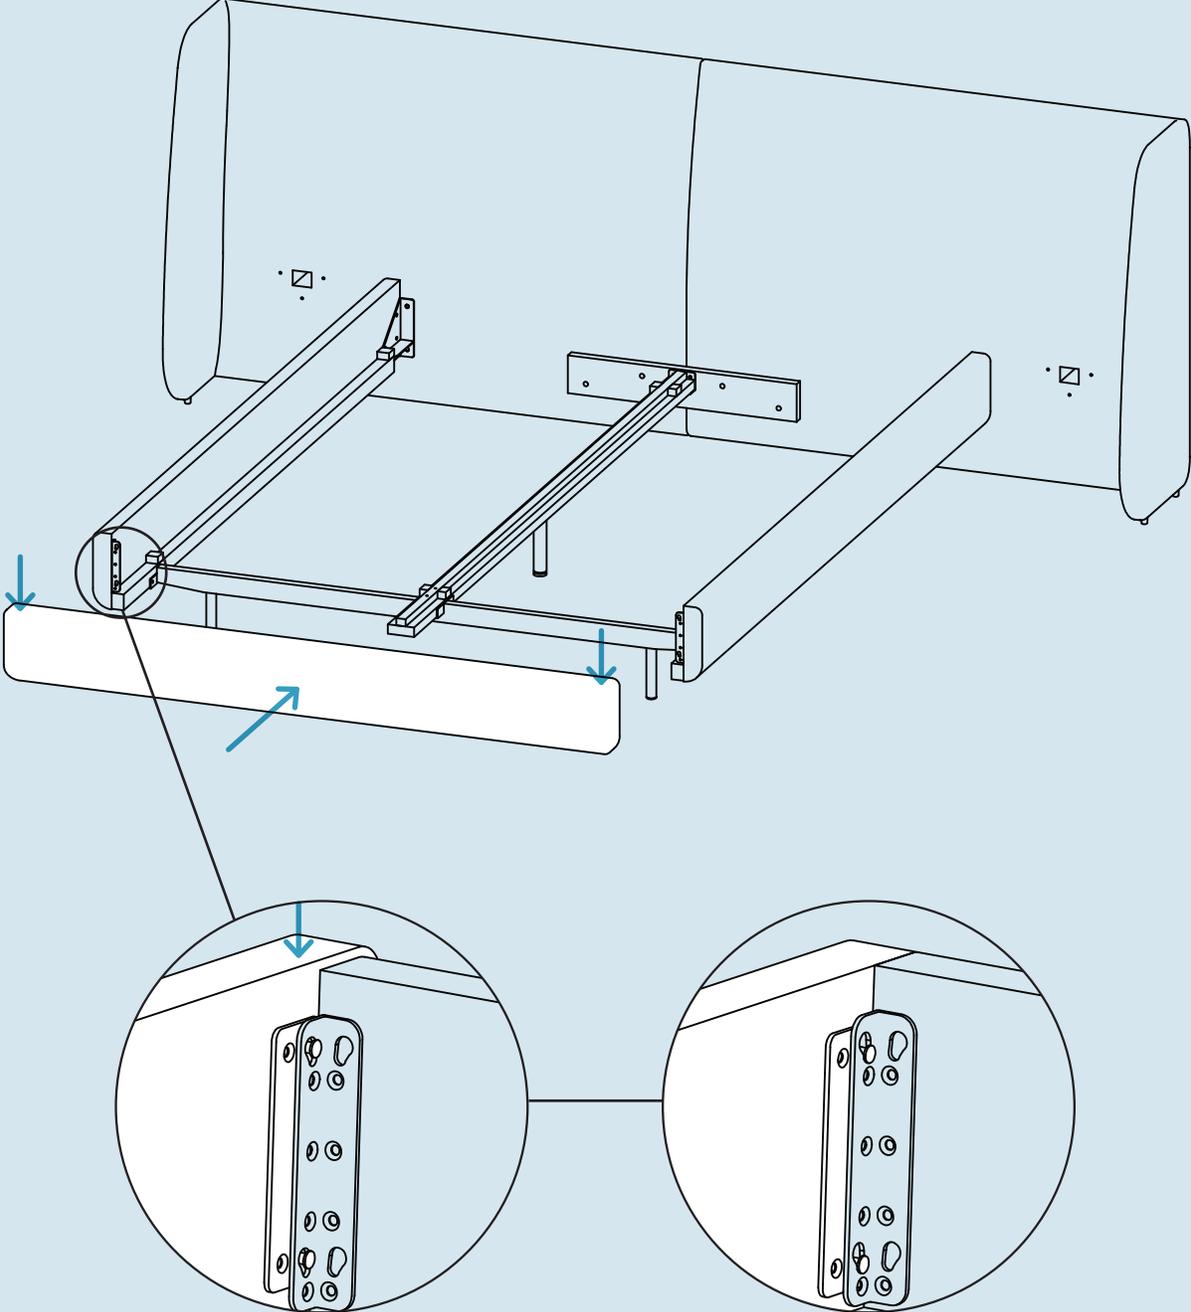

Step 07

ATTACH SLIPCOVER.


Starting at the footboard, align the slipcover corner seams. Continue attaching the slipcover as shown.

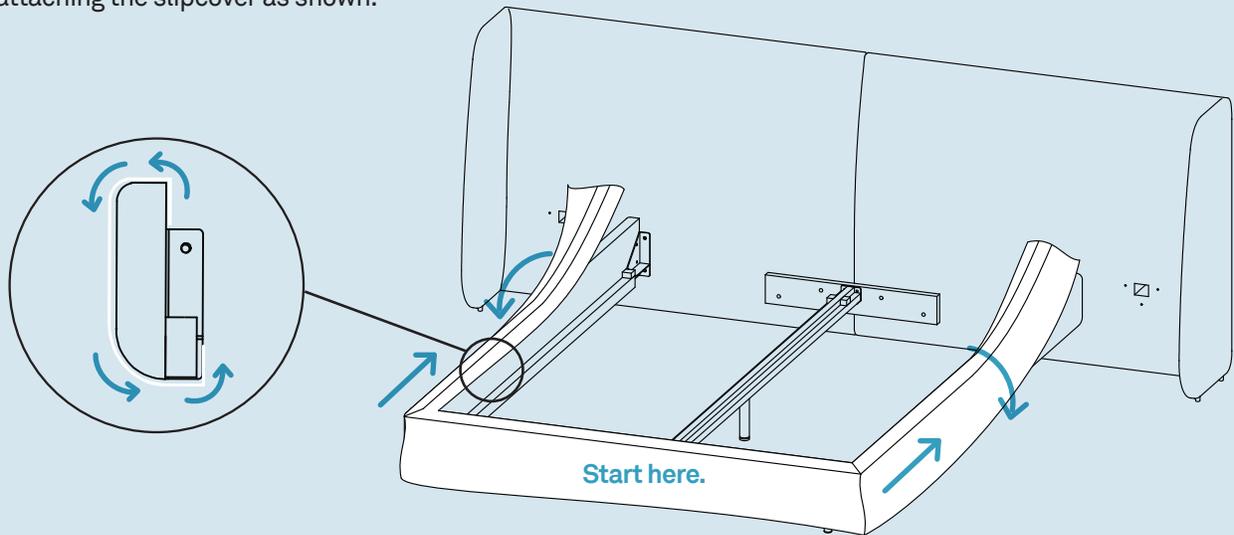

Step 08

INSTALL SLATS.


Starting at the headboard, install slats as shown.

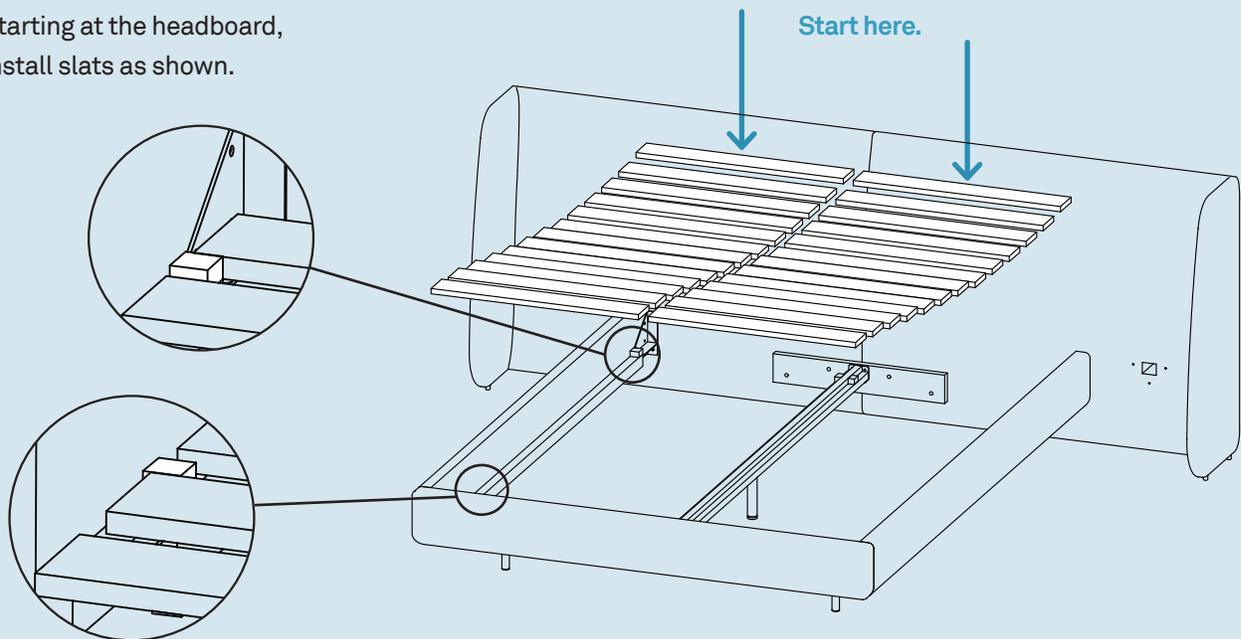

Step 09

ATTACH NIGHTSTAND BRACKETS.

Attach nightstand brackets as shown using the provided hardware.

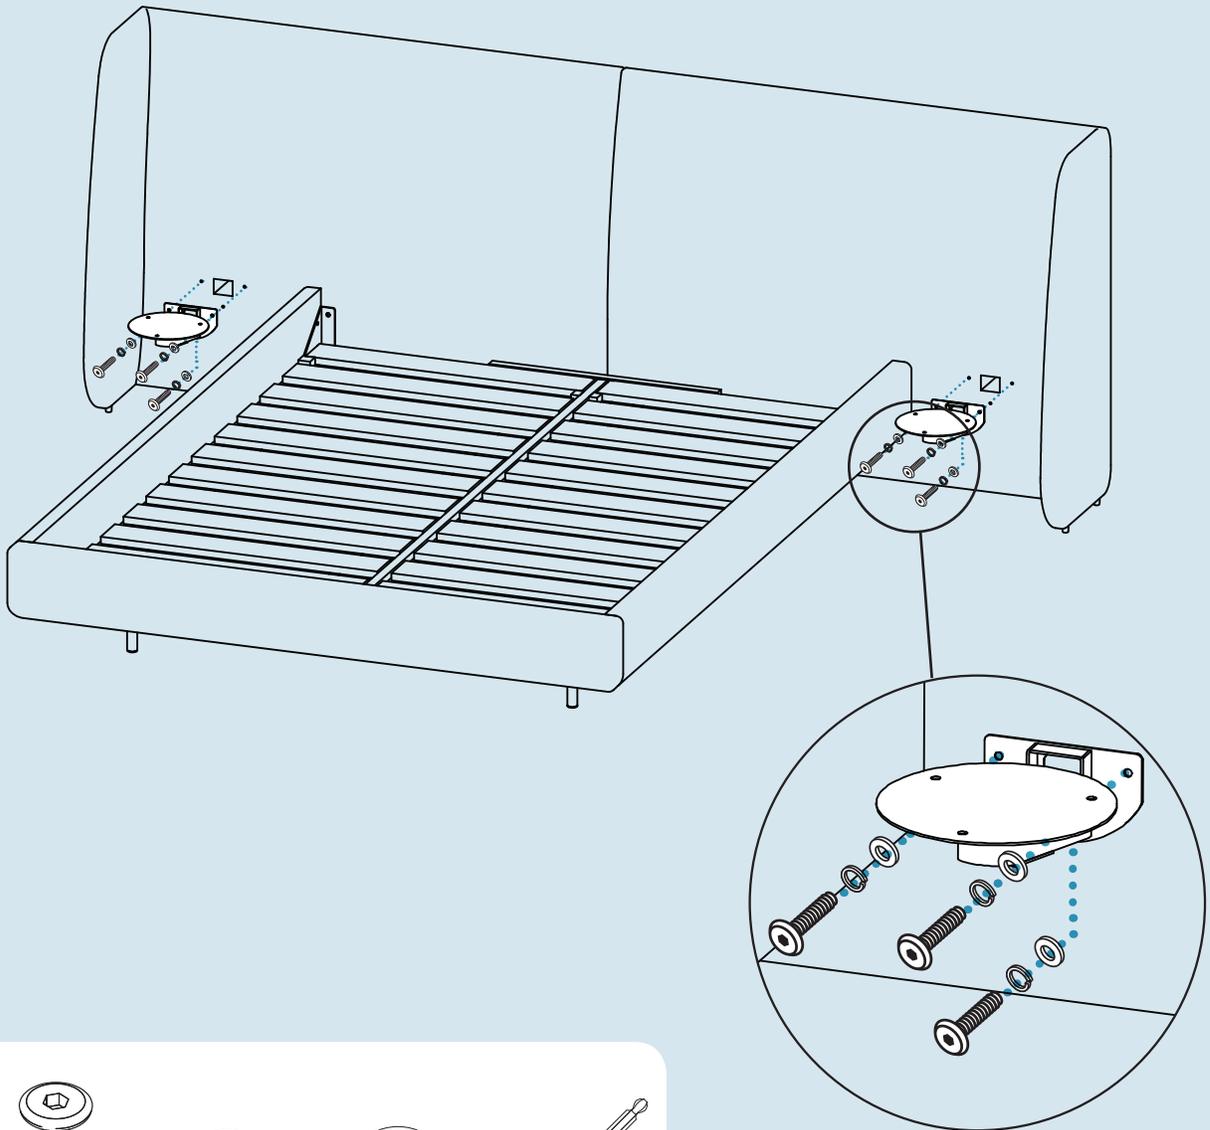

PT. 1678 x 6



PT. 3001 x 6



PT. 3002 x 6





PT. 9016 x 1

Step 10

ATTACH NIGHTSTAND PANELS.

Attach nightstand panels to brackets as shown using the provided hardware.

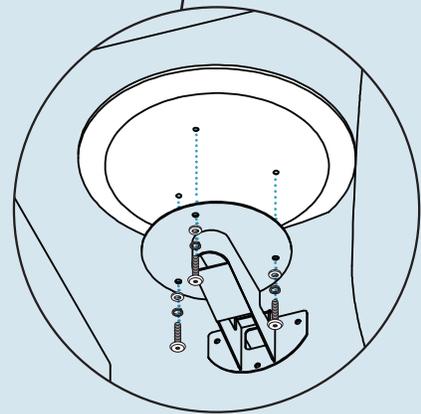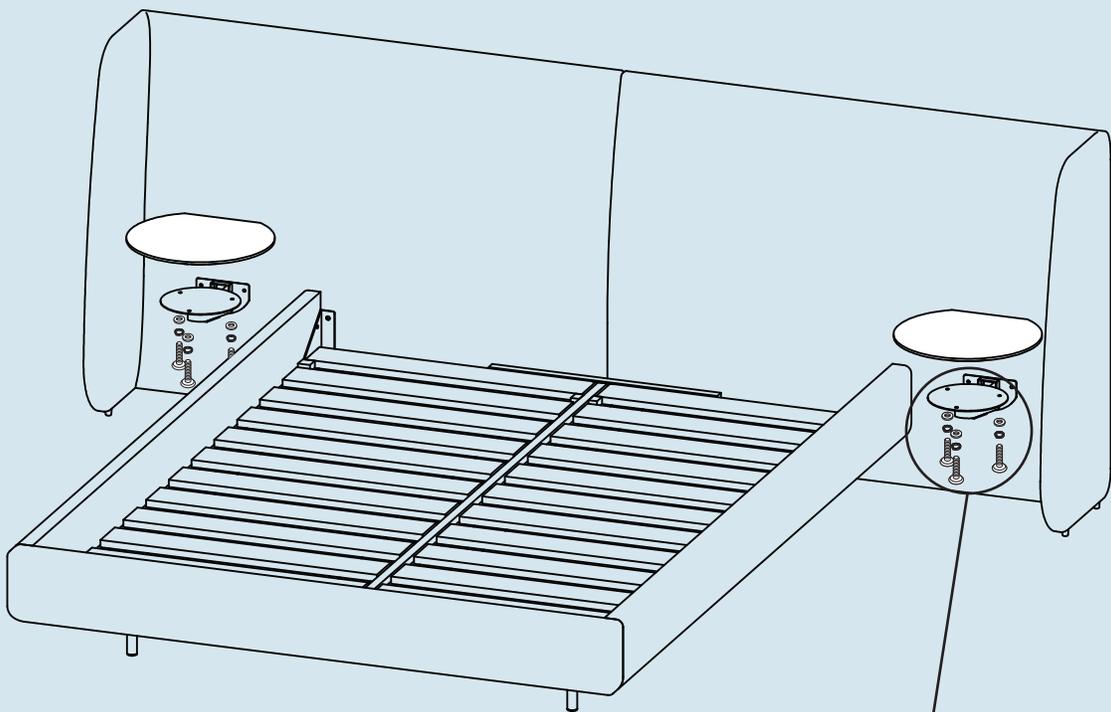

PT. 1603 x 6



PT. 3001 x 6



PT. 3002 x 6





PT. 9016 x 1

Additional Information

POWER CORD MANAGEMENT.

The headboard and nightstand brackets have integrated power cord management cutouts. Thread the power cord through the bracket cutout as shown. Once threaded push the power cord out through the back of the headboard.

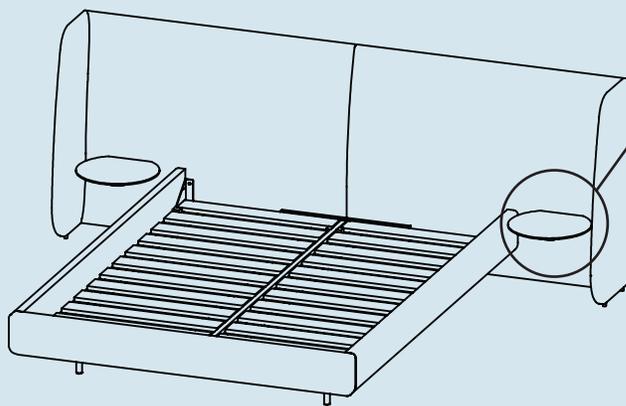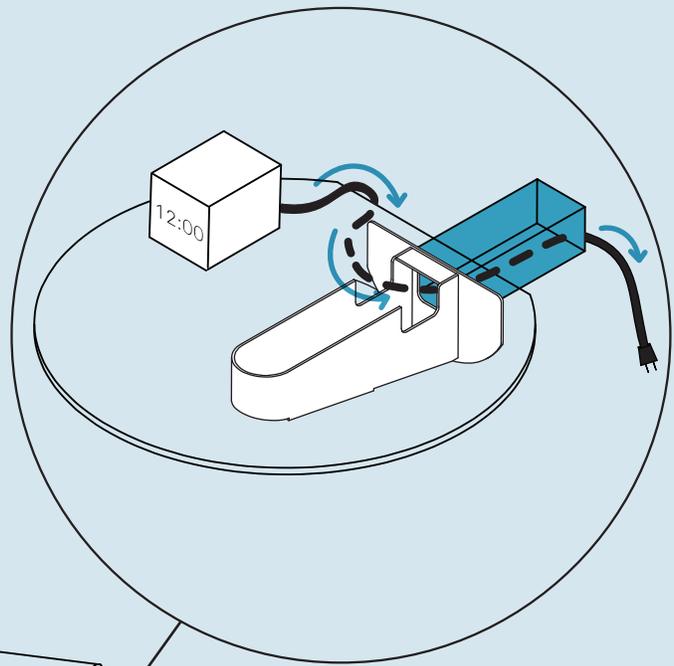

CLEAN

Vacuum your upholstery regularly.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may stain the fabric. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep upholstery & felt furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

