


Lap Collection

DESIGNED IN 2014

ASSEMBLY NOTES | REV 02

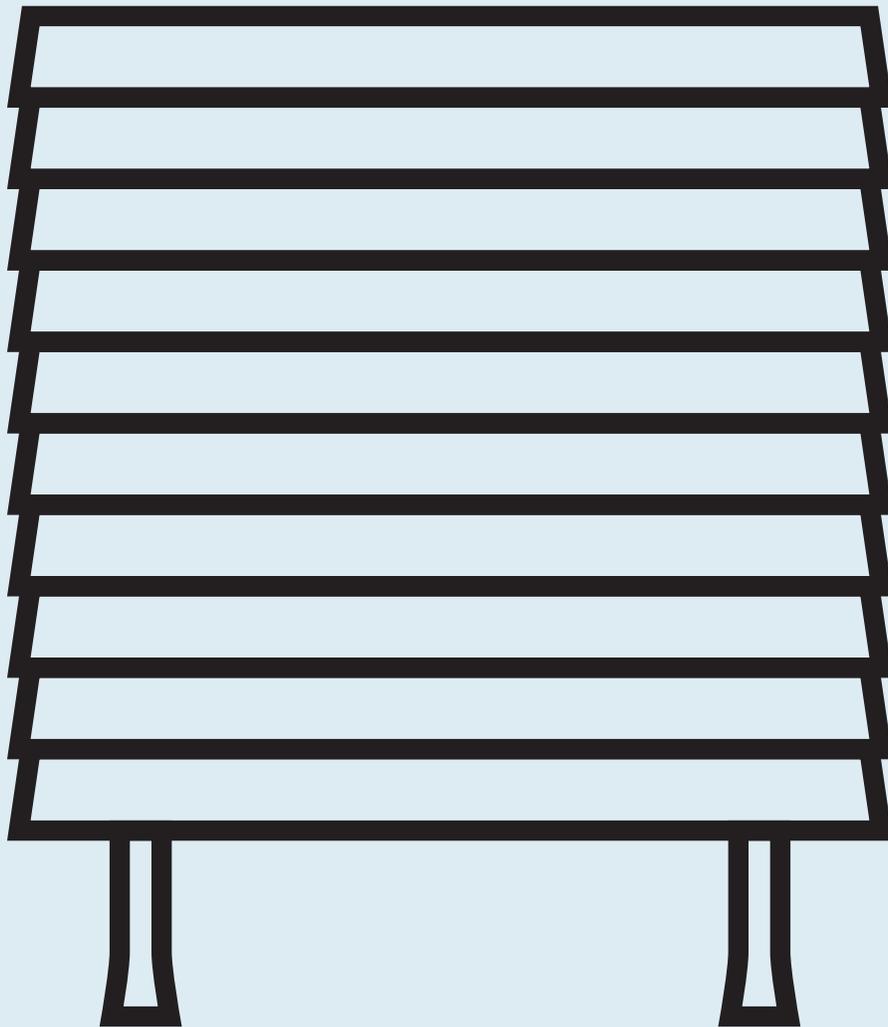


SAFE AND BORING NEED NOT BE SAFE AND BORING.

Overlapping wood drawer and door fronts give the collection its name, while the scene-stealing legs bring the visual charisma.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware

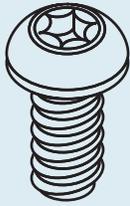


QTY 16*

Pt. 1010




QTY 16*

Pt. 3007




QTY 4*

Mounting Plate

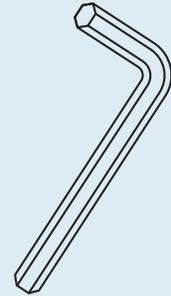


QTY 1*

Pt. 9002

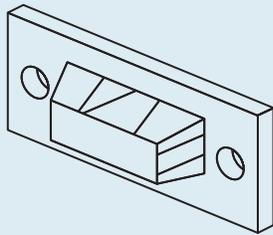

QTY 2

Pt. 8041




QTY 2

Pt. 1217




QTY 2

Pt. 1218

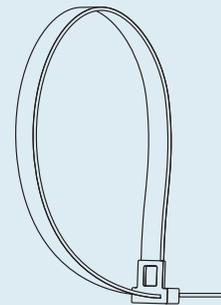


QTY 1

Pt. 8042



QTY 4

Leg**

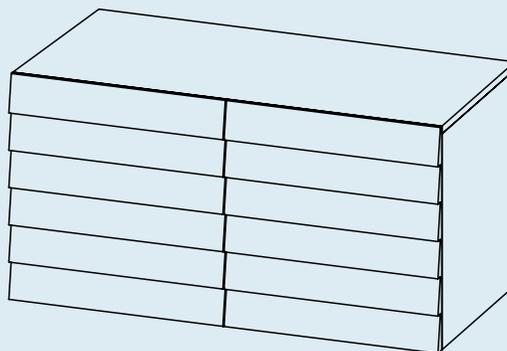

QTY 1

Case

*Black wood leg version of this product does not include this hardware.

**Orange and white metal leg versions of this product have mounting plates pre-attached to the leg.

Step 01

IDENTIFY LEG TYPE.

Leg geometry will differ between black wood, whitewashed wood, and metal legs versions of this product.

If you have purchased a **whitewashed wood leg** version of product, proceed to **Step 01A**.

If you have purchased a **black wood leg** version of product, proceed to **Step 01B**.

If you have purchased an **orange or white metal leg** version of product, proceed to **Step 01C**.


Precaution: After the legs have been attached, have a second person help lift and bring the case upright to prevent leg damage.

Step 01A

ATTACH WHITEWASHED WOOD LEGS.

Attach whitewashed wood legs by threading them into the mounting plates as shown.

Attach mounting plates to the bottom of the case using the provided hardware as shown.

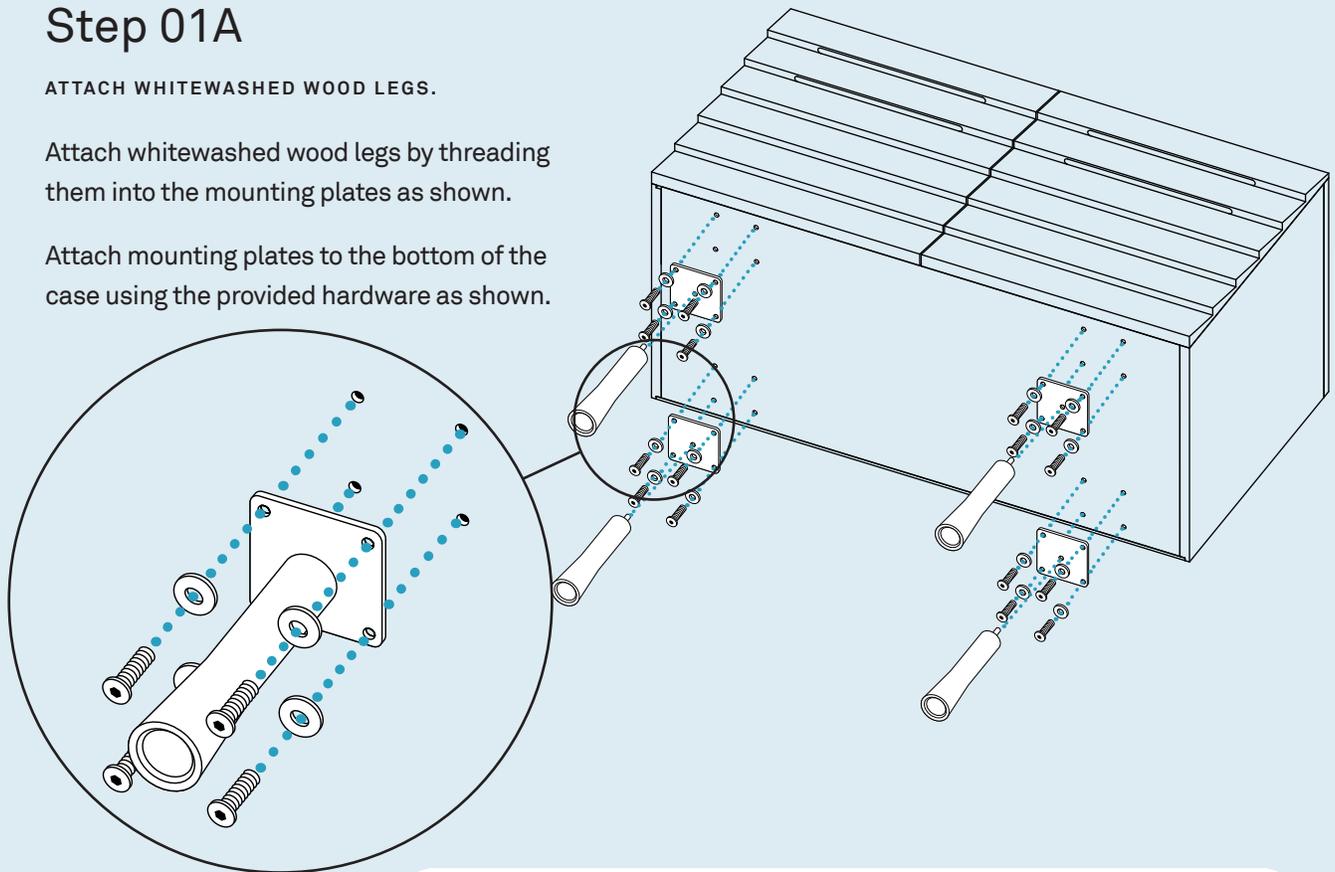


Mounting Plate x 4



Pt. 1010 x 16



Pt. 3007 x 16




Pt. 9002 x 1

Step 01B

ATTACH BLACK WOOD LEGS.


Attach black wood legs by threading them into the pre-attached mounting plates as shown.

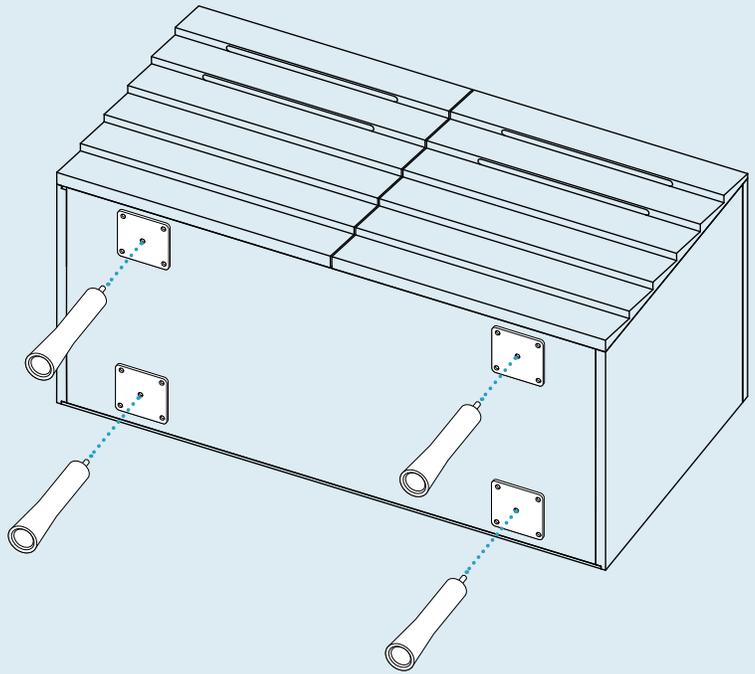

Step 01C

ATTACH METAL LEGS.

Attach metal legs with the provided hardware as shown.

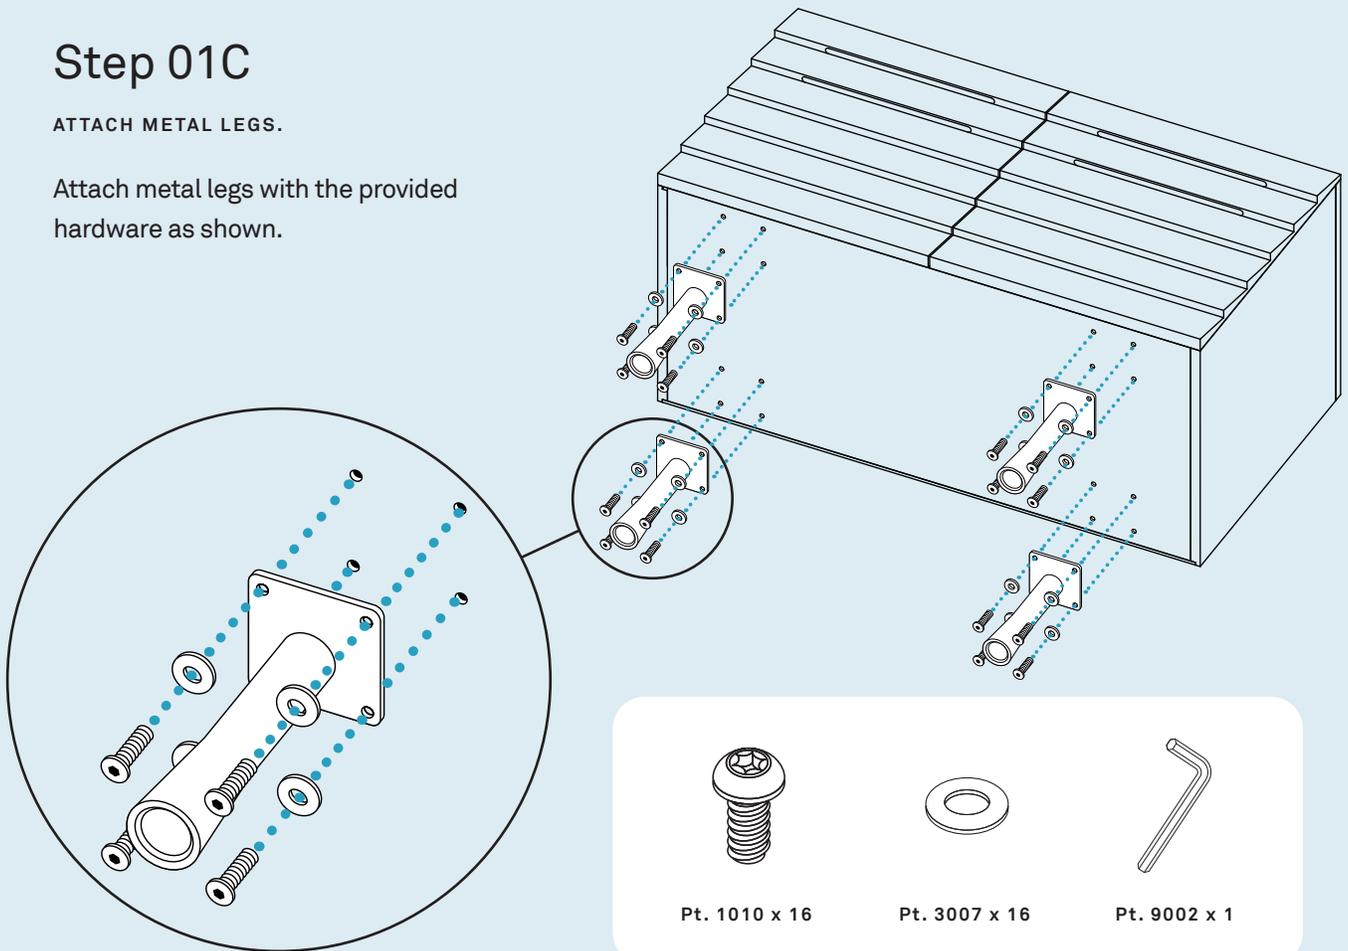

Pt. 1010 x 16


Pt. 3007 x 16

Pt. 9002 x 1

Step 02

DOOR ADJUSTMENT.



Hinges work in unison with one another, meaning if you adjust one hinge, chances are you will have to adjust all the hinges.

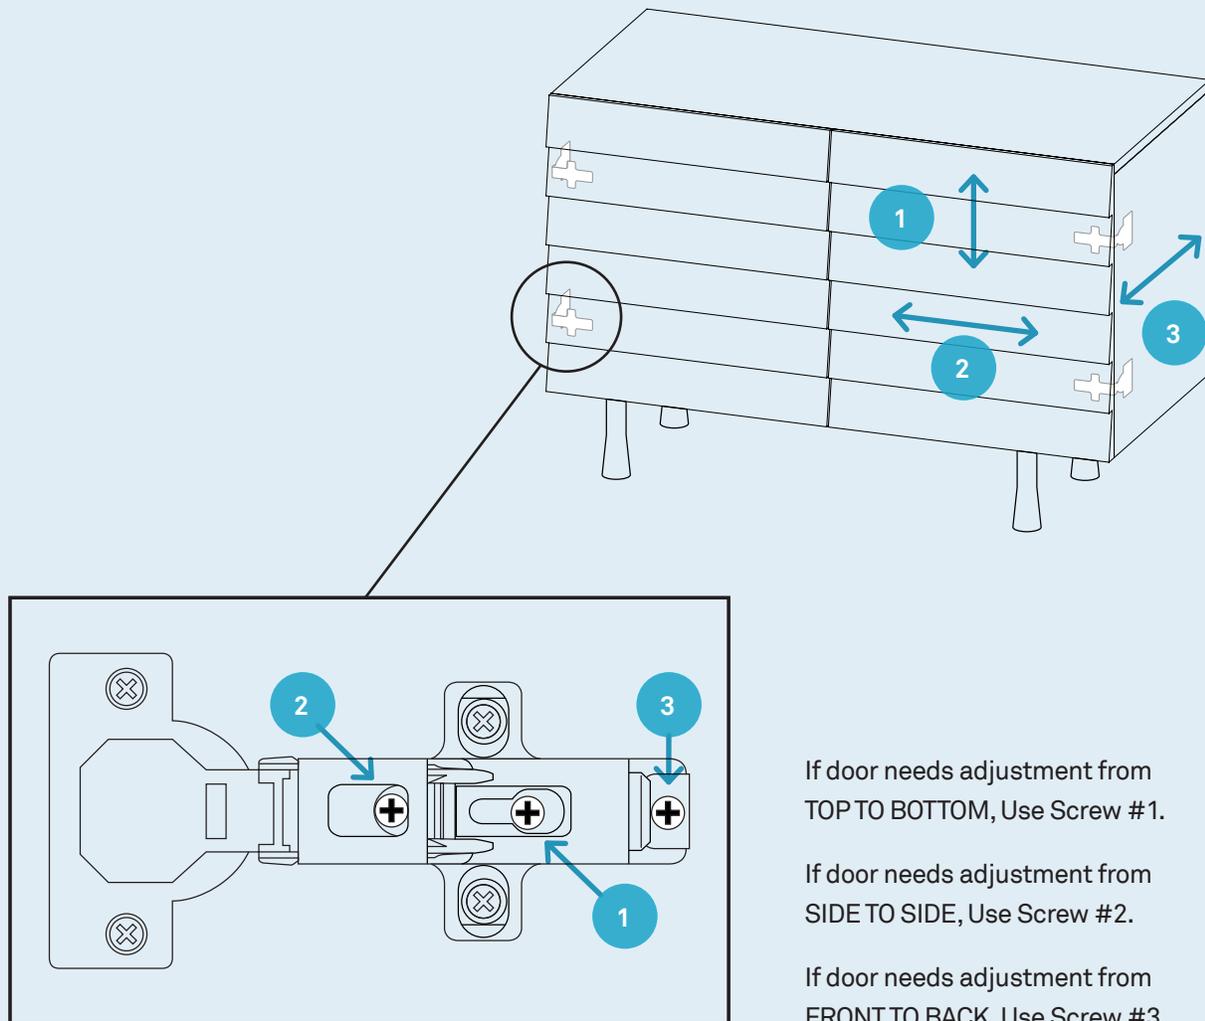

Step 03

ATTACH ANTI-TIP BRACKET TO THE WALL.



Install anti-tip bracket to wall stud 1-inch below case top panel height.

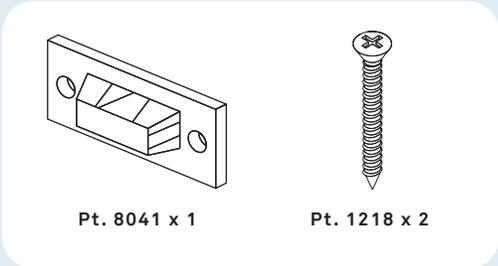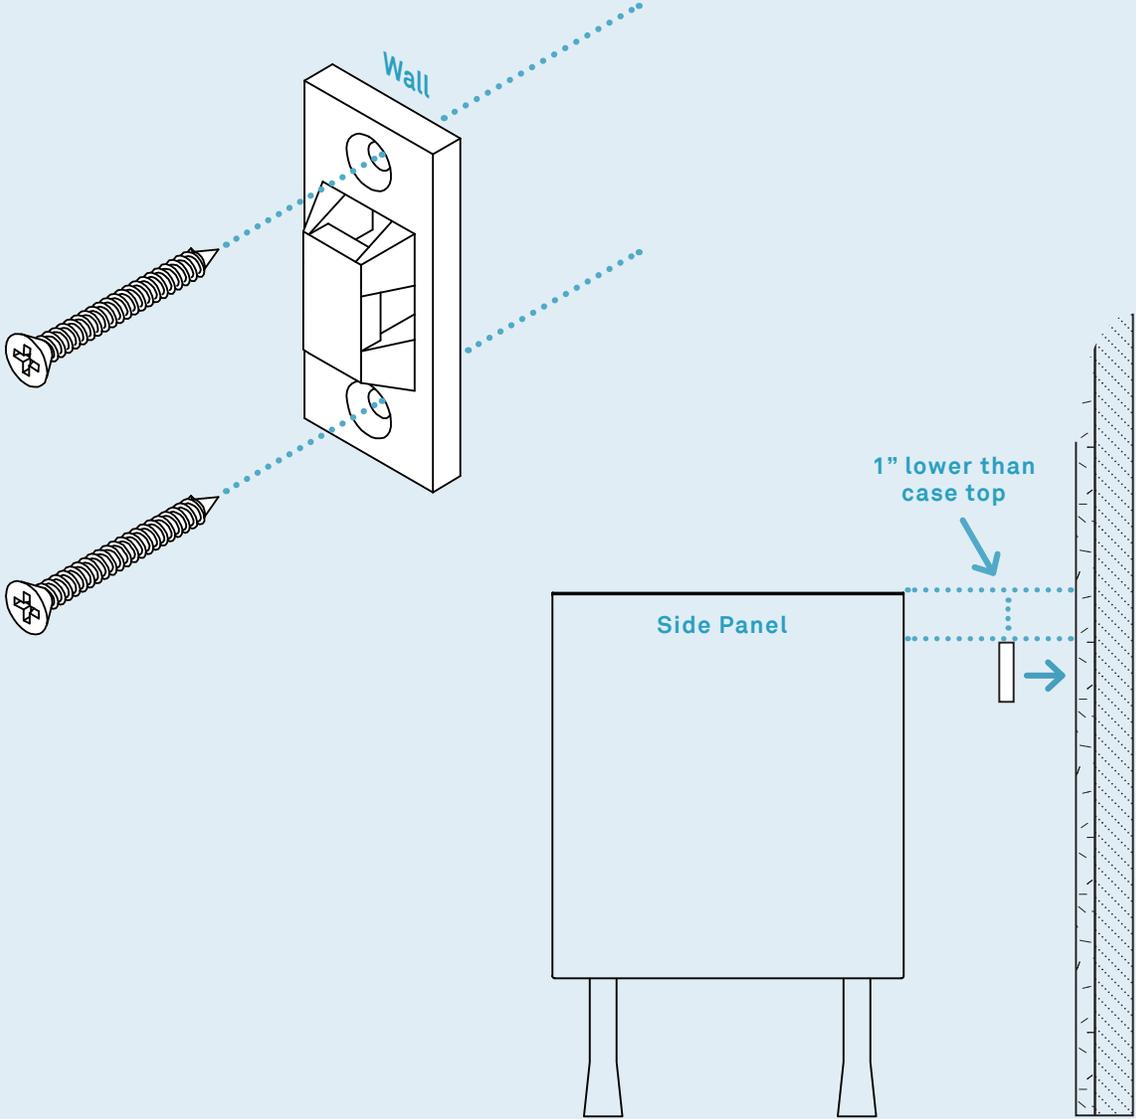

Step 04

INSTALL ANTI-TIP BRACKET TO CASE.

Bracket must be installed to top panel of case. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

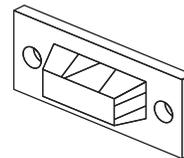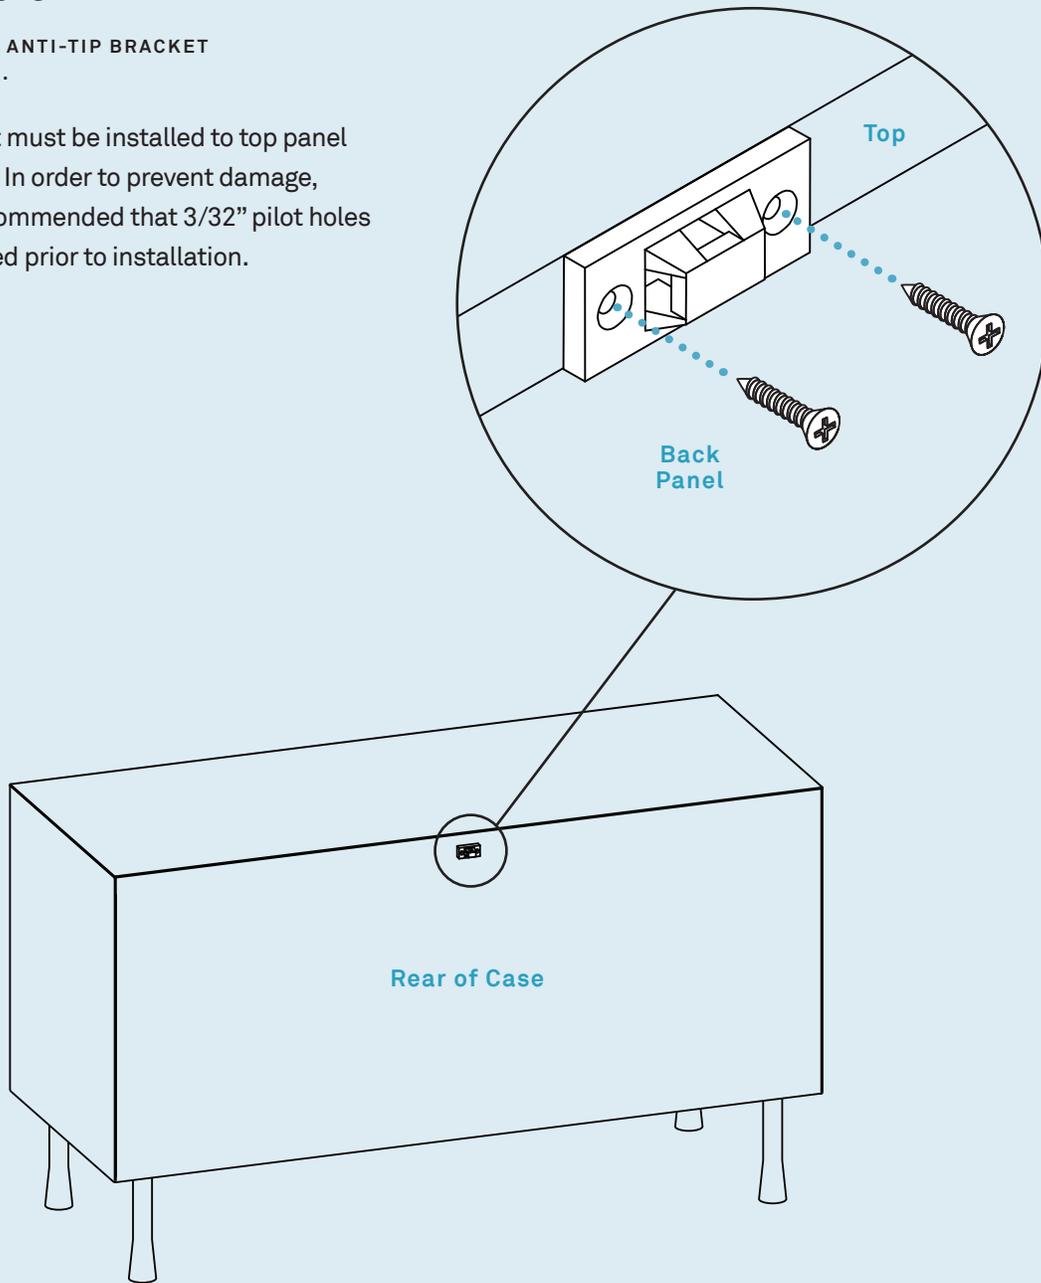

Pt. 8041 x 1







Pt. 1217 x 2

Step 05

SECURE THE CASE.

Install and tighten the strap prior to using the product.

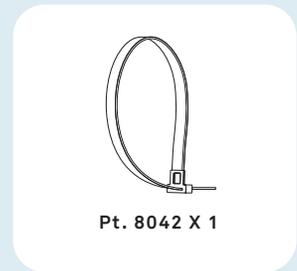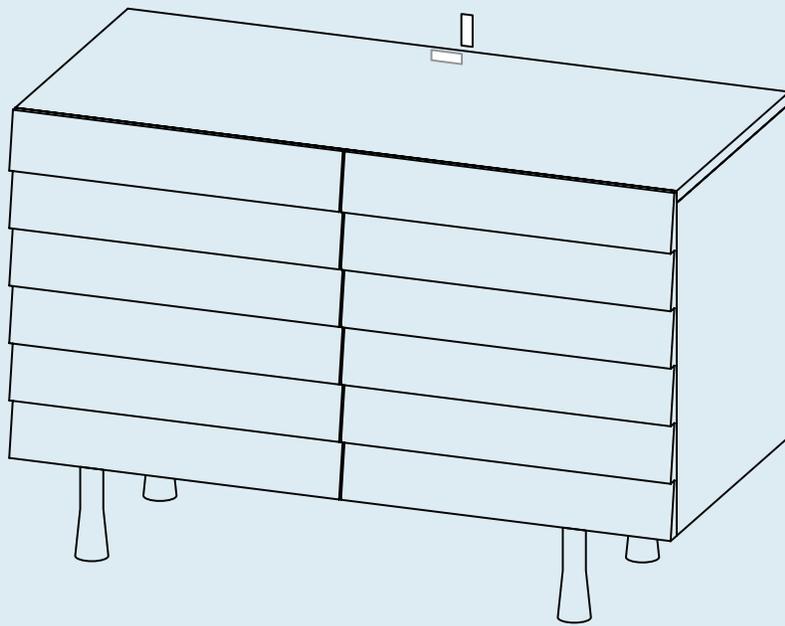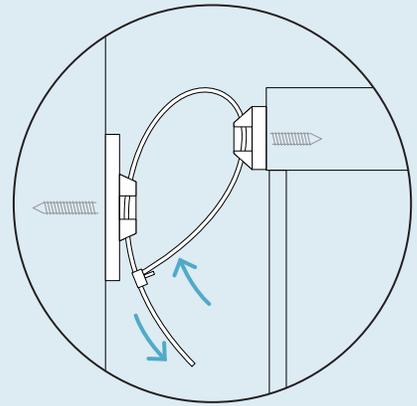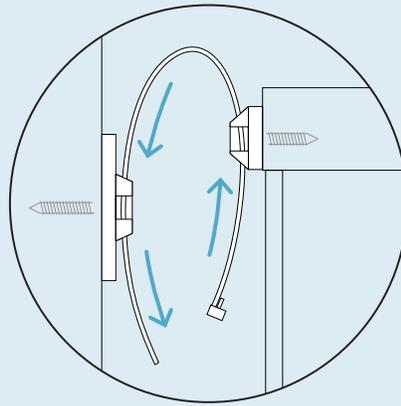

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

