


Low Space Coffee Table

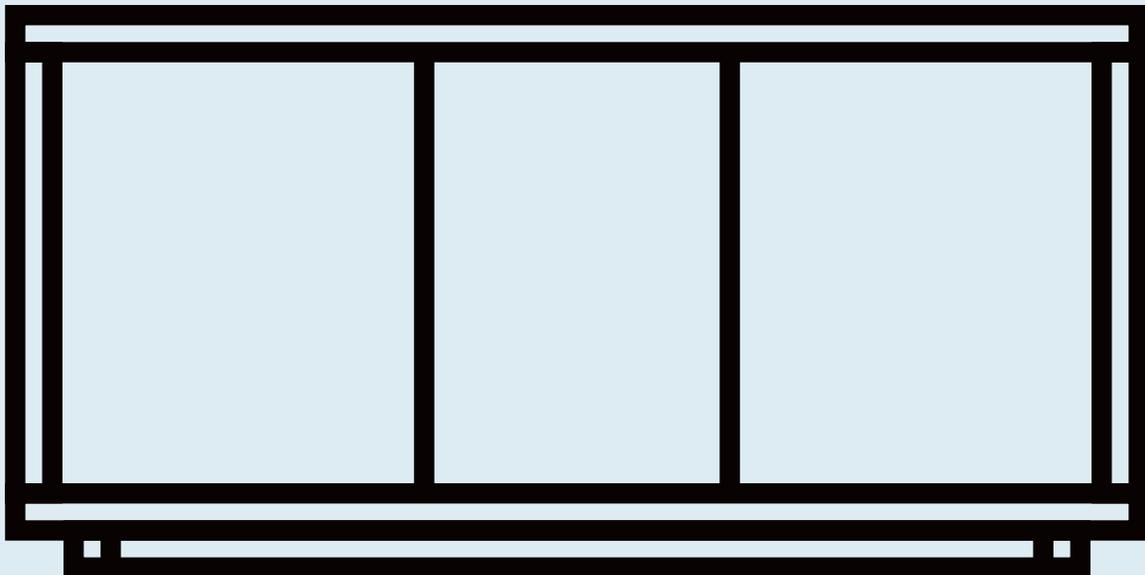

DESIGNED IN 2020

ASSEMBLY NOTES | REV 01



NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 22

Pt. 1083




QTY 10

Pt. 1610



QTY 32

Pt. 3001




QTY 32

Pt. 3002




QTY 1

Pt. 9004

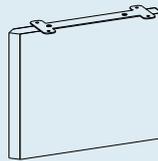


QTY 4

Corner Panel

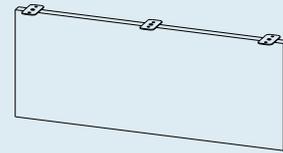


QTY 1

Center Panel

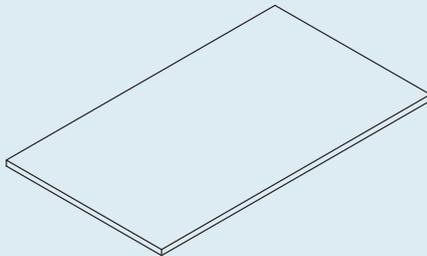

QTY 1

Table Top

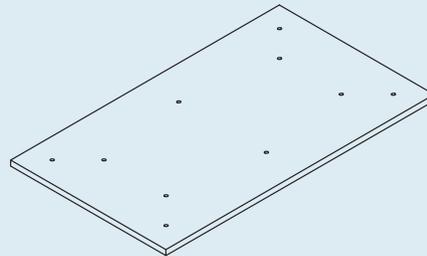


QTY 1

Base

Step 01

ATTACH THE CENTER AND CORNER PANELS.

Assemble table top on clean, soft surface.
Attach the panels shown to the bottom of the table top using the provided hardware.

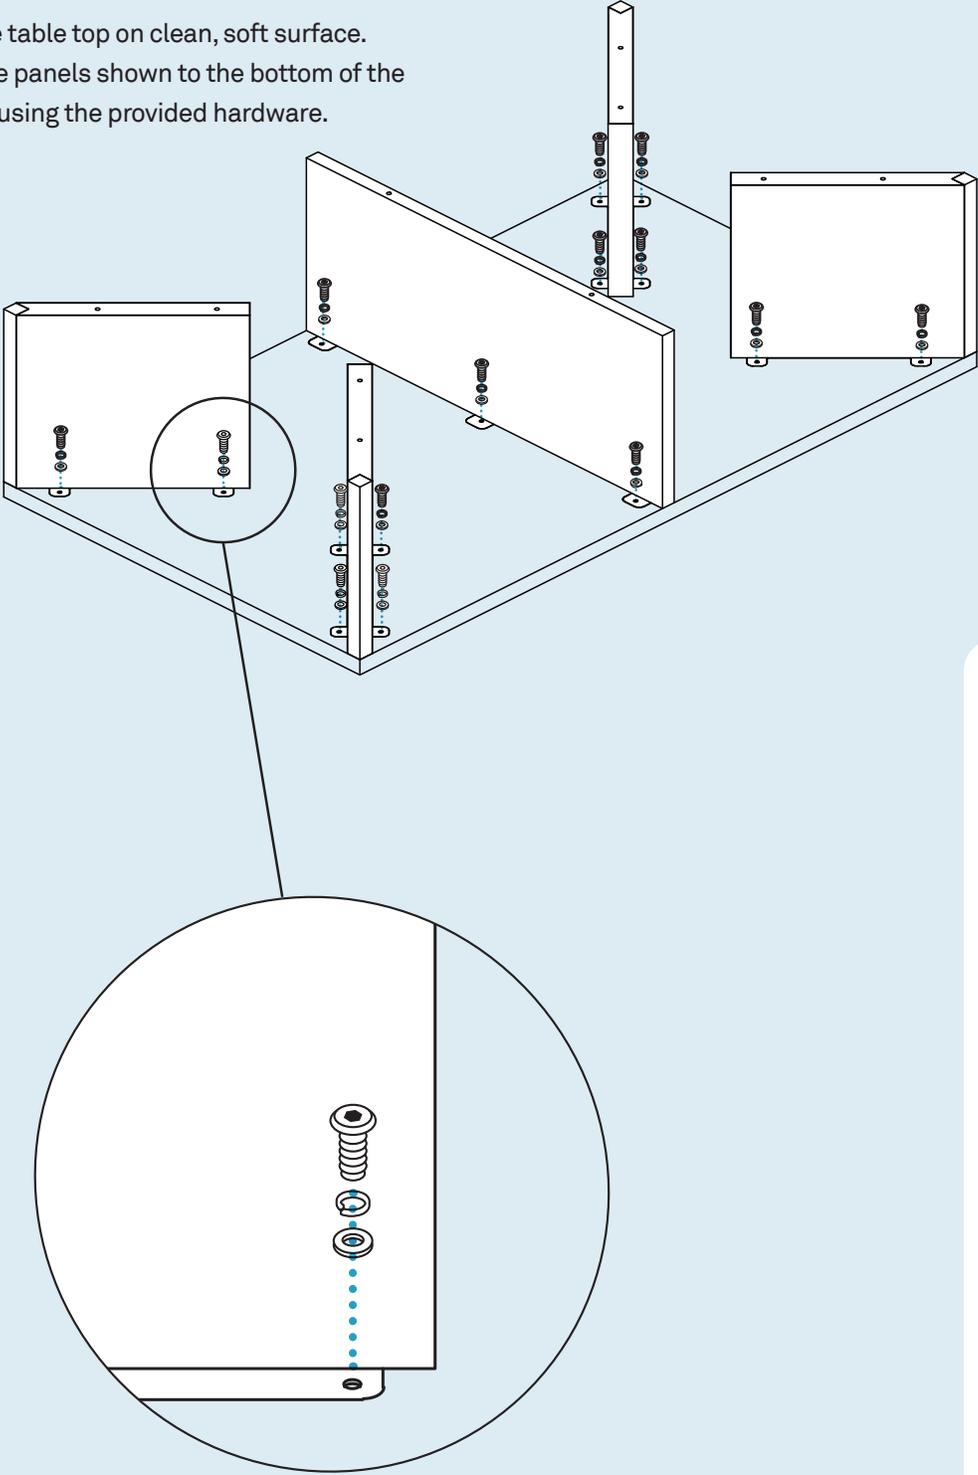

PT. 1083 X 22



PT. 3001 X 22



PT. 3002 X 22



PT. 9004 X 1

Step 02

ATTACH THE BASE.

Attach the base as shown using provided hardware. Ensure table is level prior to use.




PT. 1610 x 10





PT. 3001 x 10



PT. 3002 x 10



PT. 9004 x 1

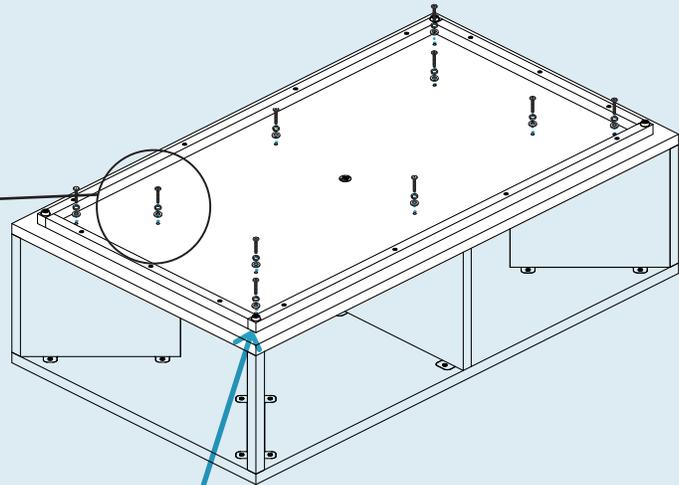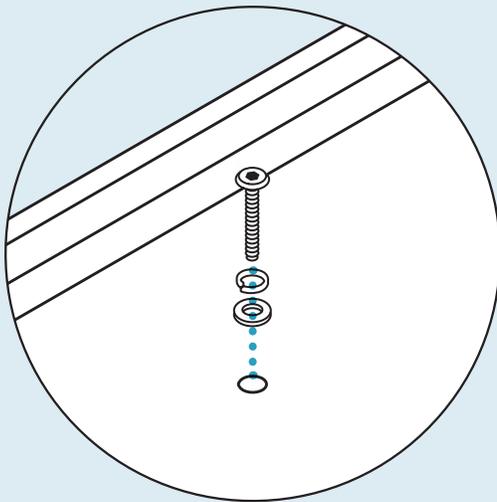

Adjustable
Glide x4

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

WALNUT AND WHITE OAK CARE

The walnut and white oak version of this table are finished with a Rubio® Monocoat Finish. We suggest treating the surface with Rubio® Monocoat every 12 to 24 months to extend the life of the finish as instructed:

After cleaning the surface, apply Rubio® Monocoat refresh and spread with a cloth. Allow the product to react for 5 minutes before wiping the surface dry with a cloth or paper towel. Polish until the surface feels completely dry. Work in zones that can be fully wiped dry within 15 minutes. The surface will be completely dry and useable after 5 hours.

Rubio® is a registered trademark of Muylle-Facon.

