


Me Time Bed - King, Queen, Full

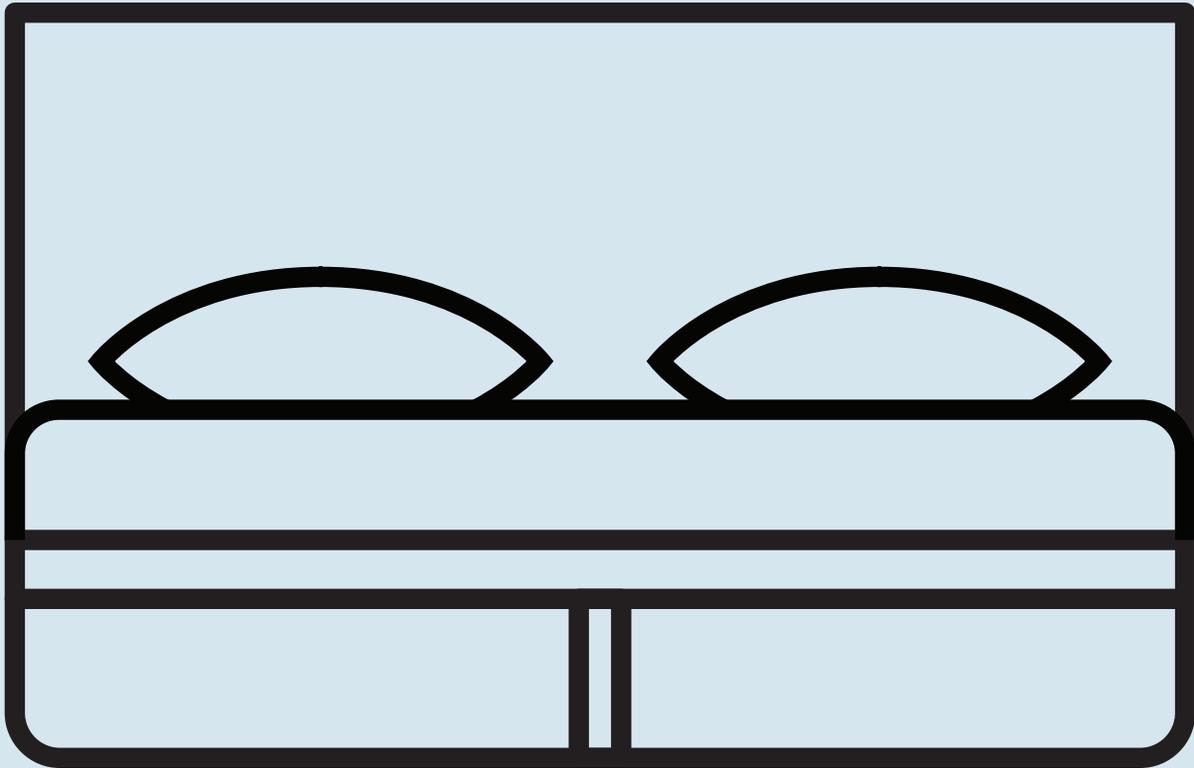

DESIGNED IN 2016

ASSEMBLY NOTES | REV 00




IT IS A DISASTER OUT THERE. WAIT IT OUT HERE.

This tightly tuned bed design is the perfect spot to stay put. Me time. You time. There will be better times .

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 14

PT. 1680




QTY 4

PT. 1030




QTY 18

PT. 3005



QTY 18

PT. 3007

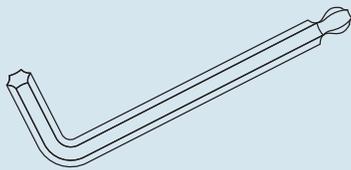


QTY 1

PT. 9017



QTY 1

Center Leg

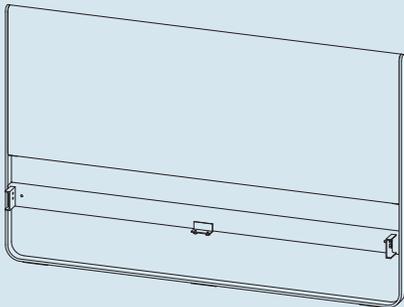


QTY 1

Head Board




QTY 1

Foot Board

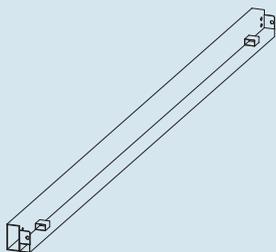

QTY 2

Side Rail

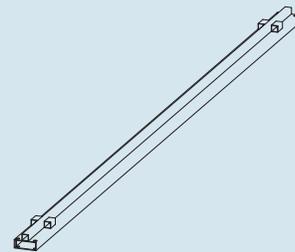


QTY 1

Center Rail

Step 01

BEGIN ASSEMBLING BED.


Align side rails with headboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

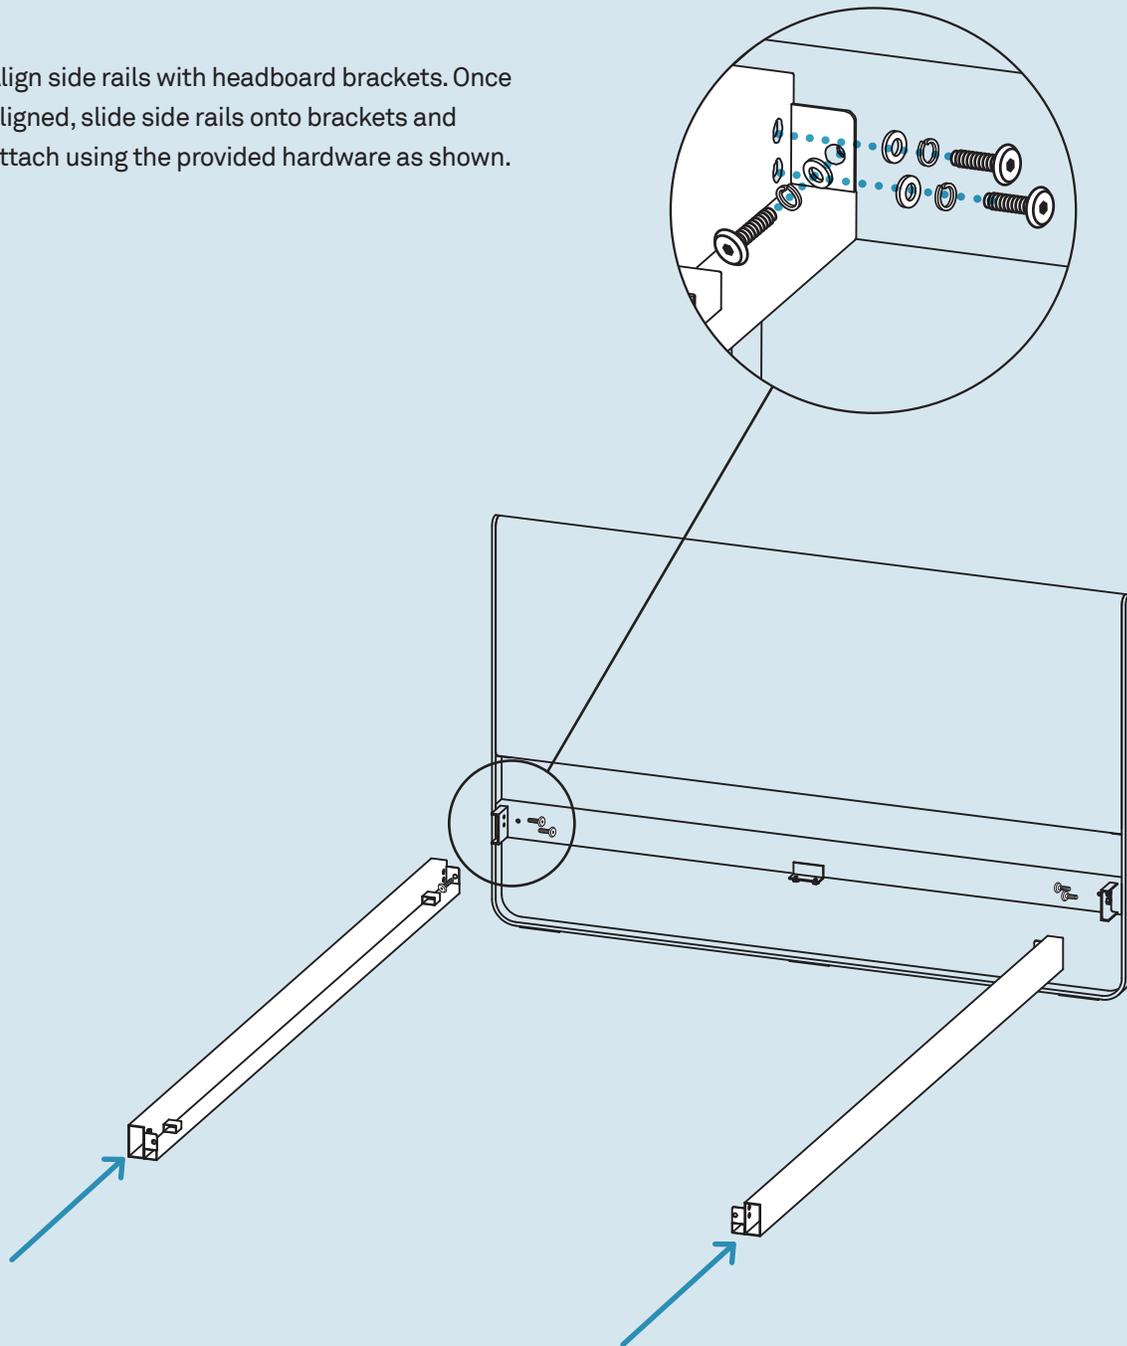


PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6




PT. 9017 x 1

Step 02

ATTACHING THE FOOTBOARD.


Align side rails with footboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

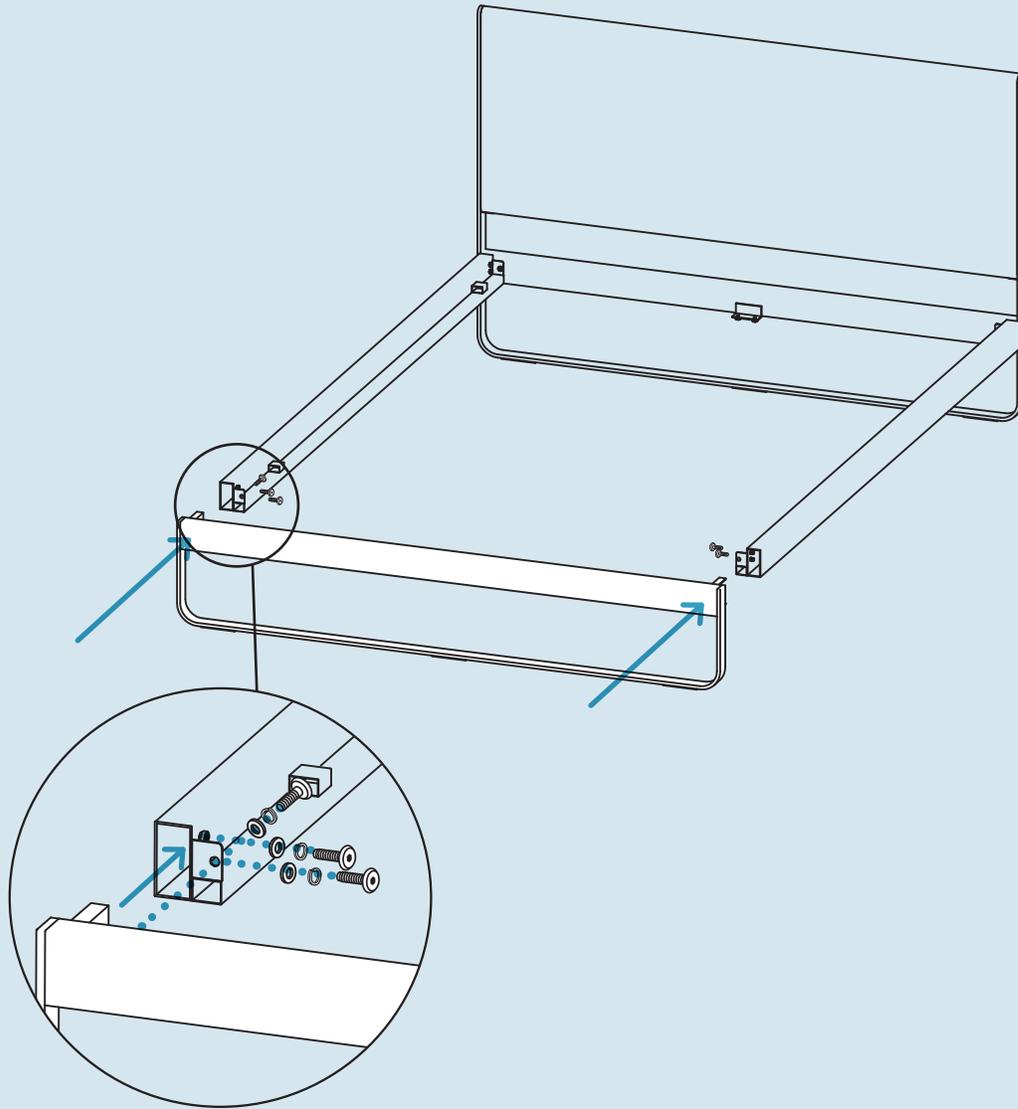

PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6




PT. 9017 x 1

Step 03

INSTALLING THE CENTER LEG.


Place center rail upside down on soft surface.
Install center leg as shown using the provided hardware.

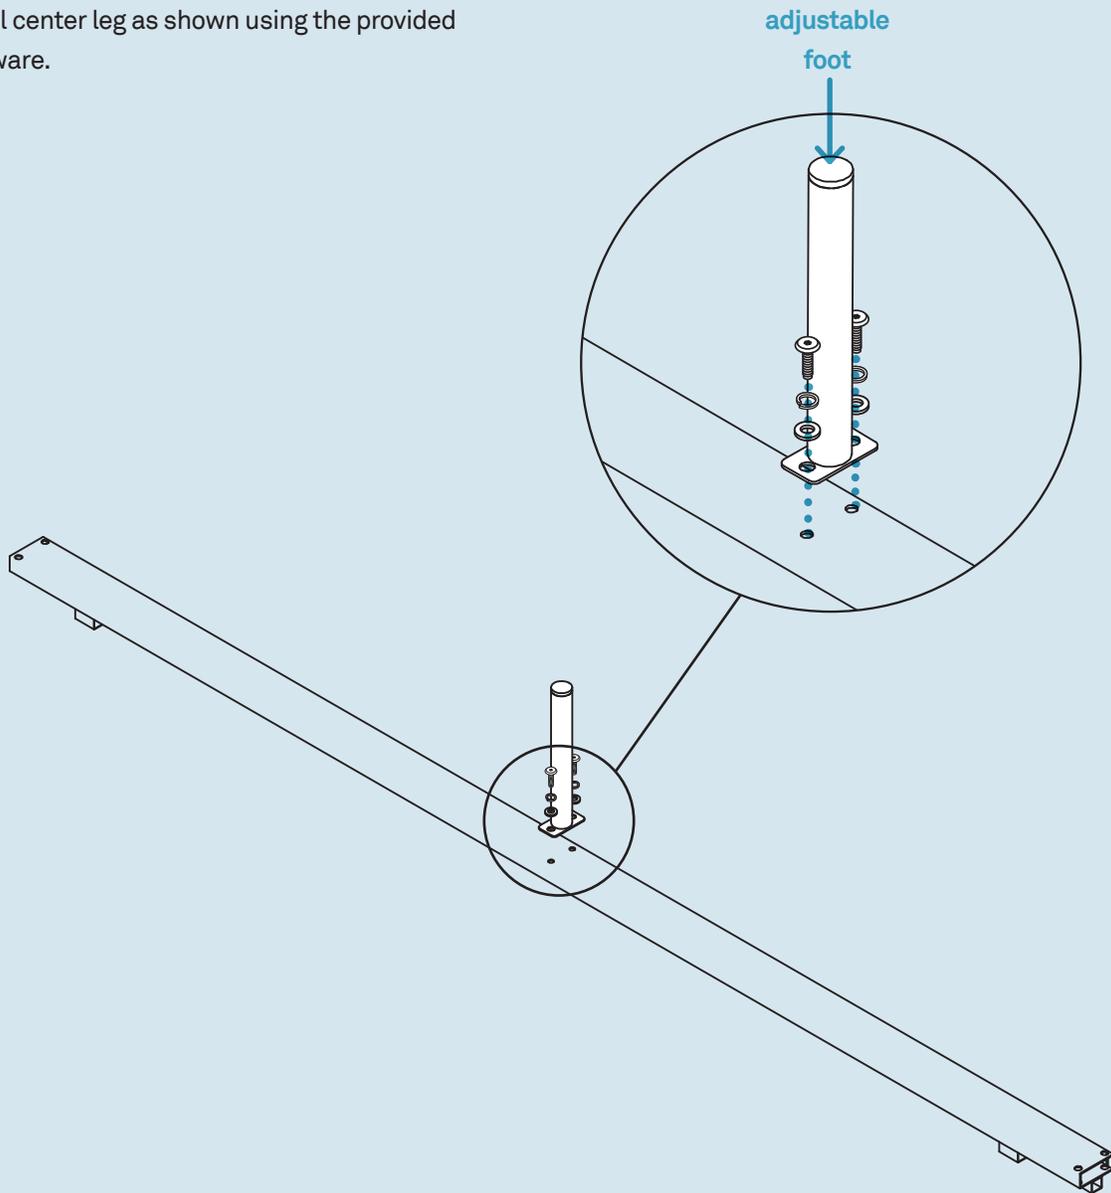

PT. 1680 x 2



PT. 3005 x 2



PT. 3007 x 2




PT. 9017 x 1

Step 04

ATTACHING THE CENTER RAIL.

Align center rail with head and footboard brackets. Attach using the provided hardware as shown.

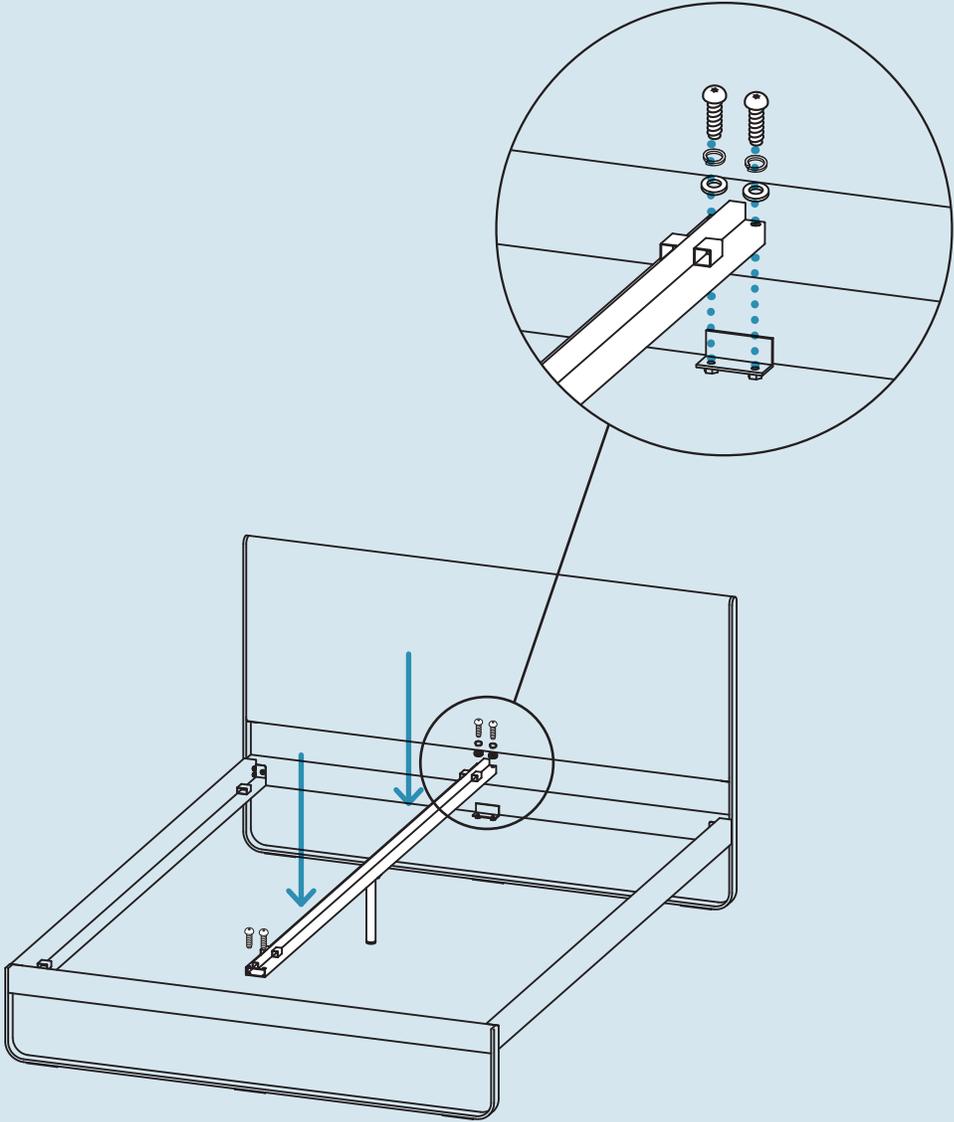

PT. 1030 x 4



PT. 3005 x 4



PT. 3007 x 4






PT. 9017 x 1

Step 05

INSTALLING THE SLATS.

Install slats as shown. Note slat anchor block locations on side rails.

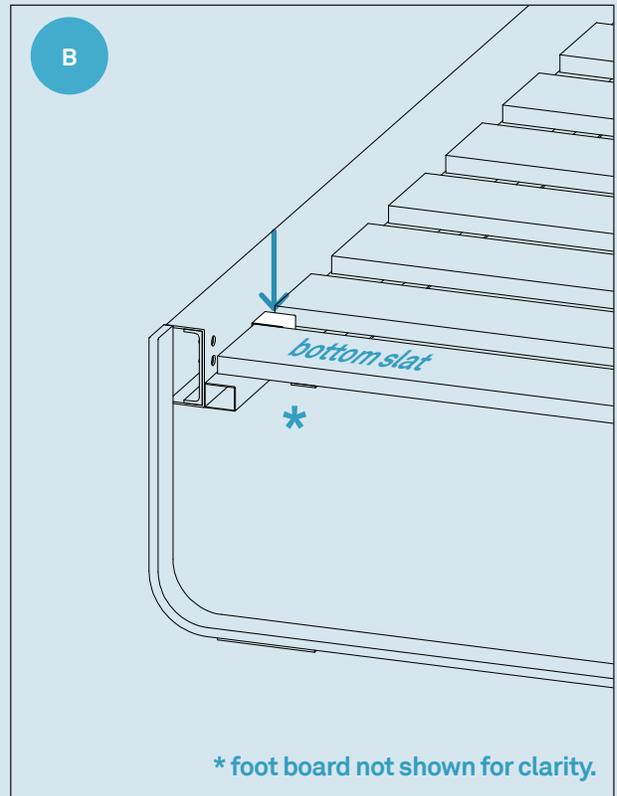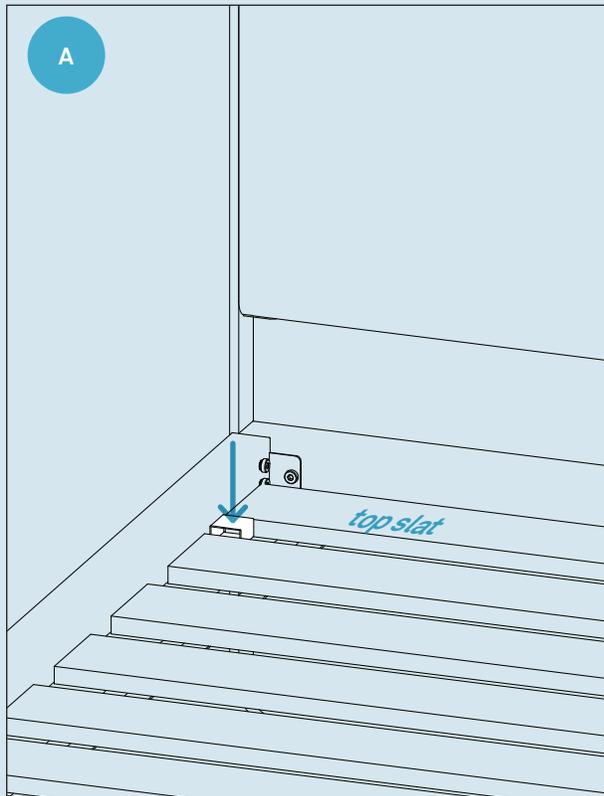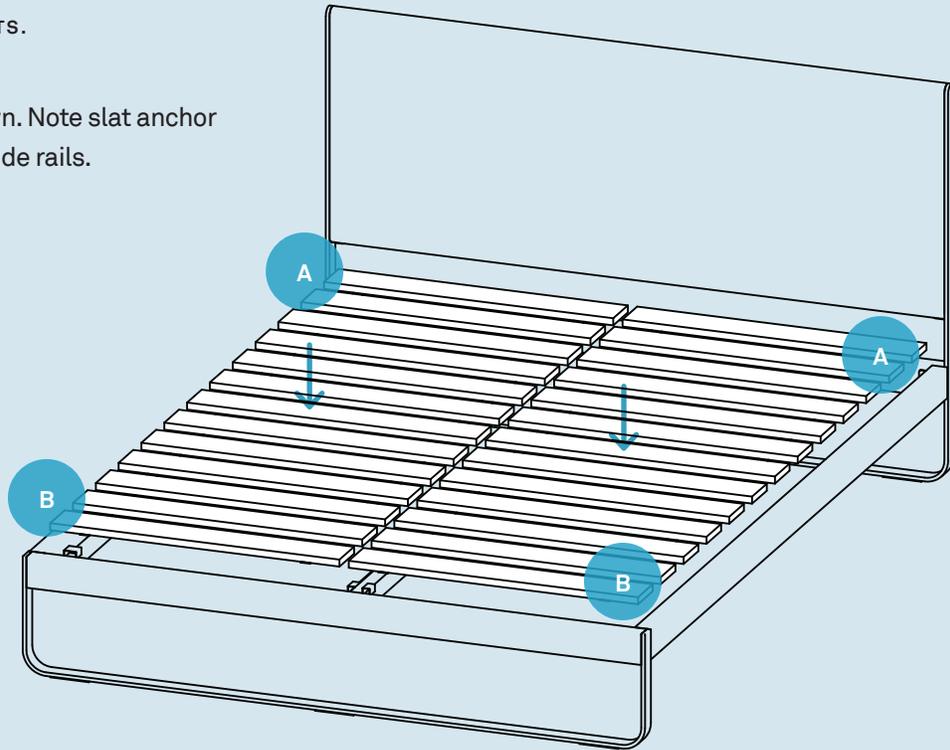

Additional Information

CLEAN

Vacuum your upholstery regularly. For leather furniture dust regularly with a dry cloth.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may cause stains. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID


Keep furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may cause color fading. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent surface indentations. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.



Me Time Bed - Twin

DESIGNED IN 2016

ASSEMBLY NOTES | REV 00

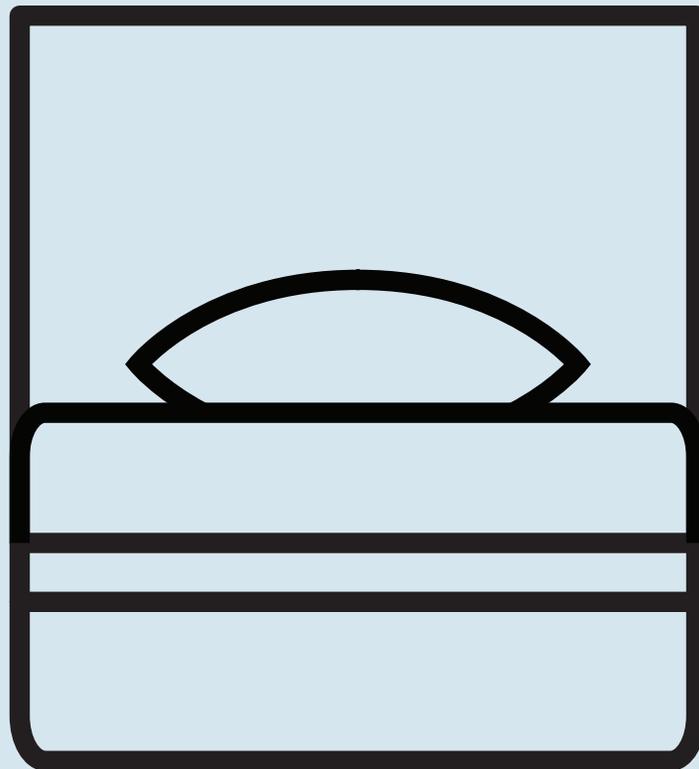


IT IS A DISASTER OUT THERE. WAIT IT OUT HERE.

This tightly tuned bed design is the perfect spot to stay put. Me time. You time. There will be better times .

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 12

PT. 1680




QTY 12

PT. 3005




QTY 12

PT. 3007

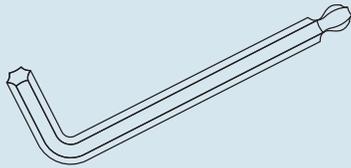


QTY 1

PT. 9017

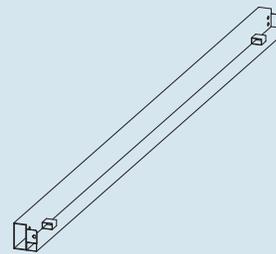

QTY 2

Side Rail

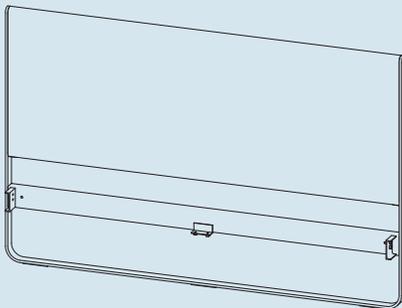

QTY 1

Head Board




QTY 1

Foot Board

Step 01

BEGIN ASSEMBLING BED.


Align side rails with headboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

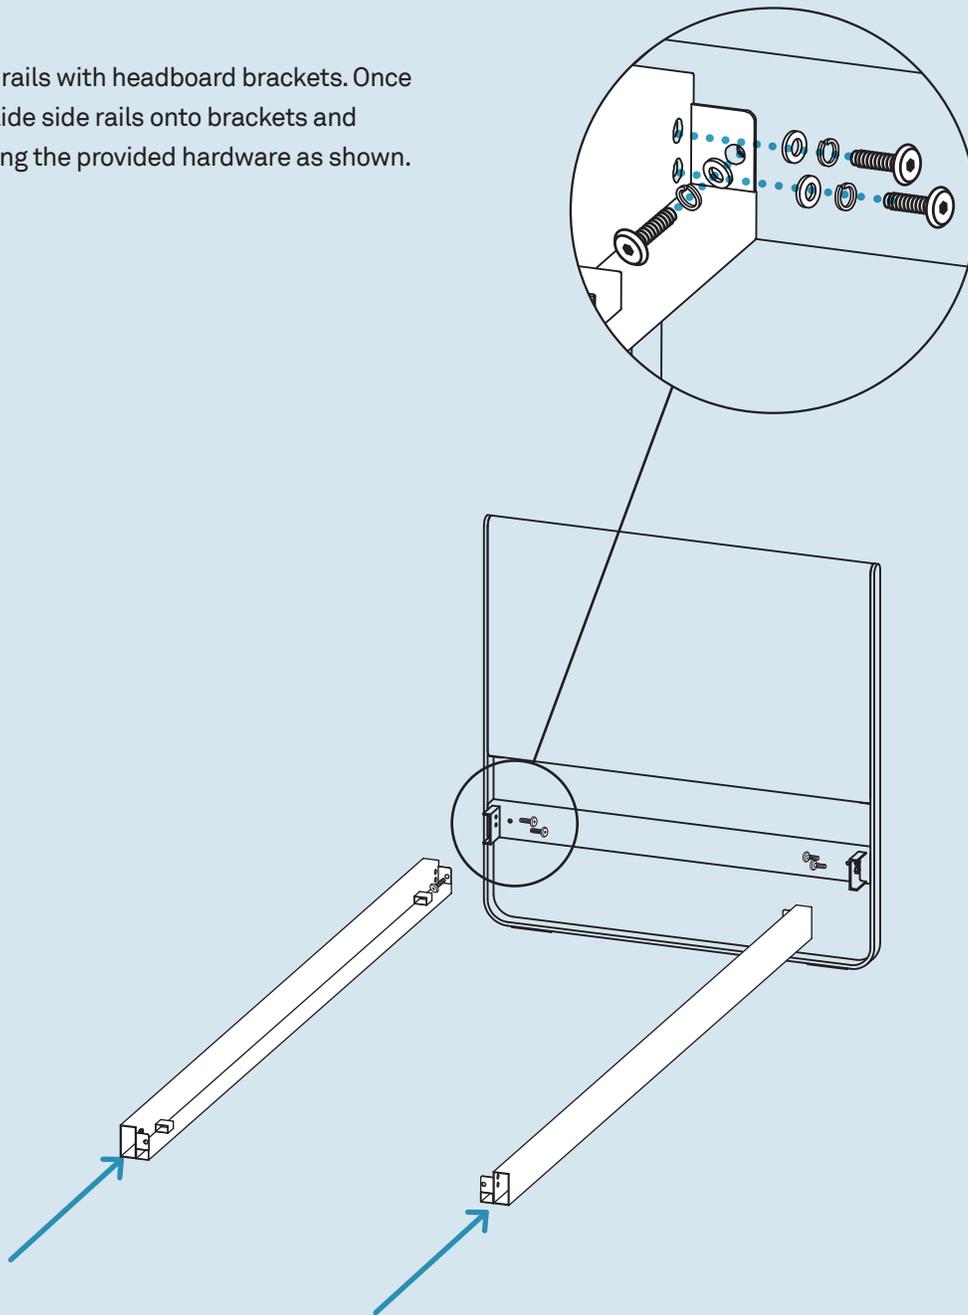

PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6




PT. 9017 x 1

Step 02

ATTACHING THE FOOTBOARD.


Align side rails with footboard brackets. Once aligned, slide side rails onto brackets and attach using the provided hardware as shown.

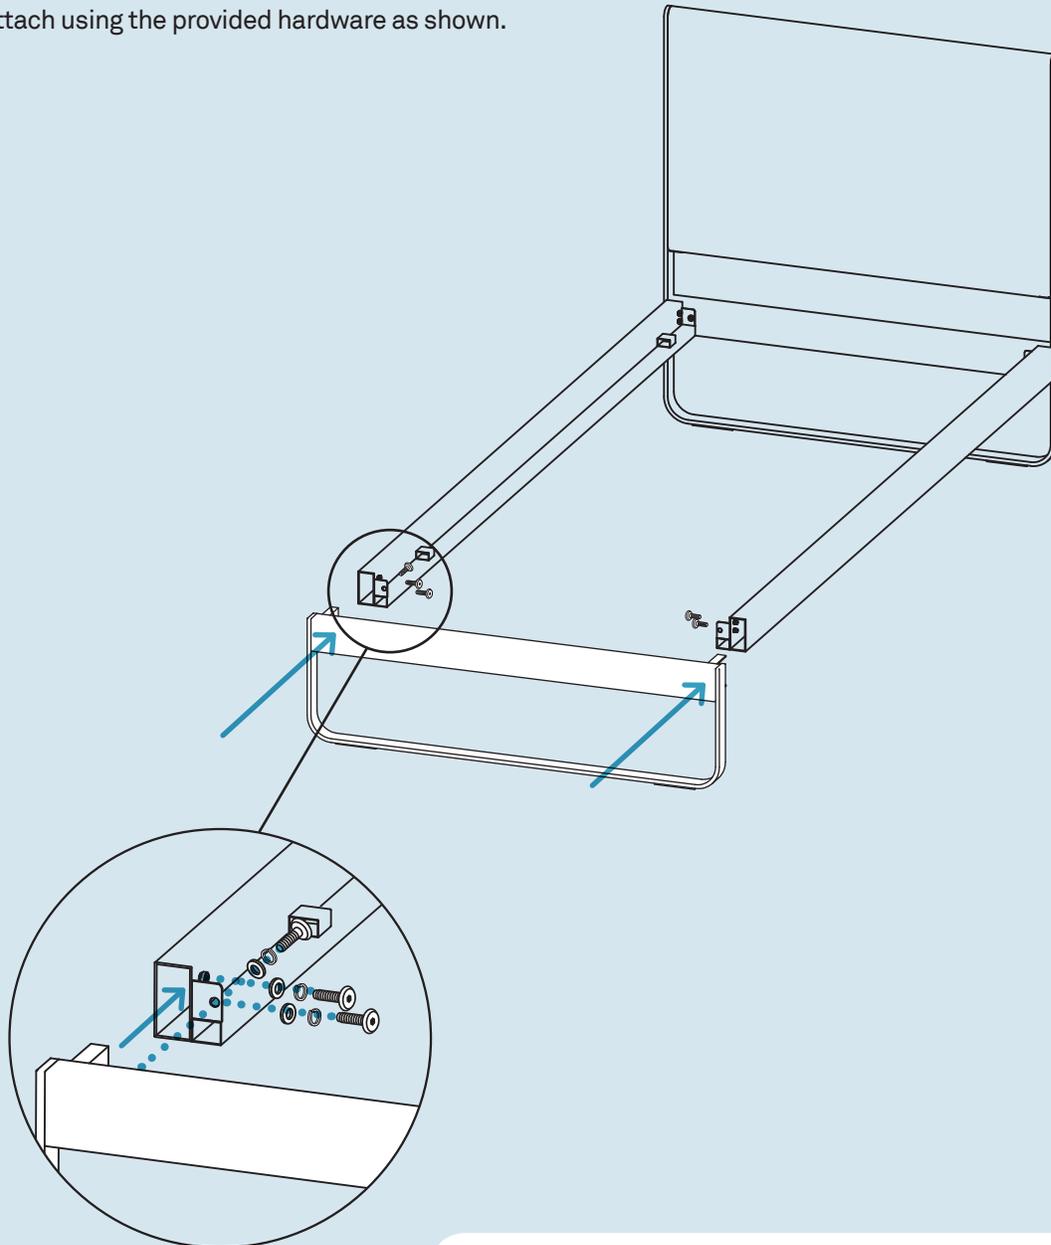

PT. 1680 x 6



PT. 3005 x 6



PT. 3007 x 6







PT. 9017 x 1


Step 03

INSTALLING THE SLATS.

Install slats as shown. Note slat anchor block locations on side rails.

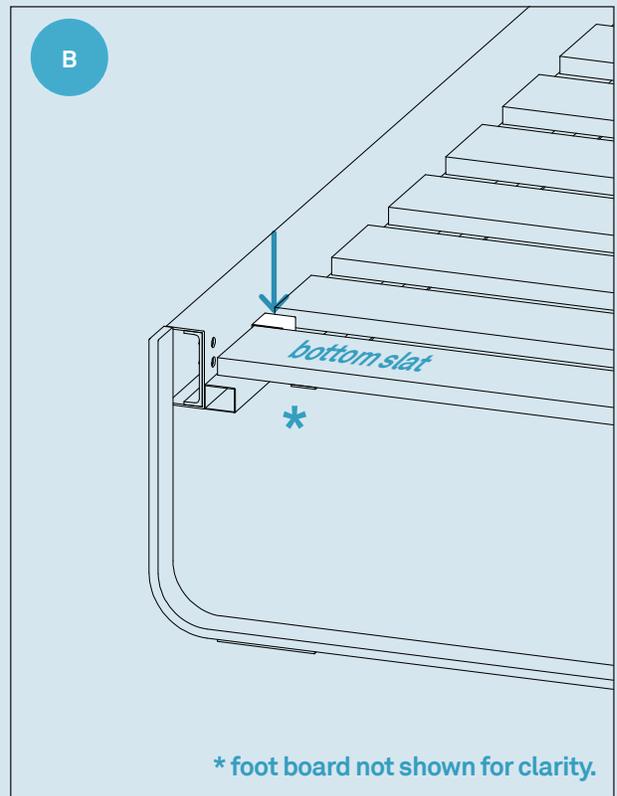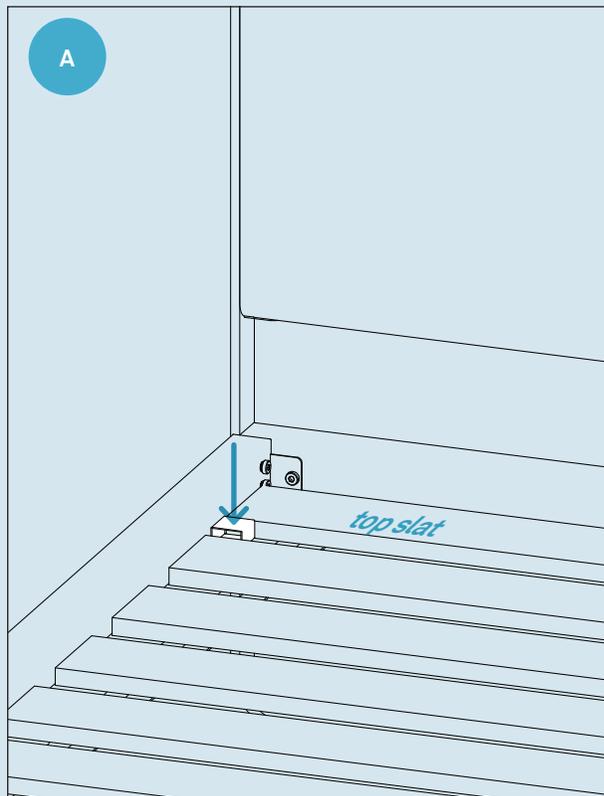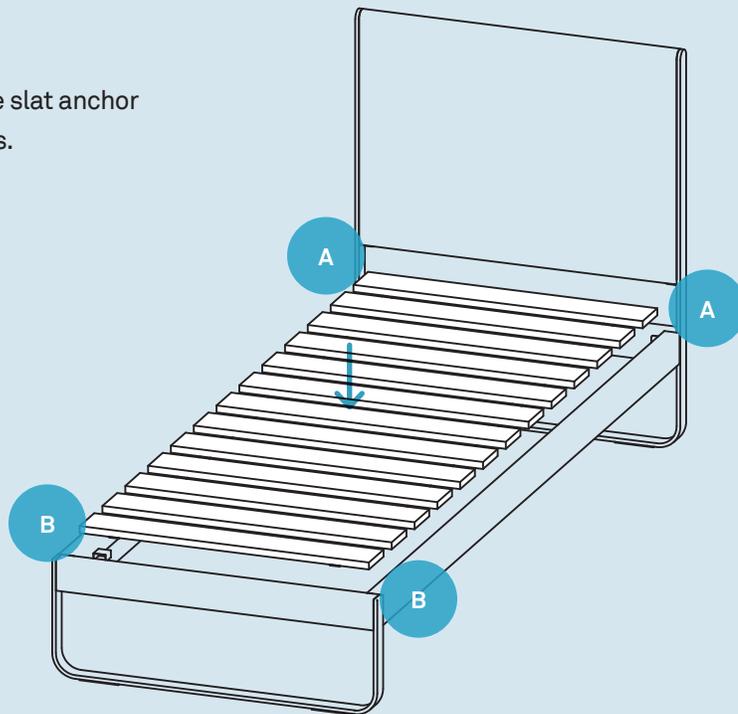





Additional Information

CLEAN

Vacuum your upholstery regularly. For leather furniture dust regularly with a dry cloth.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Never rub the surface. Do not use water or other liquids to clean, as they may cause stains. Consult a commercial cleaning specialist for removal of stubborn stains.

AVOID

Keep furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may cause color fading. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent surface indentations. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.

