


# Mode Small Mirror

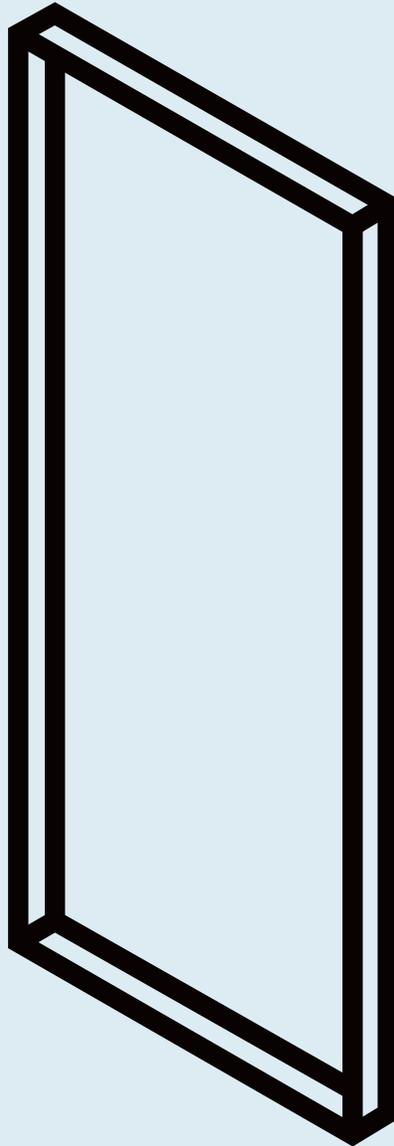

DESIGNED IN 2022

ASSEMBLY NOTES | REV 01




NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or  
**844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow  
along on Instagram for some sneak peeks into the process.


# Parts & Hardware

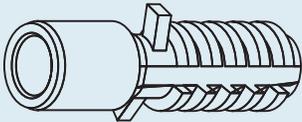

QTY

3


PT. 8036



QTY

3


PT. 1230



QTY

1

Wall Cleat

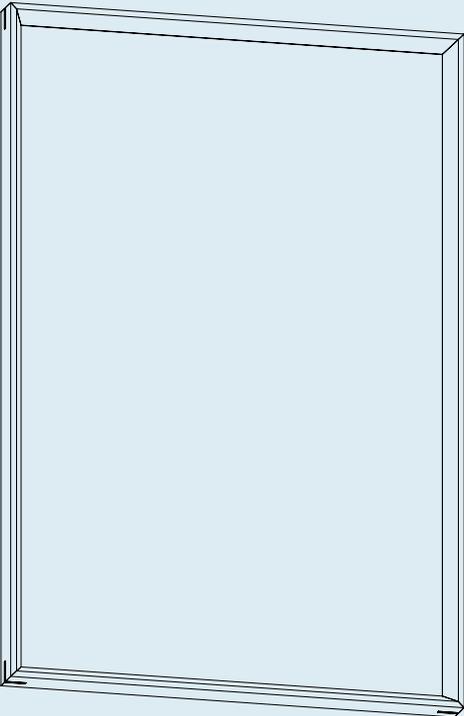

QTY

1

Mirror

# Step 01

## ATTACH WALL CLEAT.



Wall anchors and fasteners are included for installation. Please consult your local hardware professional to determine the hardware best suited for your wall type.

The mirror can be oriented vertically or horizontally. Position the top of the wall cleat 4" lower than your desired height of the mirror and mark mounting locations with a pencil. Use a leveling device to ensure the cleat is level.

If the mounting locations are not positioned on a stud, drill a  $\frac{23}{64}$ " hole in the marked location and insert wall anchor. If the mounting locations are located on a stud, this step of installing an anchor may be skipped. Instead, drill a  $\frac{3}{32}$ " pilot hole in the marked position.

Attach wall cleat using provided fasteners as shown.


Desired Height  
4 in. lower

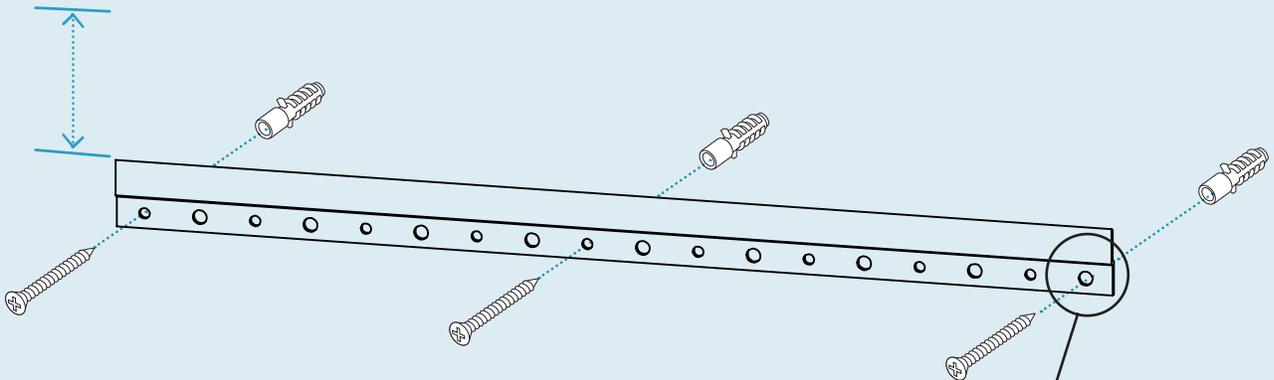

PT. 8036 x 3\*



PT. 1230 x 3

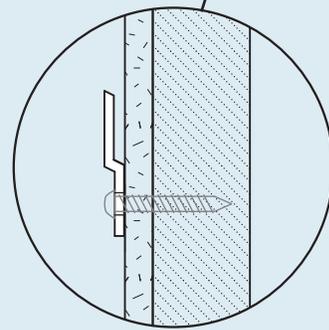


Wall

## Step 02

### HANGING THE MIRROR.



Place mirror against the wall above the wall cleat. Carefully slide mirror down along the wall until it engages with the wall cleat as shown.

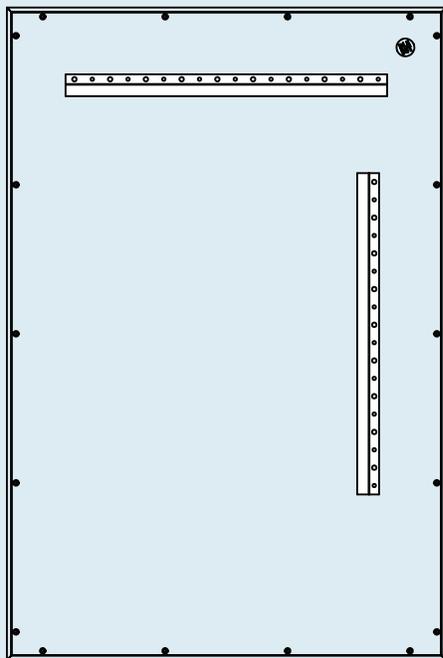

Rear View



Side View

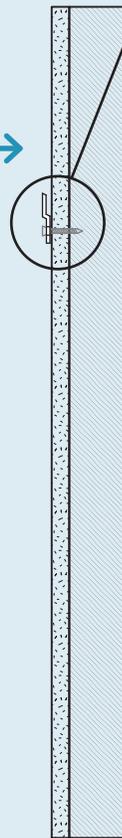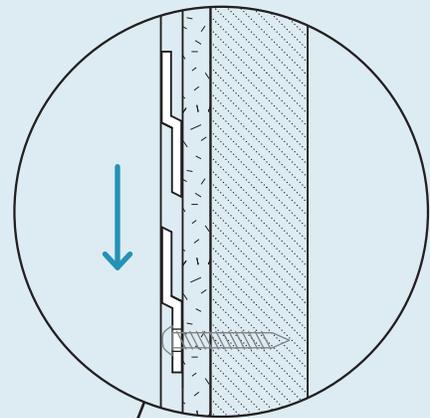

Wall

## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for glass and wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.