
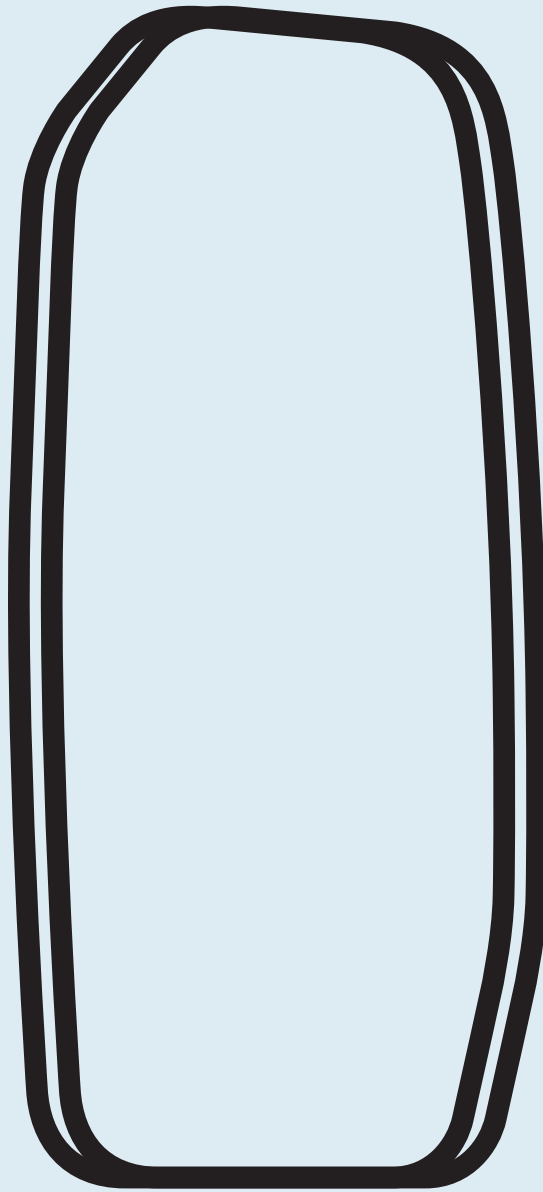


Mojo Mirror

DESIGNED IN 2023

ASSEMBLY NOTES | REV 00

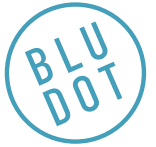


NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 4

Bracket Screw

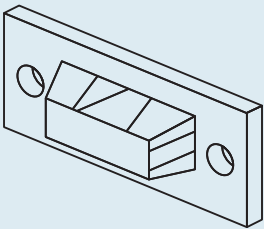


QTY 2

Anti-tip Bracket

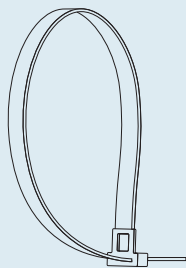


QTY 2

Anti-tip Strap

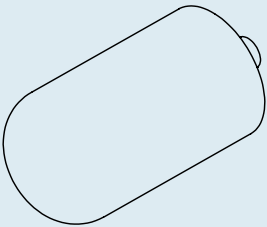

QTY 2

Bumper

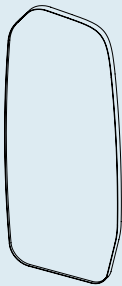



QTY 1

Mirror

Step 01

INSTALL BUMPERS TO MIRROR.

Thread the provided bumpers into the rear of the mirror.

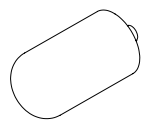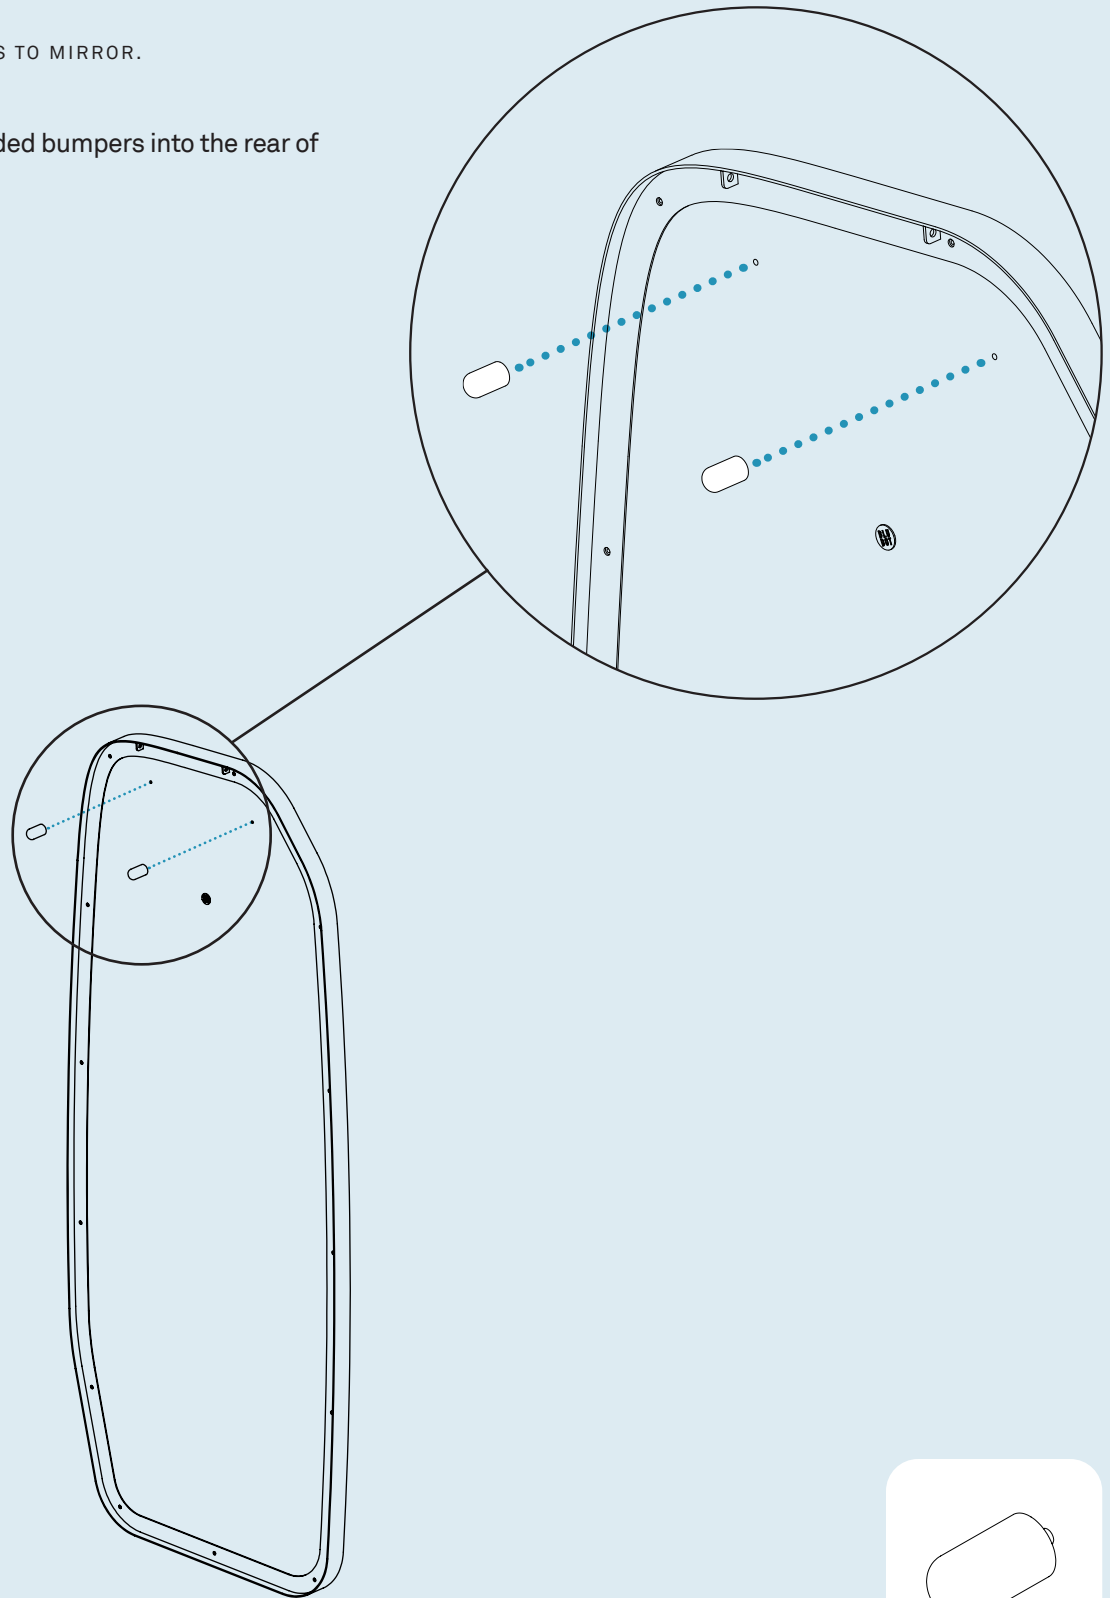




Bumper X 2

Step 02

INSTALL ANTI-TIP KIT.

Anchor the anti-tip brackets to your wall stud 1-inch below the top of the mirror using the provided screws.


Thread the anti-tip strap through the bracket and the metal rings on the back of the mirror to secure it in place.

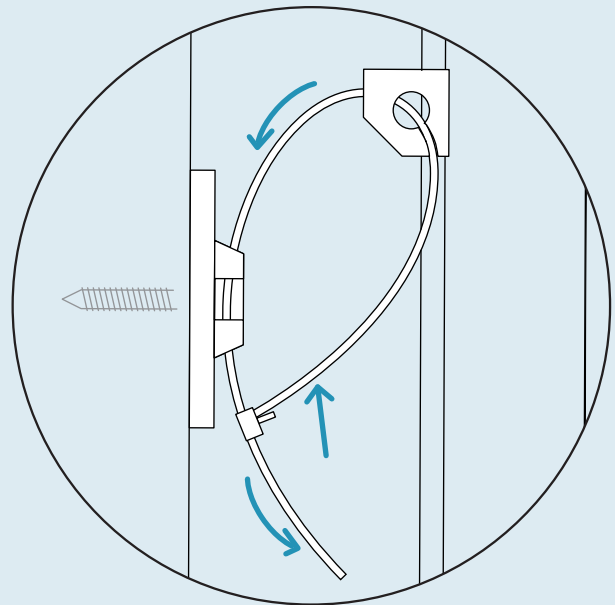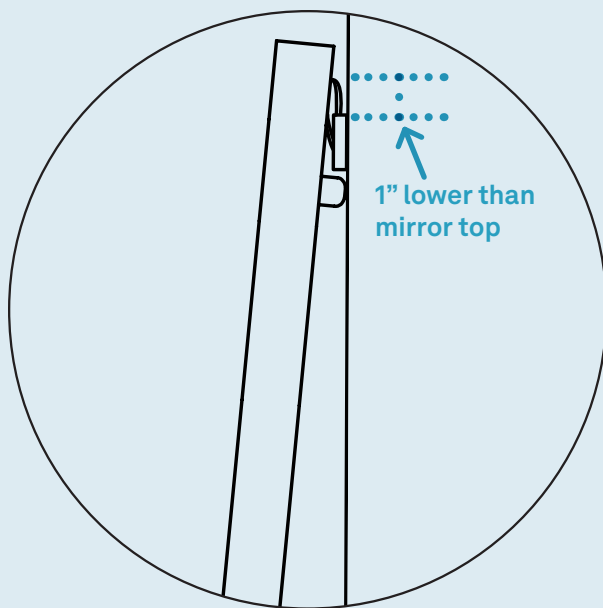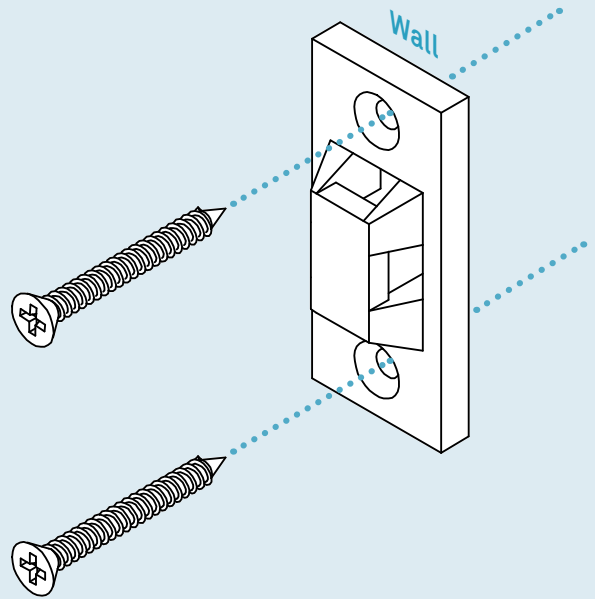


Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for metal and glass furniture. Wipe completely dry with a soft cloth.

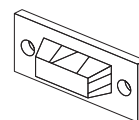

Anti-tip Bracket X 2



Anti-tip Strap X 2