
Nook Bed Collection

DESIGNED IN 2011

ASSEMBLY NOTES | REV 06

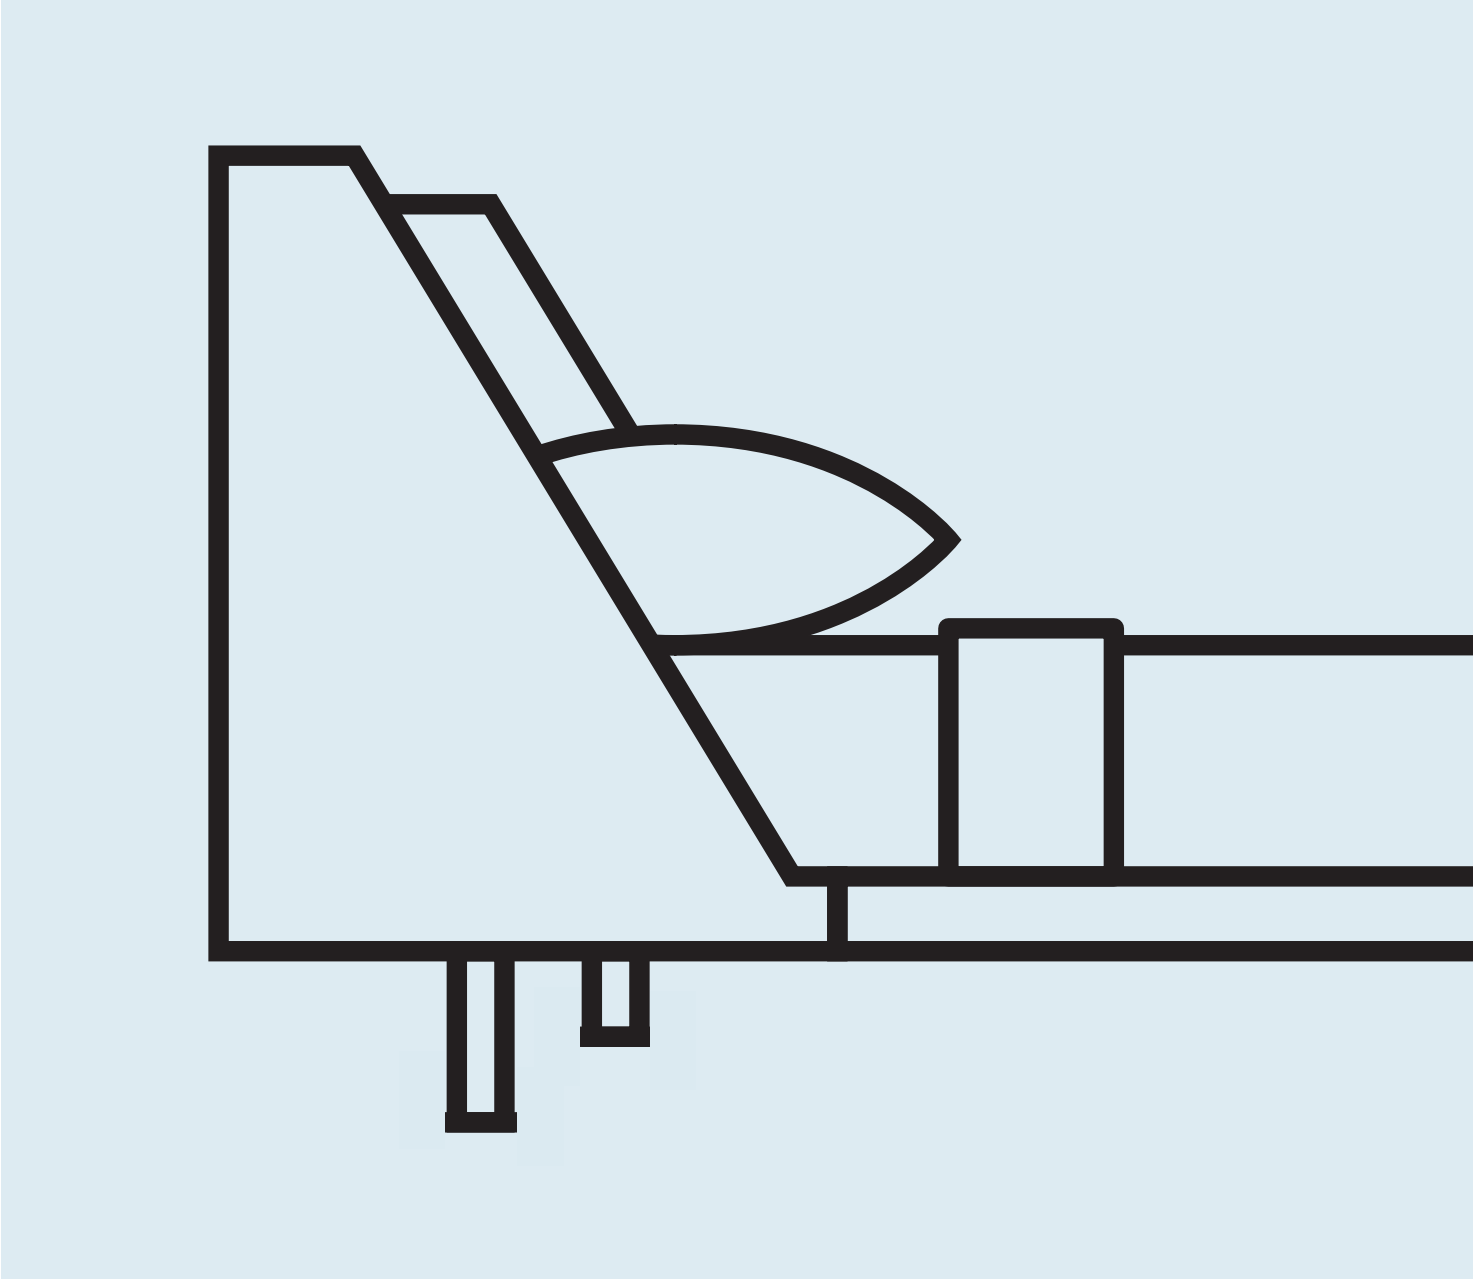


NEED A HAND?

Contact us at **service@bludot.com** or **844.425.8368** for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

Parts & Hardware

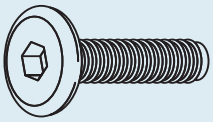

QTY 20

M6 x 40mm Bolt




QTY 4

M6 x 35mm Bolt




QTY 4

Corner Leg



QTY 1

Pt. 9016

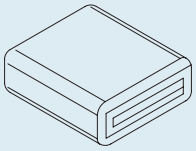


QTY 1*

Slip Cover




QTY 2

Adjustable Leg

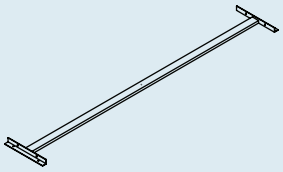


QTY 1

Center Rail

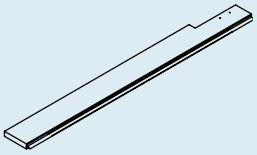


QTY 1

Left Side Rail

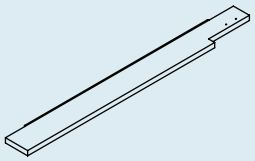


QTY 1

Right Side Rail

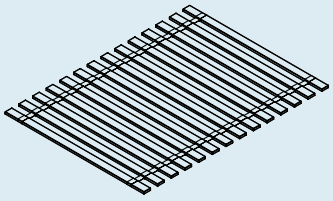


QTY 1

Slats

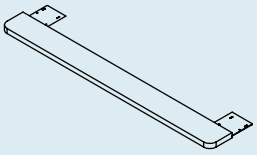

QTY 1

Footboard

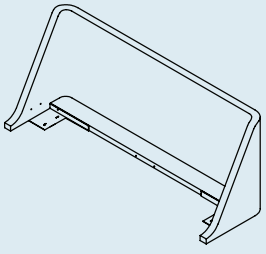

QTY 1

Headboard

*Leather versions of this bed do not include a slip cover.


Step 01


INSTALL LEGS.

Assemble the bed on a soft, clean surface with the assistance of another individual.

Attach legs to headboard, footboard, and center rail by threading them into place as shown.

*** The center rail legs are adjustable.**

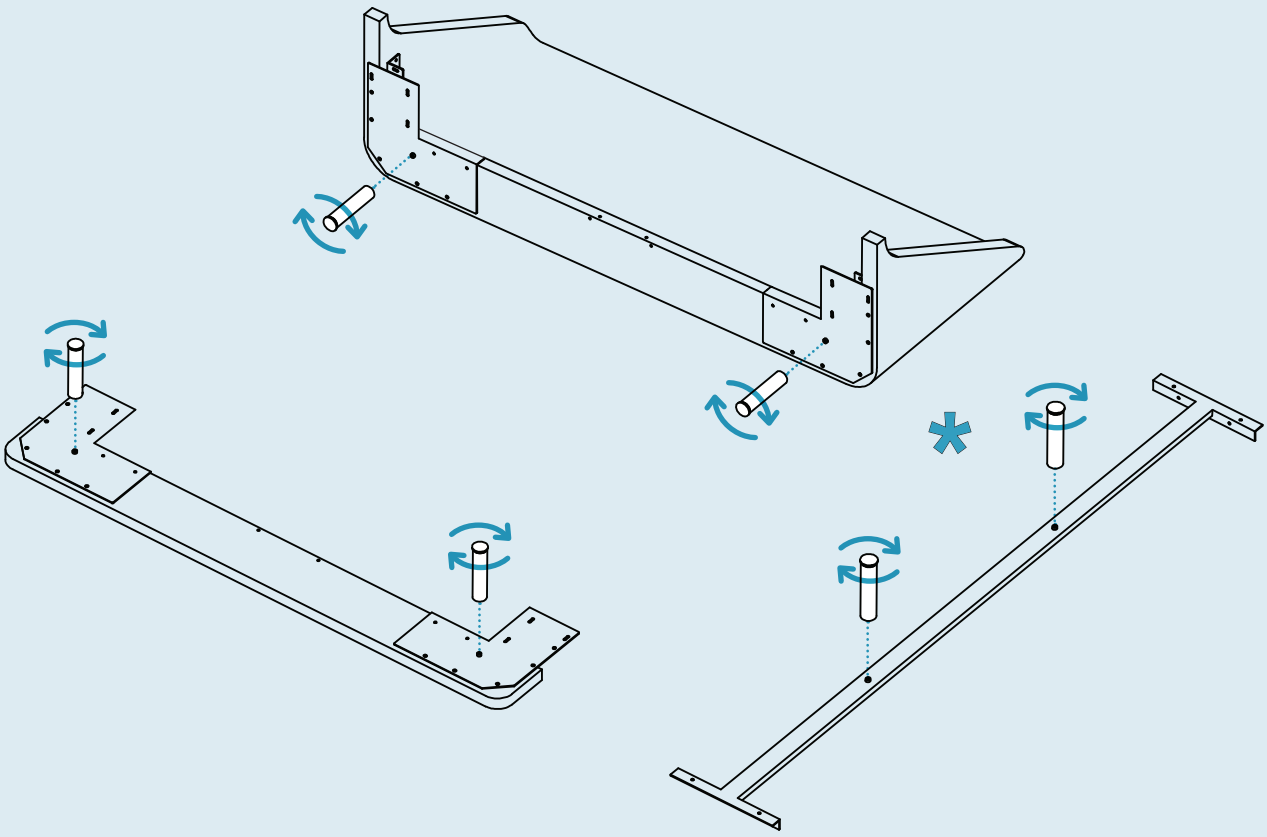

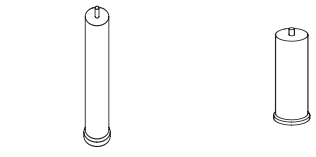


Corner Leg x 4

Adjustable Leg x 2

Step 02

ALIGN BED PARTS.


Carefully align parts in place as shown.

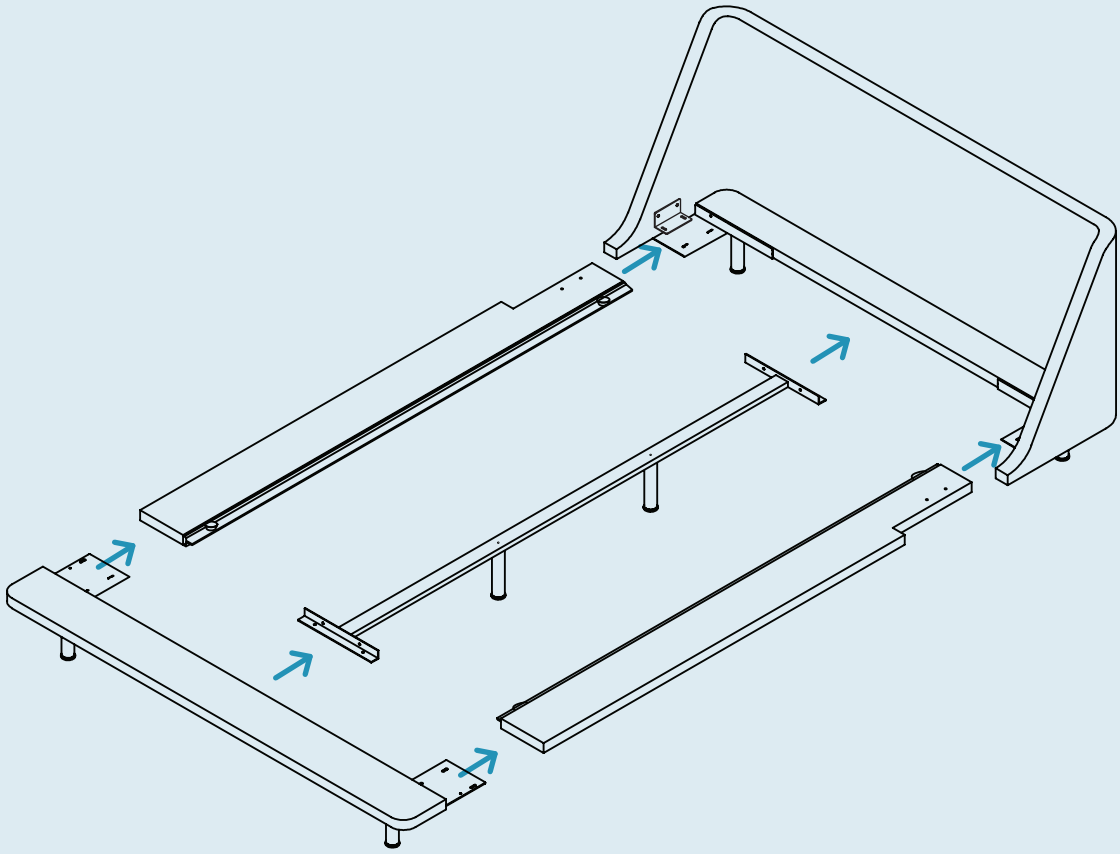


Step 03

SECURE PARTS IN PLACE.

Secure the angled headboard bracket to the side rails with the 4 shorter bolts, then secure the corner brackets underneath using the provided hardware as shown. The center rail attaches with two bolts from the underside of the headboard and footboard.

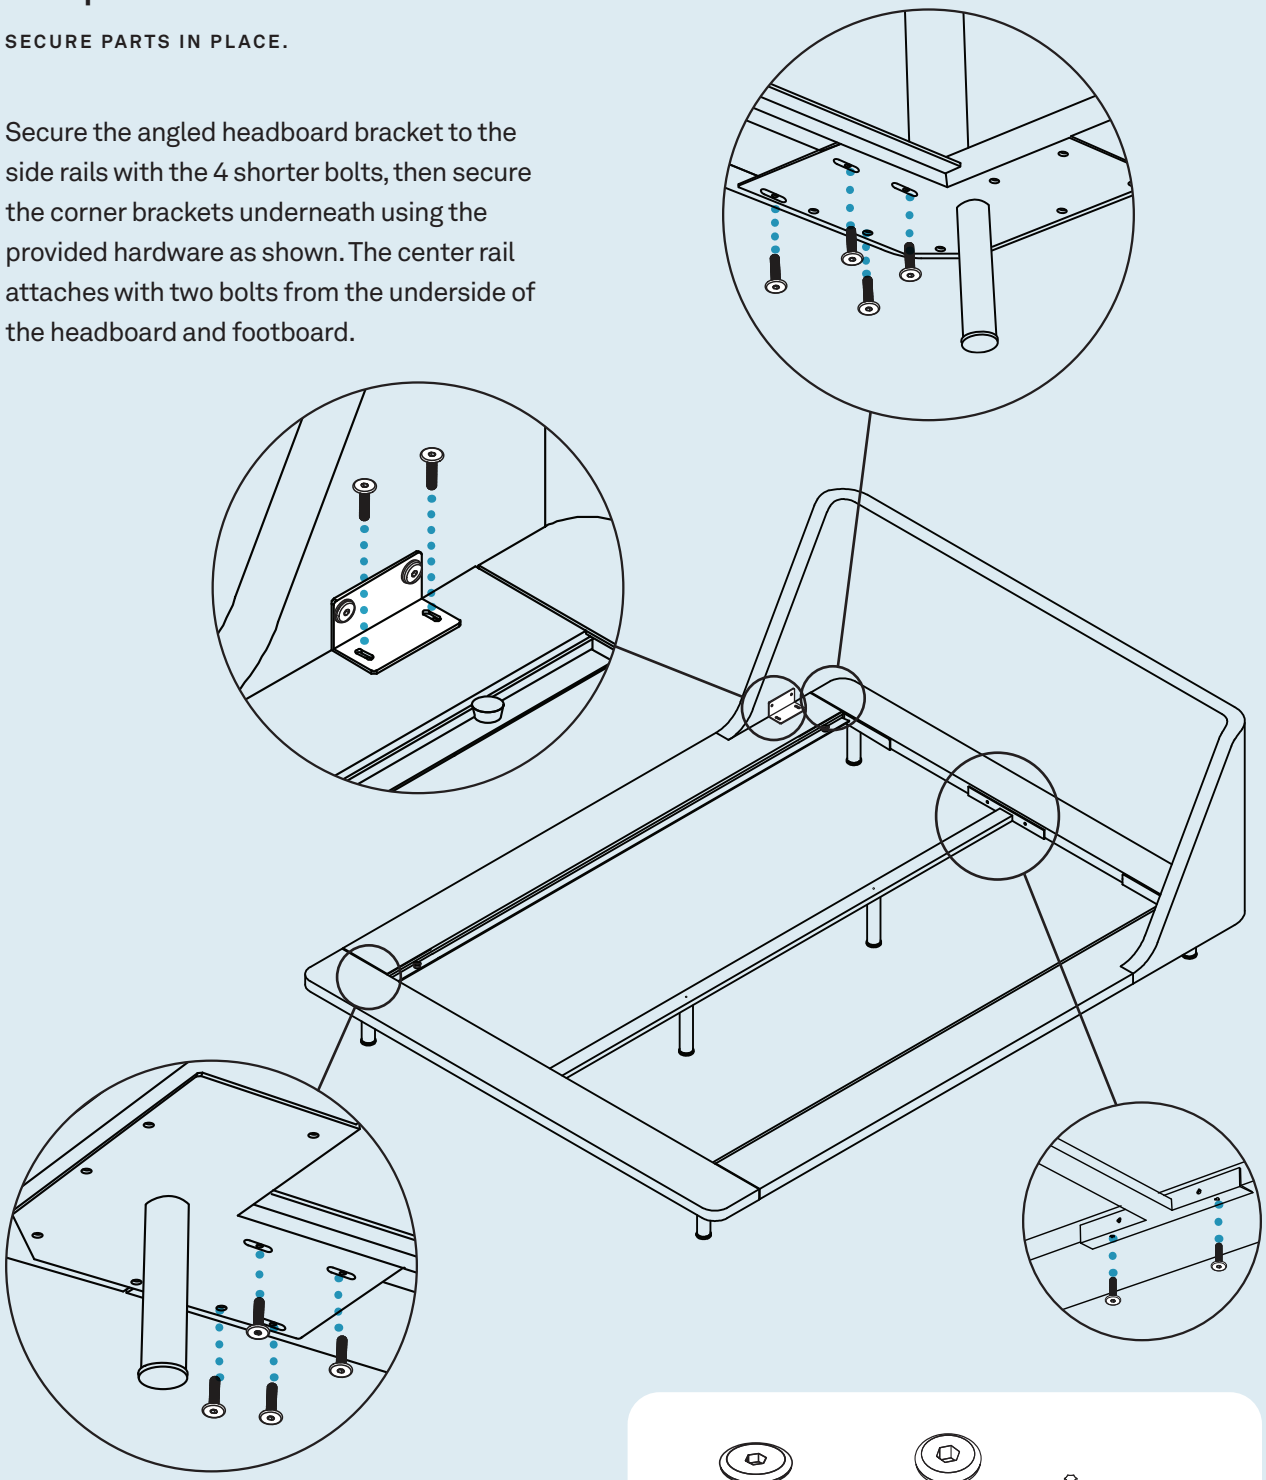

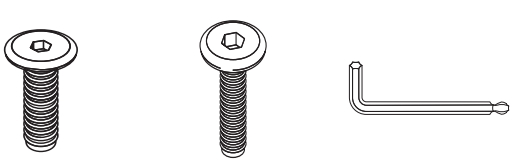

M6 x 35mm Bolt x 4

M6 x 40mm Bolt x 20


PT. 9016 x 1

Step 04

ATTACH SLIP COVER.

Starting at headboard, secure hook and loop fasteners between side frame rails and headboard. Continue toward footboard keeping edges smooth and in line with frame edges.


Note: Skip this step for leather versions of this bed.

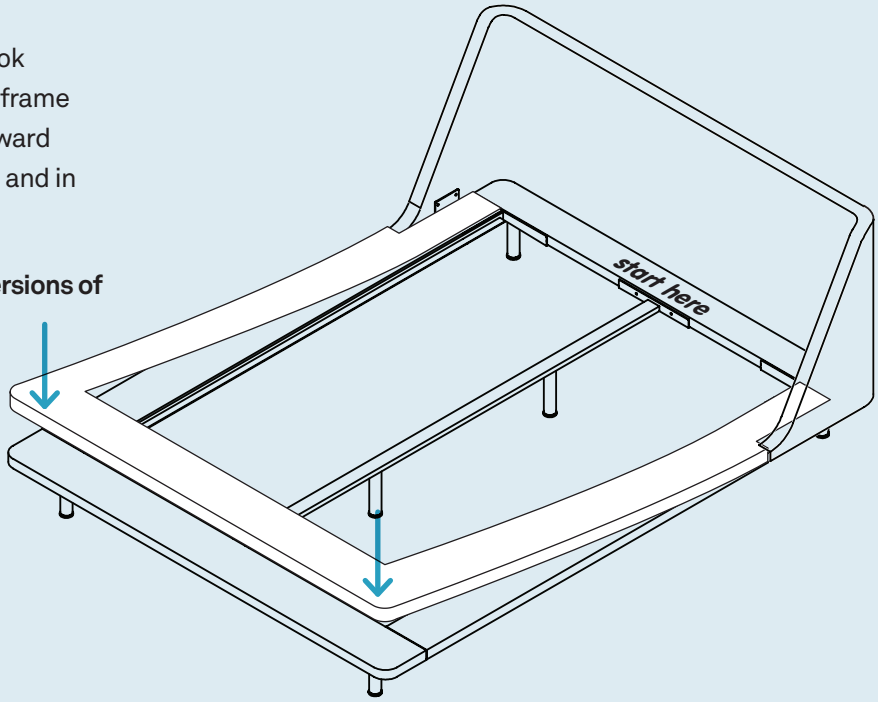

Step 05

ENSURE BED IS LEVEL.


Adjustable glides are located at the bottom of the center legs. Turn adjustable glides clockwise or counterclockwise as needed to level bed.

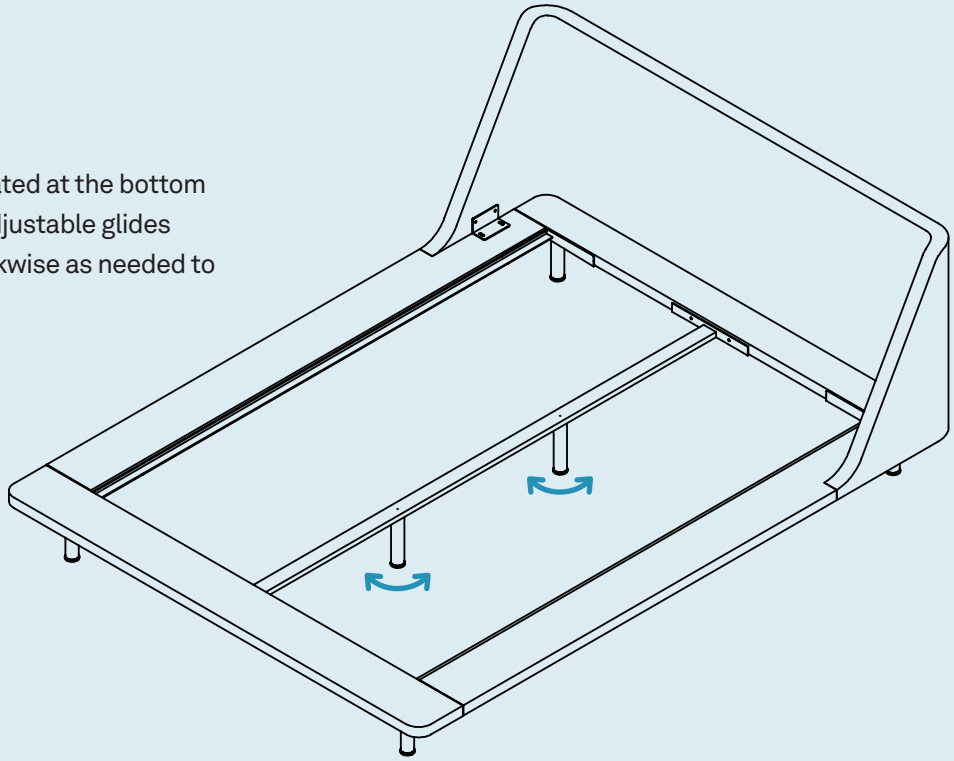

Step 06

INSTALL SLATS.

Starting at the headboard, unroll slats along frame. Ensure first and last slat are secured by metal blocking.

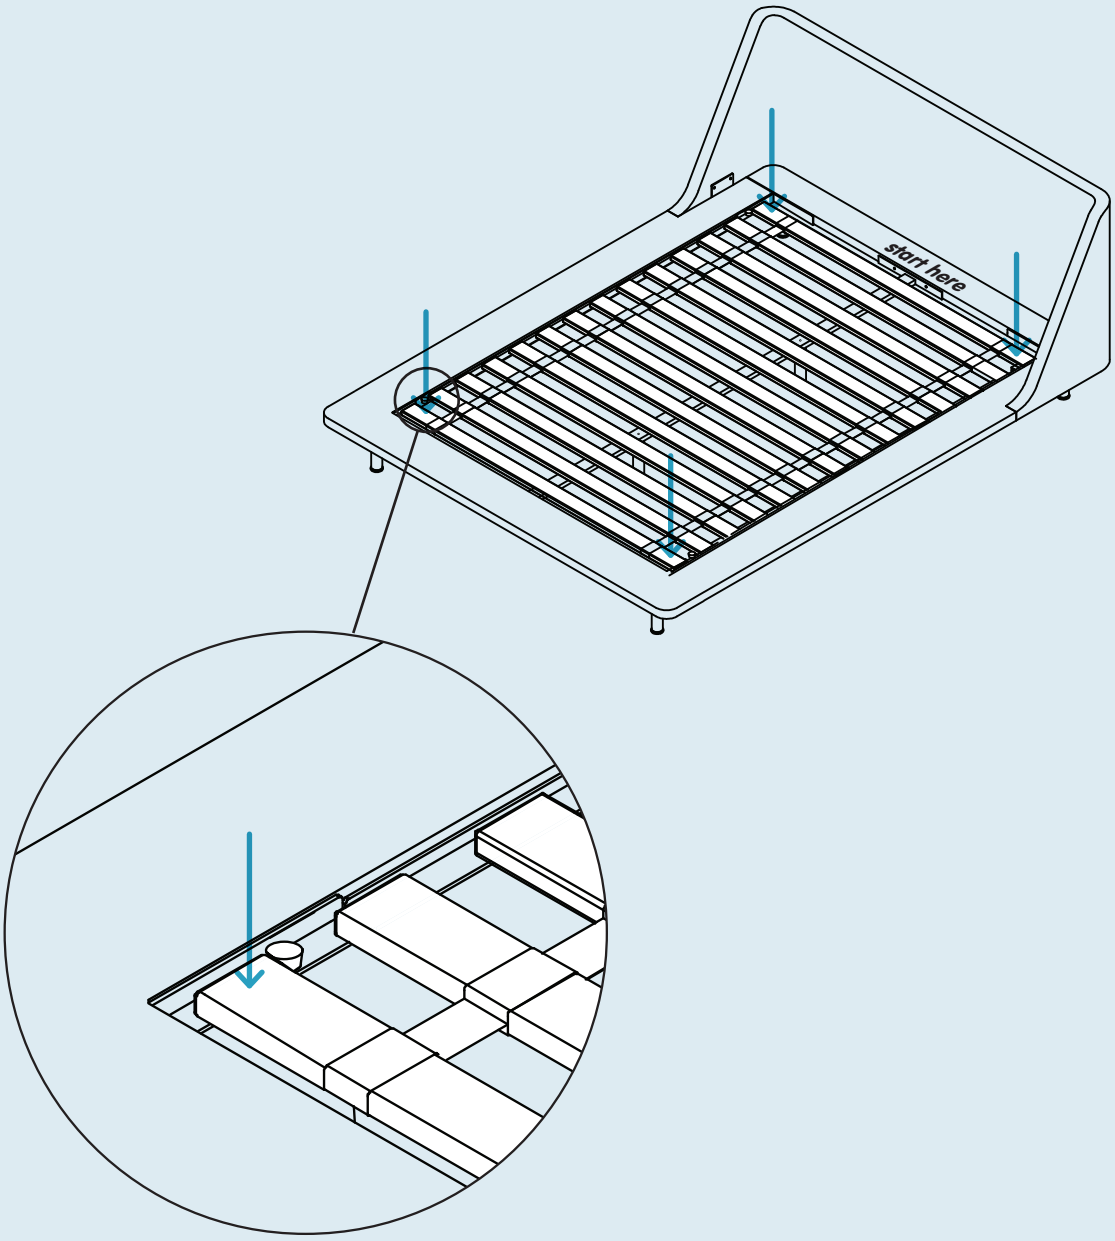

Additional Information

CLEAN

Vacuum your upholstery regularly. Dust leather surfaces regularly with a dry cloth.

SPILLS

Act quickly with spills. Absorb the spill with a clean white cloth or paper towel. Gently wipe the surface with a damp, soft cloth if needed. Consult a commercial cleaning specialist for removal of stubborn stains.

MAINTAIN LEATHER

Use a leather conditioner as needed, testing it in an inconspicuous first. Scratches on the surface may be buffed out using a finger.

AVOID

Keep upholstery, felt, and leather furniture out of direct sunlight and away from heat sources; excessive exposure to sunlight may fade the color of the upholstery. Avoid placing heavy or sharp objects on the furniture surface for long periods of time; this can cause permanent indentations in the fabric. For snags in the fabric, tuck loose threads into fabric or carefully push to reverse side. Never pull out or cut off loose threads.