



Series 11 5 Drawer Dresser

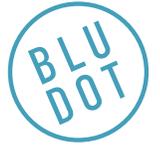

DESIGNED IN 2005

ASSEMBLY NOTES | REV 00

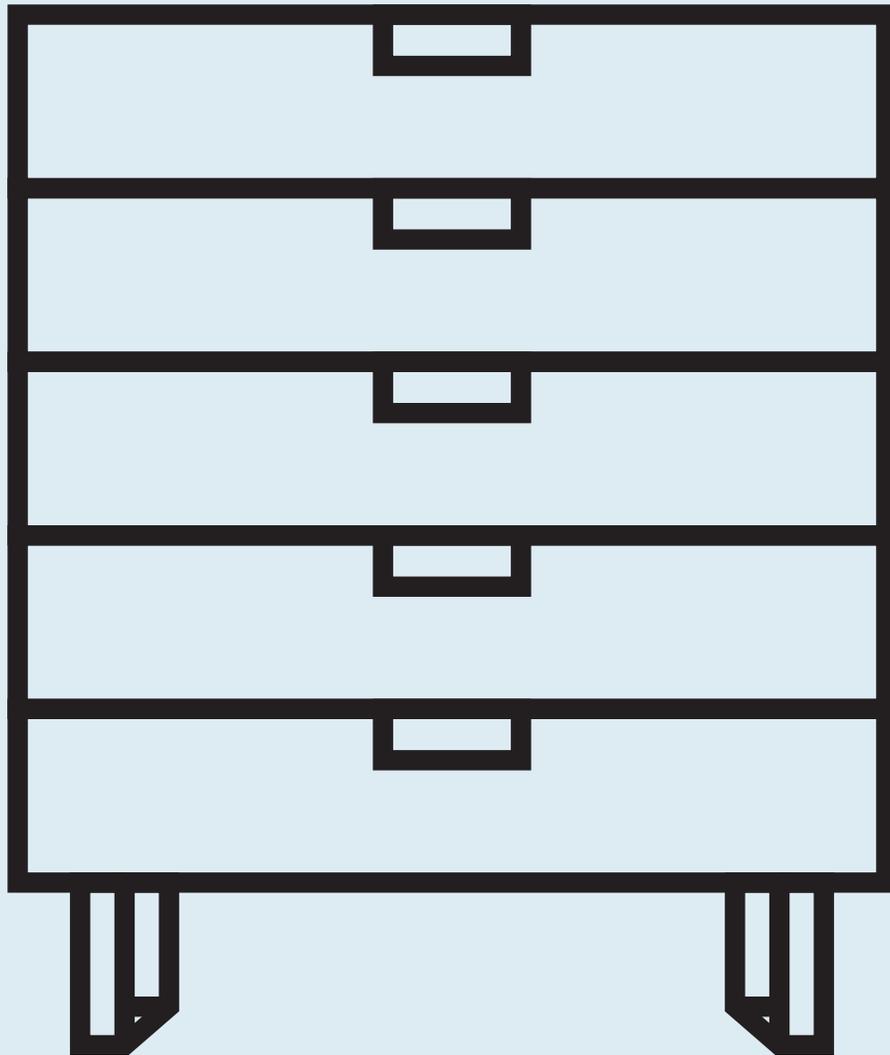

STASH YOUR SKIVVIES IN STYLE.

An elegant and refined approach with thin edges and thoughtful proportions. Series Eleven. When ten just isn't quite enough.

NEED A HAND?


Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware



QTY 8

Pt. 1051




QTY 6

Pt. 1052




QTY 2

Pt. 1218



QTY 2

Pt. 1217

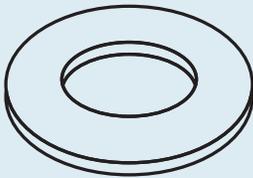


QTY 6

Pt. 3002




QTY 1

Pt. 9004

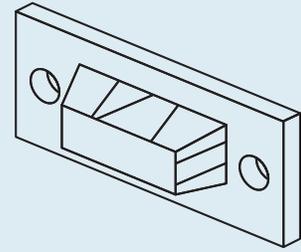


QTY 2

Pt. 8041

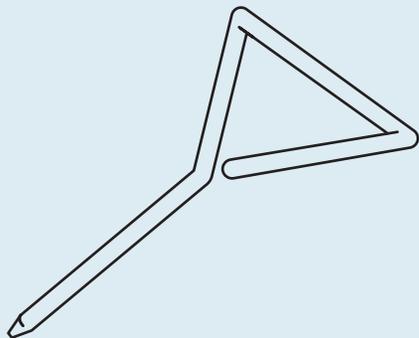

QTY 1


Pt. 9009

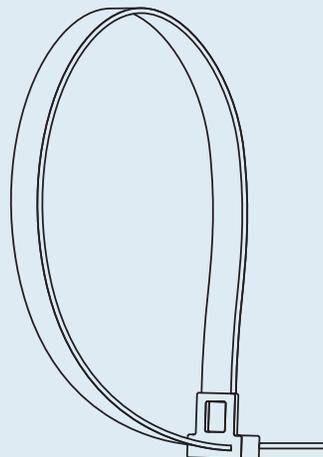

QTY 1


Pt. 8042

Parts & Hardware

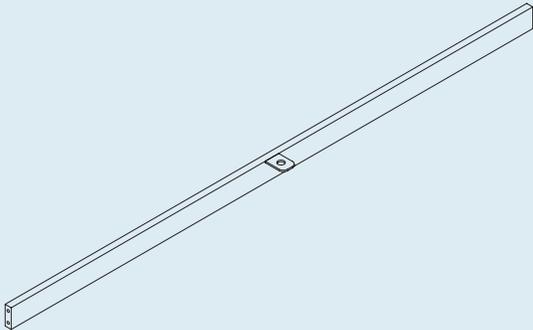

QTY 2

Center support

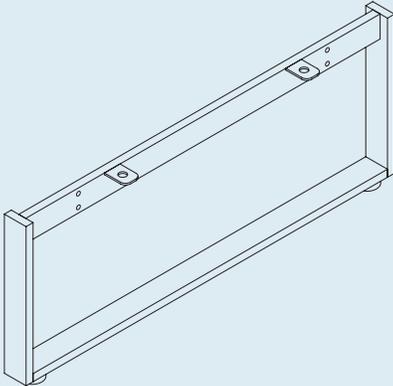

QTY 2

Legs




QTY 1

Case


Step 01

ATTACH THE SUPPORTS.

Attach center supports to legs using provided hardware as shown.

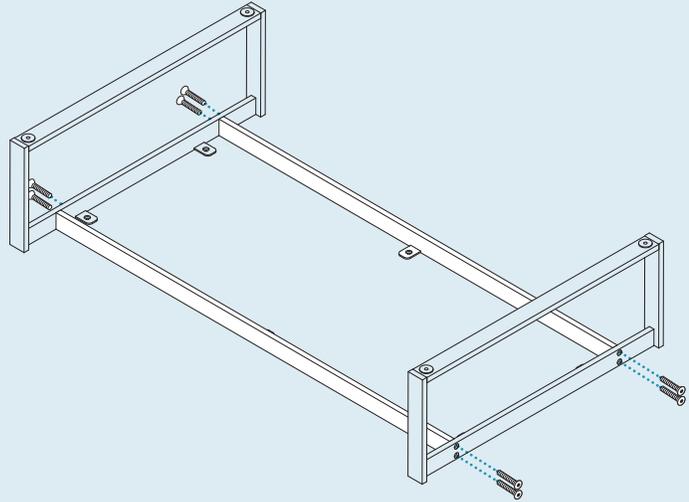

1051 x 8

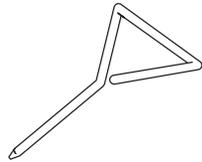


9009 x 1


Step 02

ATTACH THE LEGS.

After the legs have been attached, have a second person help lift and bring the case upright in order to prevent leg damage.

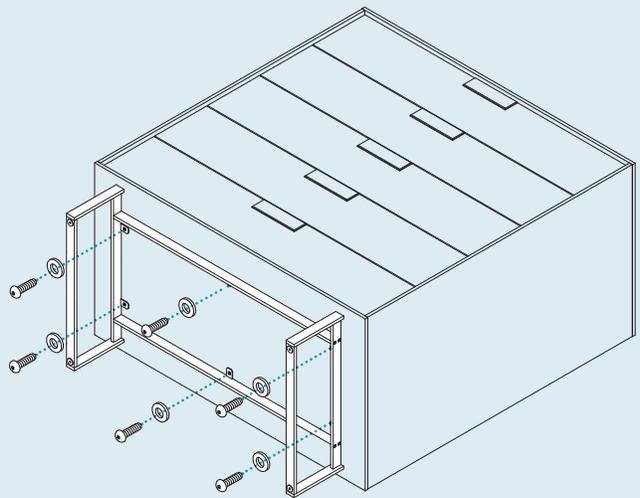

1052 x 6



3002 x 6




9004 x 1

Step 03

REMOVING THE DRAWER.


Extend the drawer completely. Squeeze both locks on the underside of the drawer while pulling the drawer out.

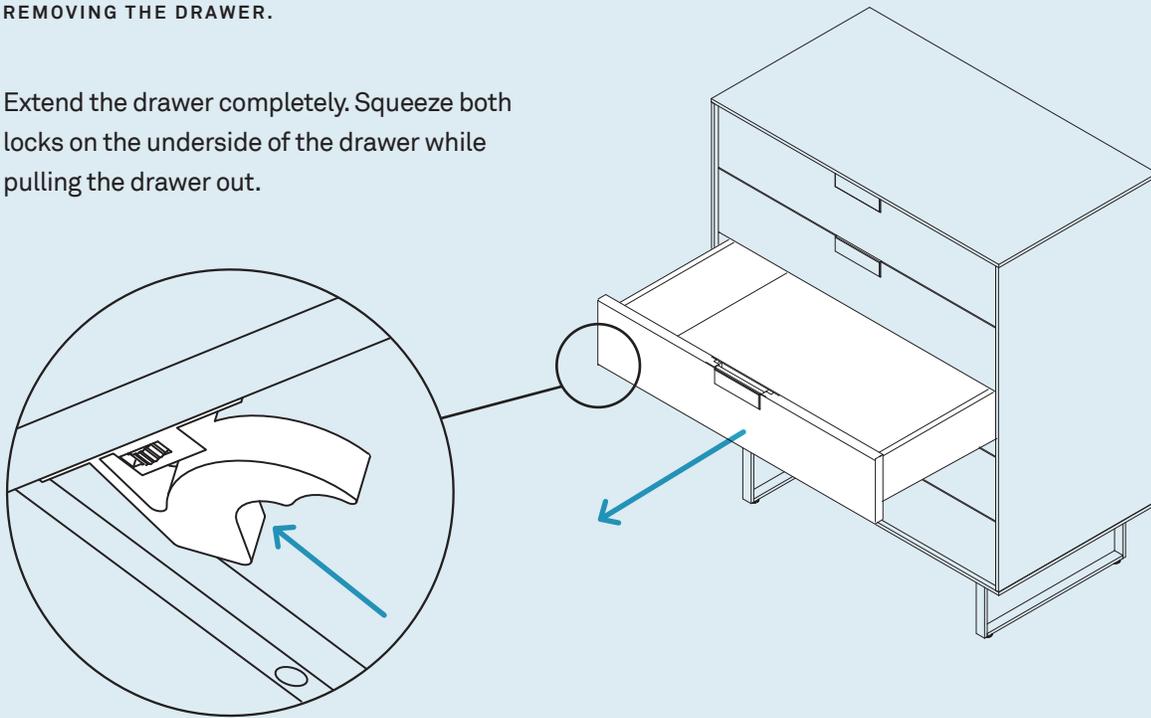

Step 04

REINSTALLING THE DRAWER.



Pull both sides Forward. Engage rear slide catches. Lower drawer front into place and push closed.

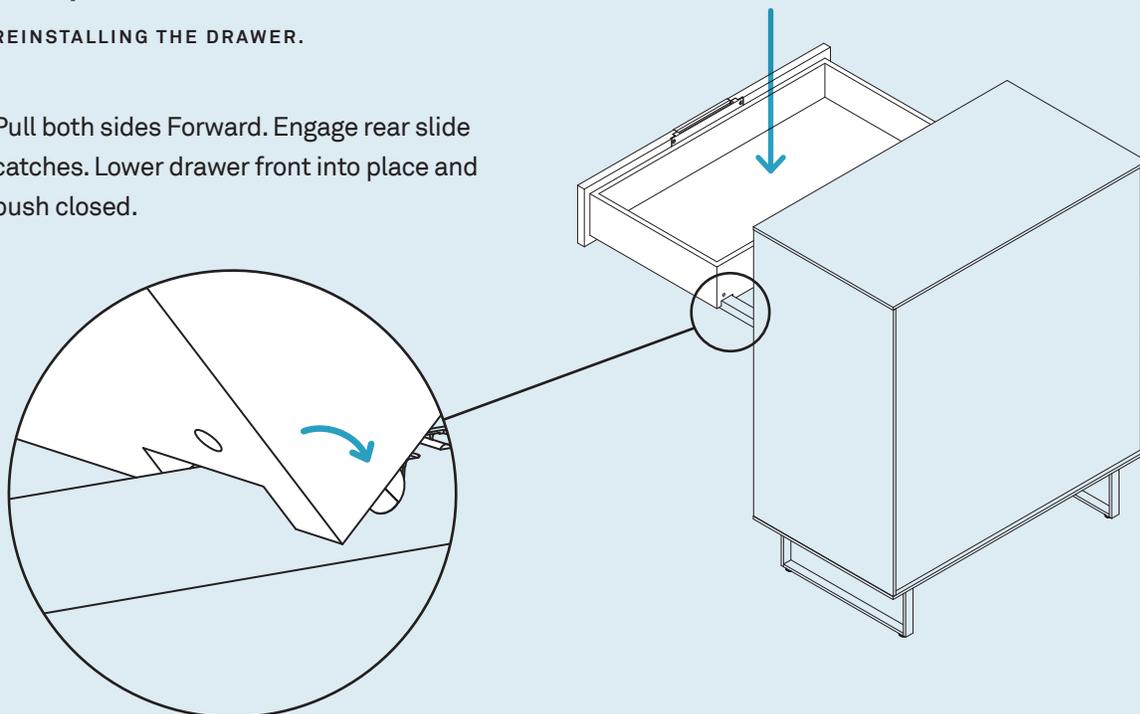

Step 05

ATTACH ANTI-TIP BRACKET TO THE WALL.



Install anti-tip bracket to wall stud 1-inch below case top panel height.

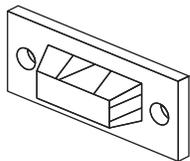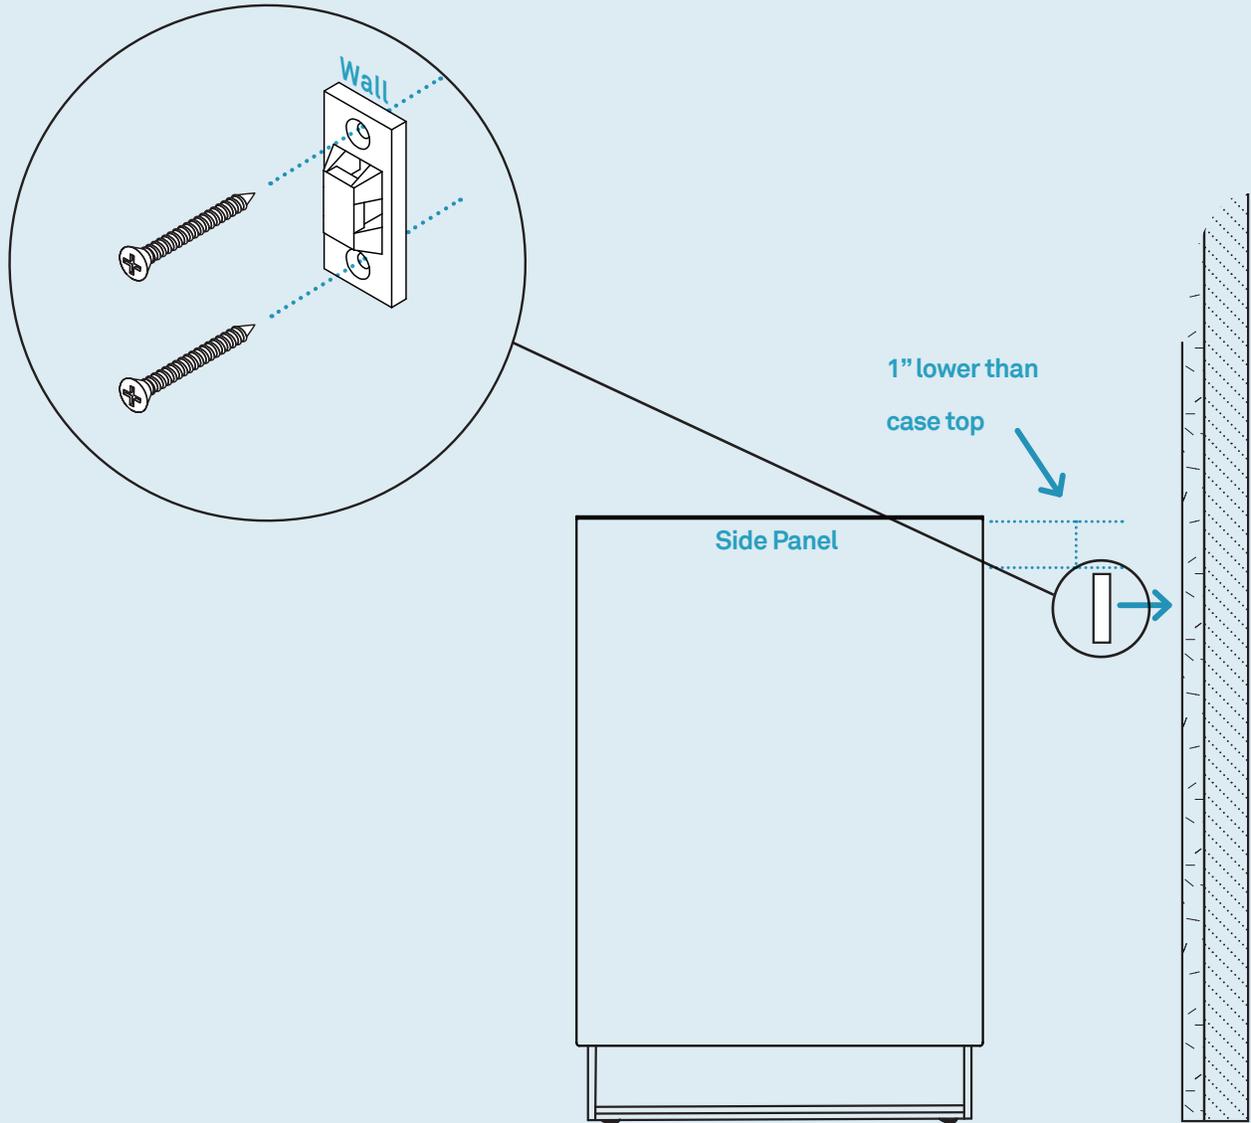


Step 06

INSTALL ANTI-TIP BRACKET TO CASE.

Bracket must be installed to top panel of case. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

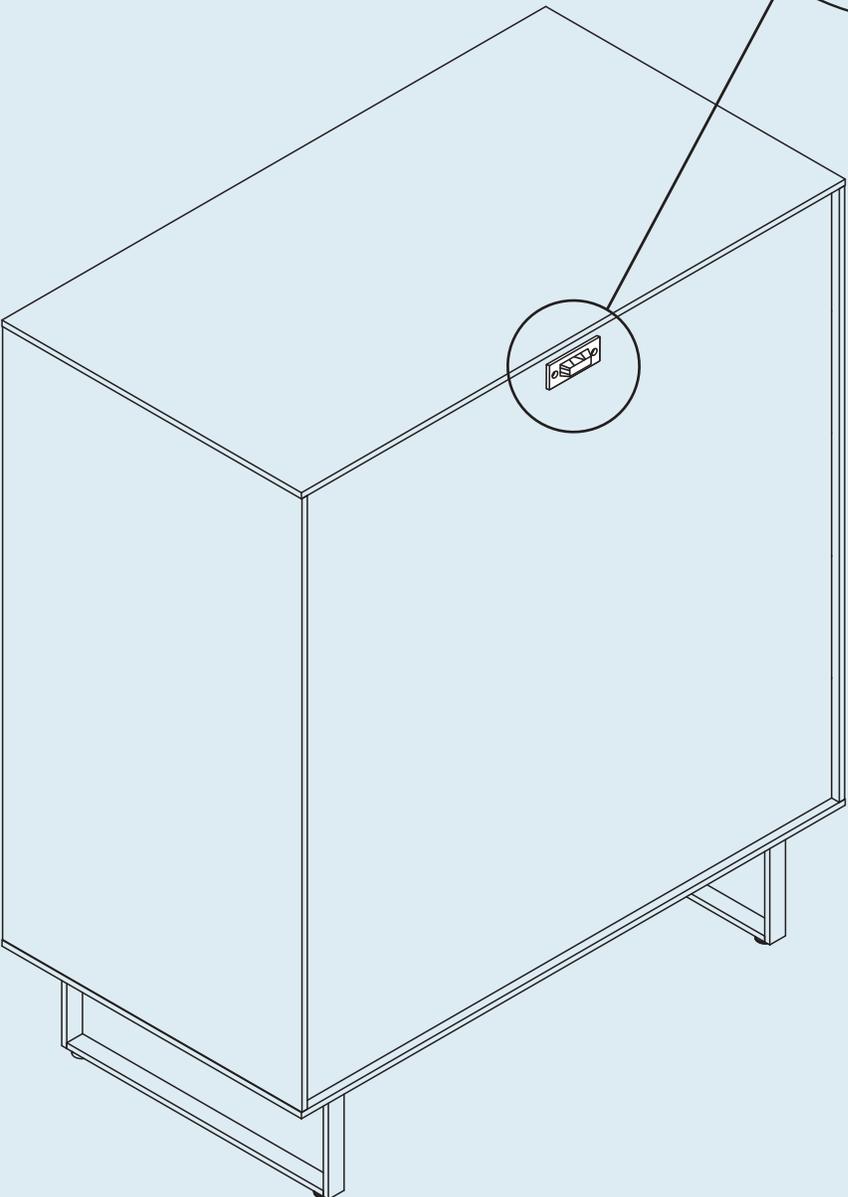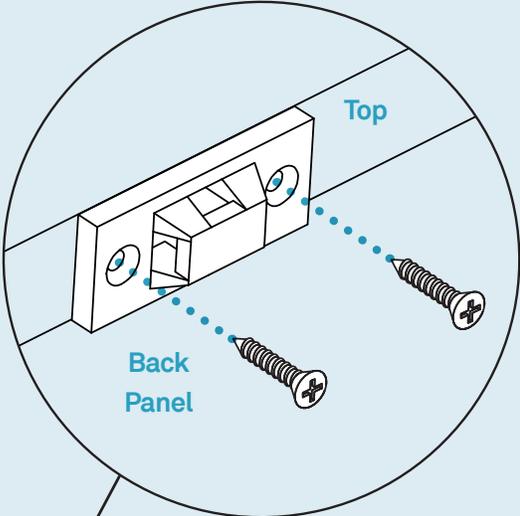

PT. 1218 X 2





PT. 8041 X 1

Step 07

SECURE THE CASE.

Install and tighten the strap prior to using the product.

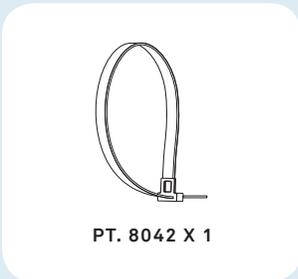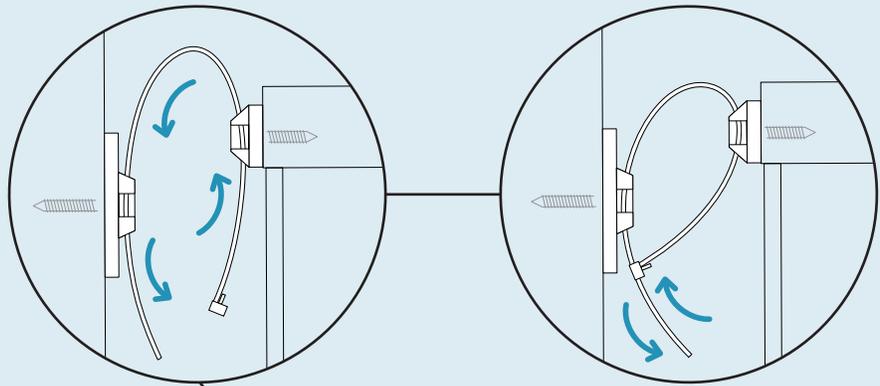

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulate for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

