



Splash Coat Rack

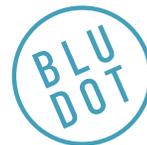

DESIGNED IN 2010

ASSEMBLY NOTES | REV 00

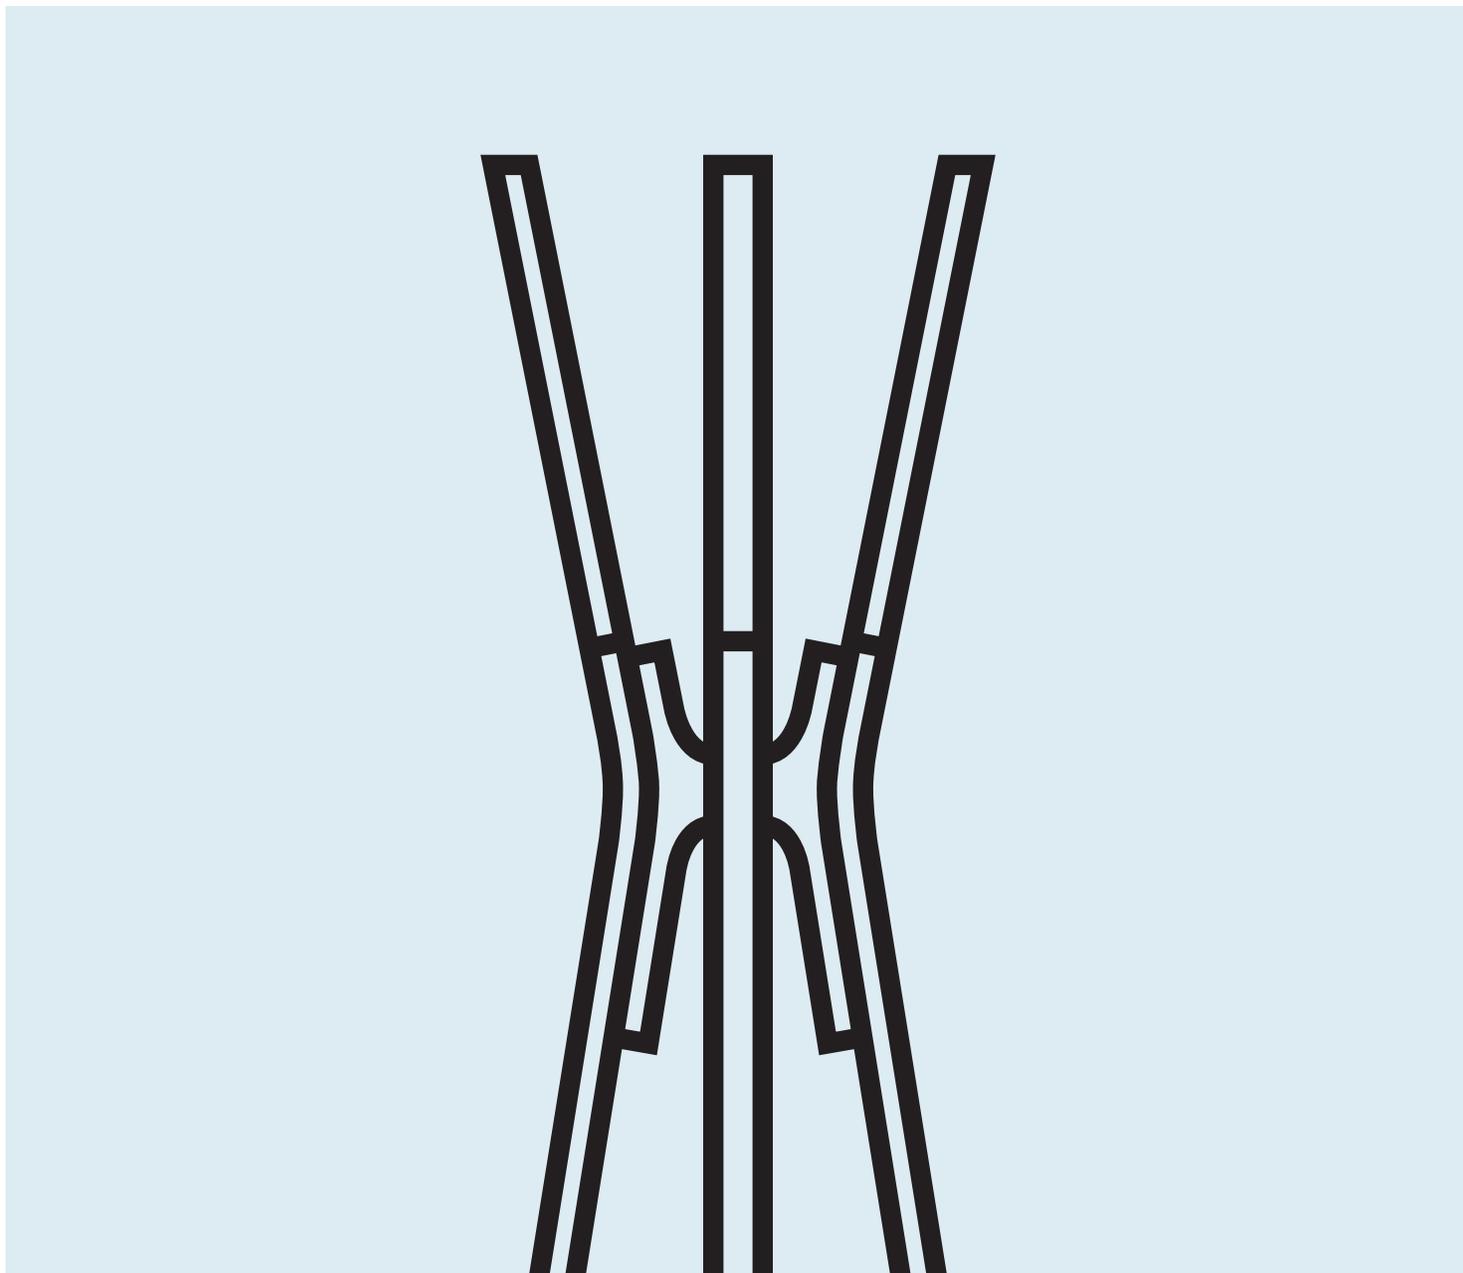

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT


We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware



QTY 8

PT. 1038

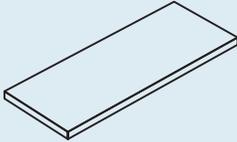


QTY 4

PT. 4009



QTY 1

PT. 9004

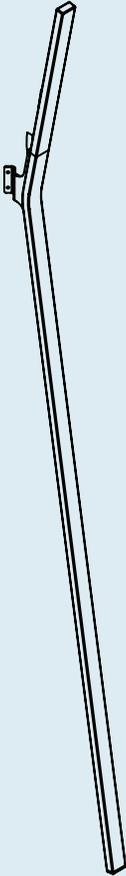

QTY 4

Leg

Step 01

ATTACH LEGS.


Begin attaching legs as shown using the hardware provided. Do not fully tighten the bolts until after Step 02.



PT. 1038 x 2



PT. 9004 x 1

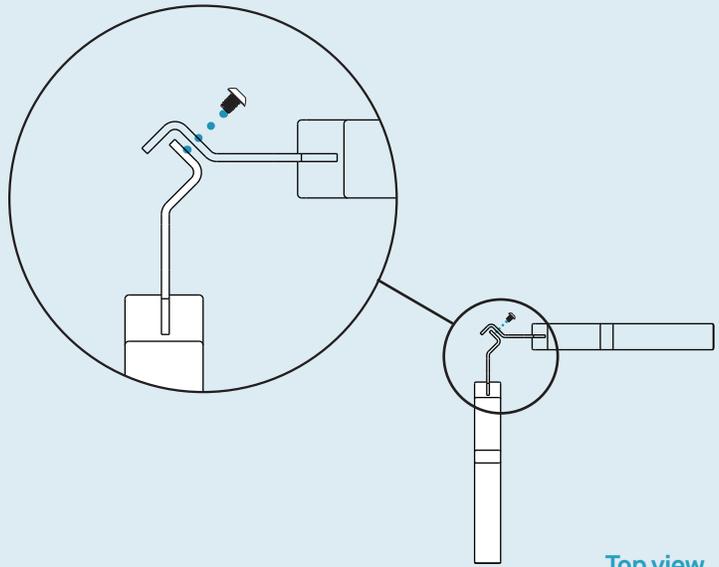

Step 02

ATTACH REMAINING LEGS.


Finish attaching legs as shown using the hardware provided. Tighten bolts after all legs are attached.



PT. 1038 x 6



PT. 9004 x 1



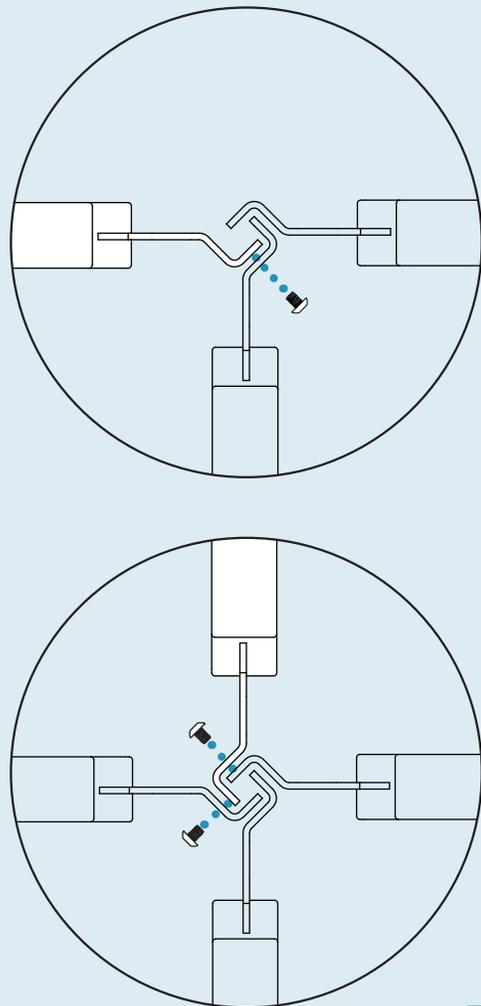


Step 03

ADJUST LEGS.

If your coat rack does not appear to be level on the ground then loosen and re-tighten bolts after adjusting the legs.

The felt pads may also be added to the bottom of one or more legs to level the legs on uneven surfaces.

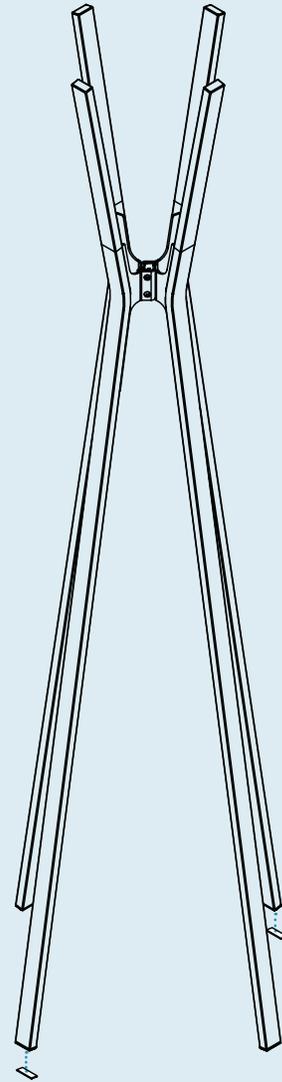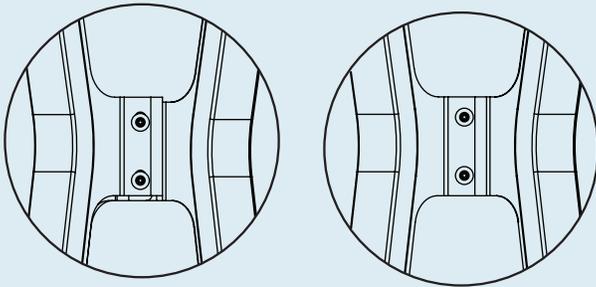

PT. 4009 x 4

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for wood or metal furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

