


NeedWant Tall Shelving

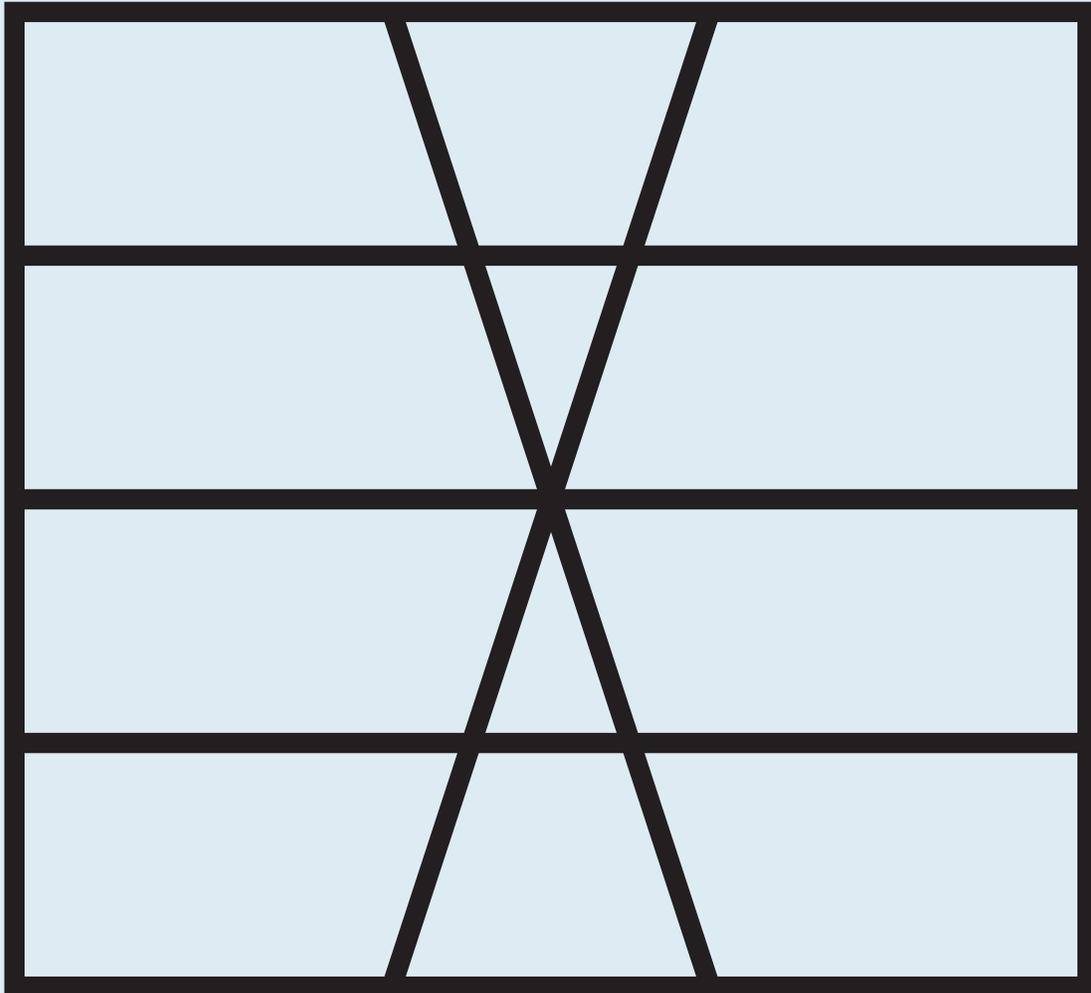

DESIGNED IN 2019

ASSEMBLY NOTES | REV 01



HAVE IT ALL?

Can things really make us happy? Well, there is no better way to test the theory than with this powder coated steel architectural wonder.

NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware




QTY 20

PT. 1107




QTY 10

PT. 1108

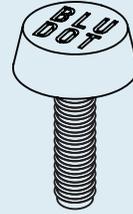


QTY 6 | 8*

PT. 4022

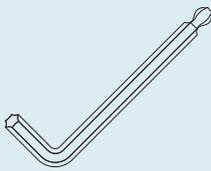

QTY 1

PT. 9032

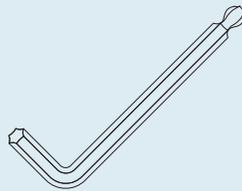


QTY 1

PT. 9016



QTY 4

PT. 1218

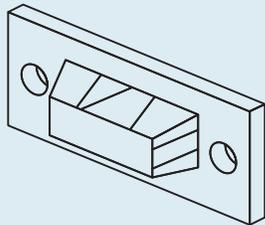


QTY 2

PT. 8041



QTY 4

PT. 8054

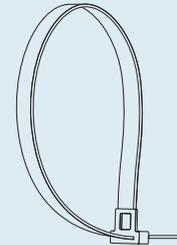


QTY 2

PT. 8042


* The narrow version comes with 6 pieces of PT. 4022, while the wide version comes with 8 pieces.

Parts & Hardware

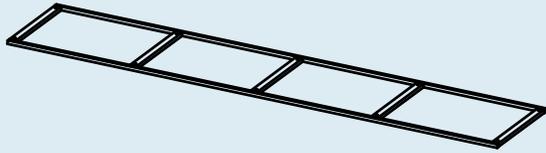

QTY _____ 2

Side Frame




QTY _____ 1

Shelf 5




QTY _____ 1

Shelf 4




QTY _____ 1

Shelf 3



QTY _____ 1

Shelf 2



QTY _____ 1

Shelf 1




QTY _____ 2

Support Rail

Step 01

START ASSEMBLY.

Start assembly by threading bolt onto side frame by hand. Do not fully tighten.


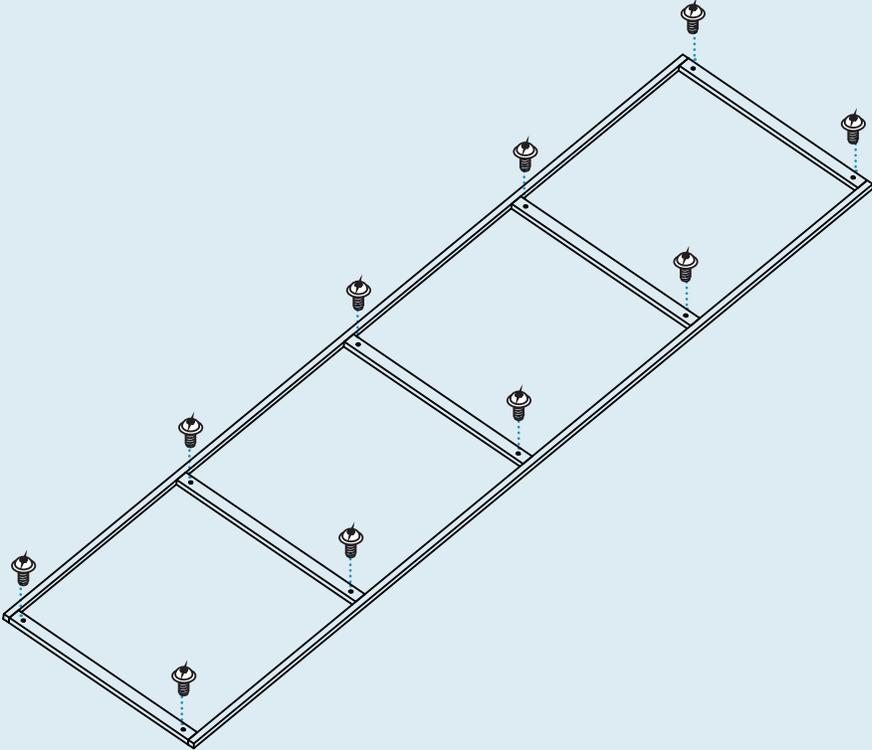


Step 02

INSTALL SHELF 1.

Align shelf 1 brackets with bolts on side frame. Slide shelf 1 down to engage with side frame bolts. Use the provided allen wrench to tighten bolts.



Note: The front of the shelves contain identification labels to help with assembly. The shelf labels should only be removed after the product is fully assembled.

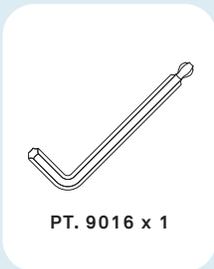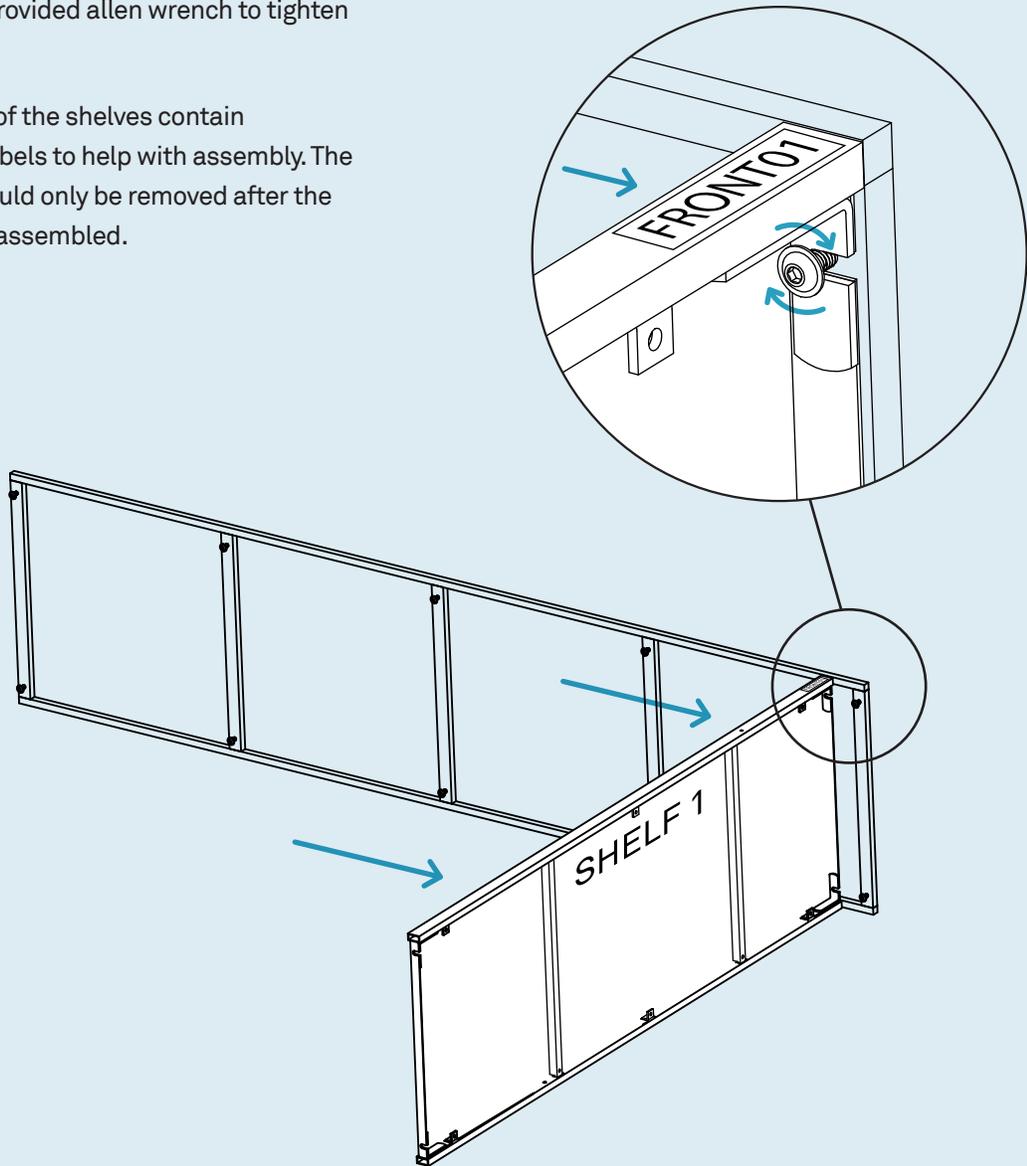

Step 03

ATTACH REMAINING SHELVES.



Repeat Step 02 assembly for the remaining shelves. Ensure that the shelves are in the correct location and orientation as shown below.

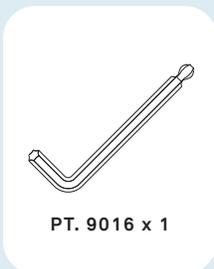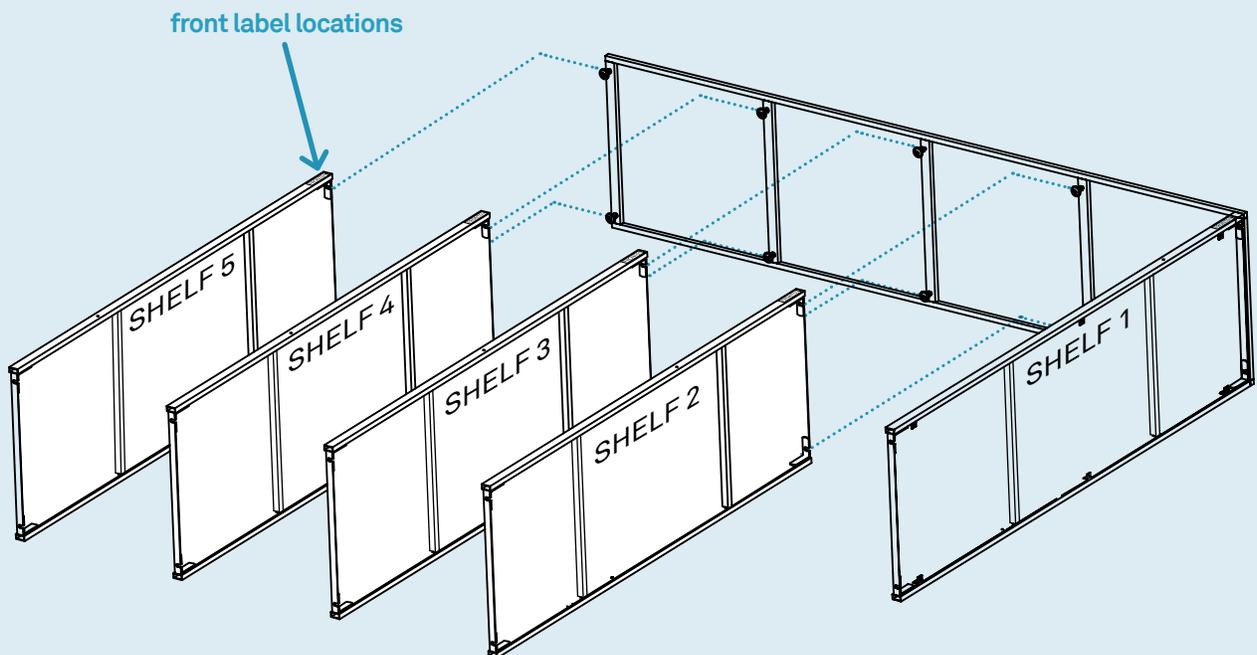

Step 04

ATTACH REMAINING SIDE FRAME.

Use the provided hardware to attach the remaining side frame.

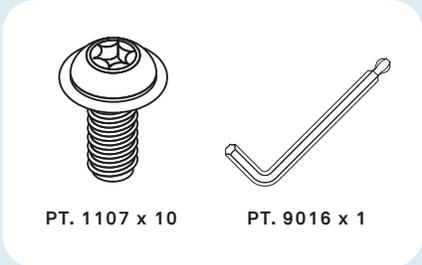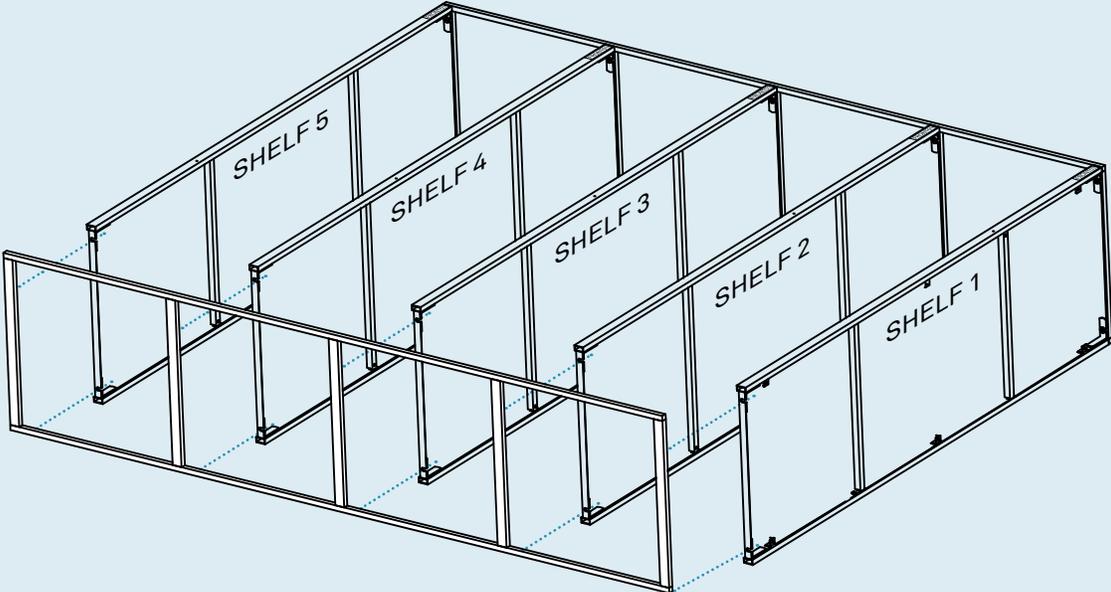




Step 05

ATTACH SUPPORT RAIL.

Align support rail notches with shelf rails to match the below image. Attach the support rail using the provided hardware.

Once the support rail is attached, thread provided adjustable feet to bottom shelf as shown.

Note: The wide version of this shelf will come with 8 adjustable feet for assembly.

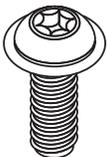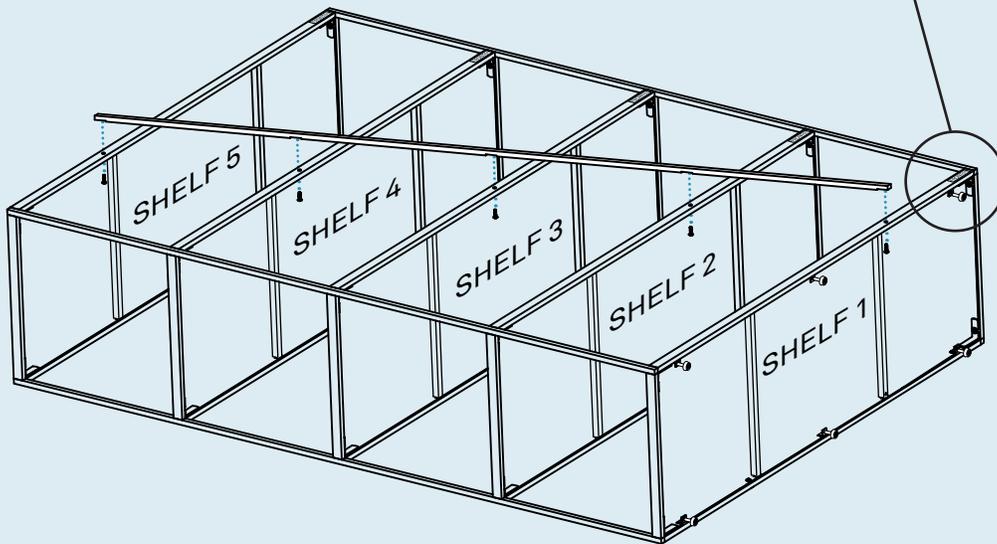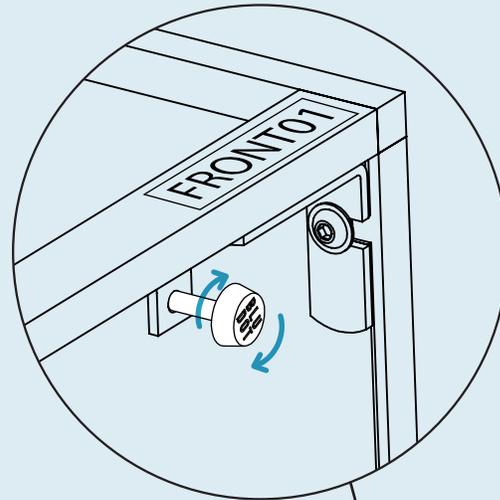

PT. 1108 x 5



PT. 9032 x 1





PT. 4022 x 6*

Step 06

ATTACH REMAINING SUPPORT RAIL.

Use packaging materials to raise shelving off floor. Align support rail notches with shelf rails to match the below image. Attach the support rail using the provided hardware.

Ensure all bolts are tightened. Have a second person help lift and bring the shelf upright.

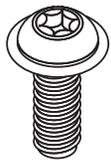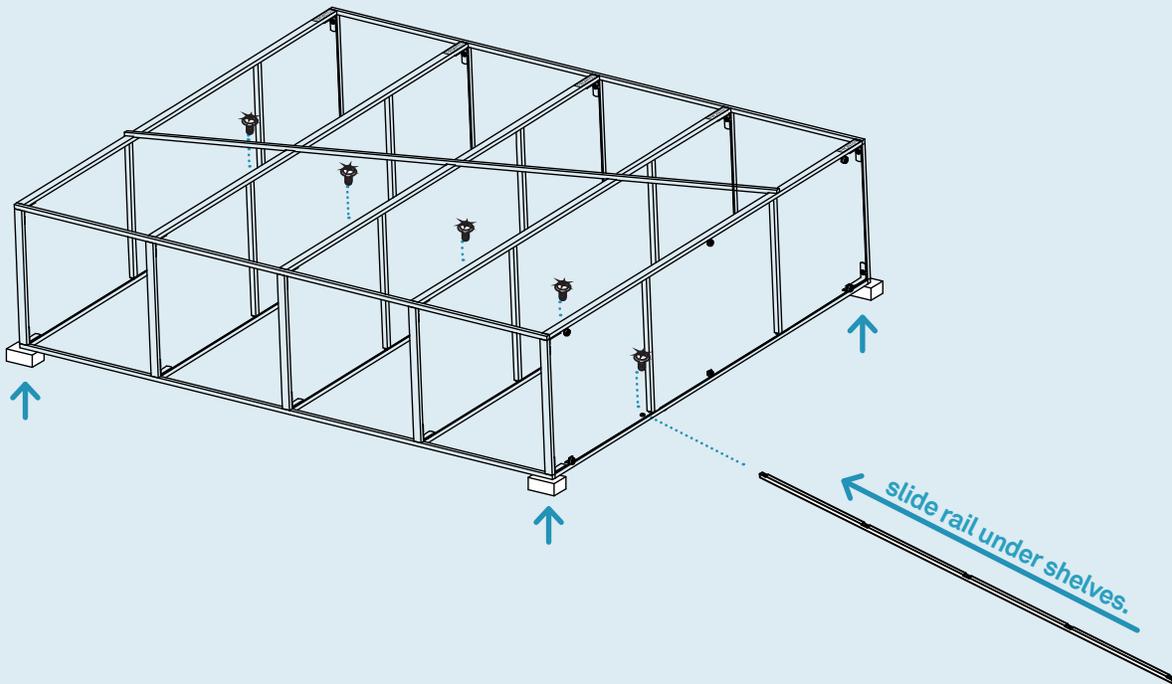

PT. 1108 x 5



PT. 9032 x 1

Step 07




INSTALL WALL BRACKETS.

Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are not positioned on a stud, drill **15/64"** holes in the marked locations. Press wall anchors into drilled holes.

If the mounting locations are positioned on a stud, this step of installing wall anchors may be skipped. Instead, drill **7/64"** pilot holes in the marked locations.

Attach the wall brackets to the wall using the included fasteners as shown.

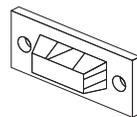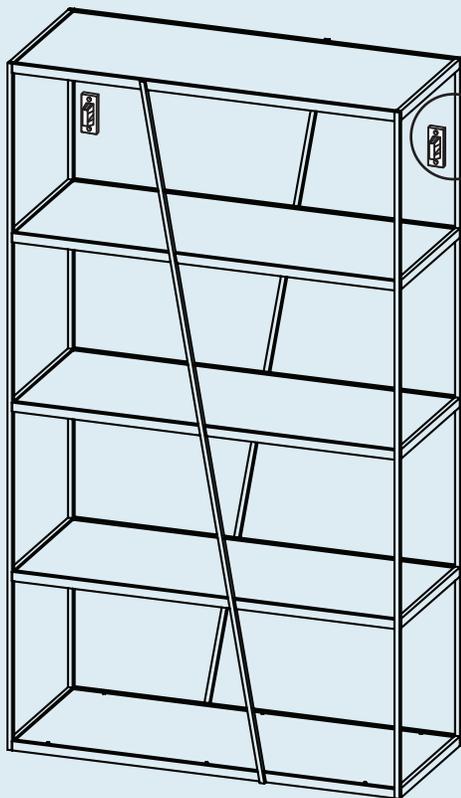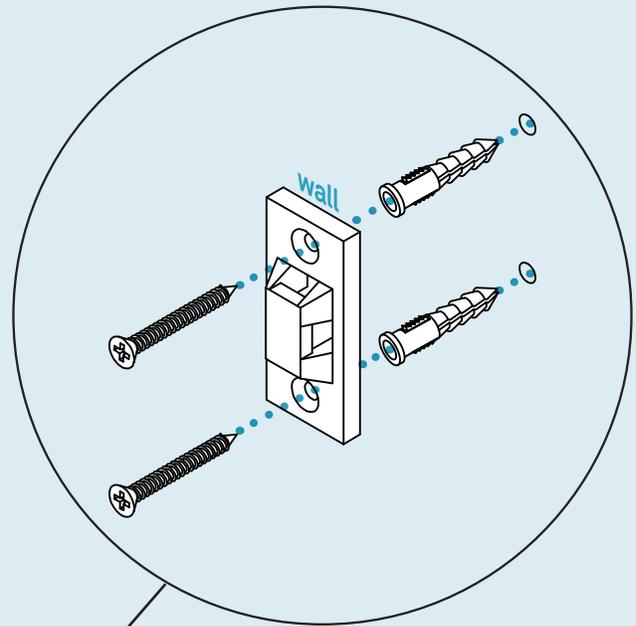

PT. 8041 x 2



PT. 8054 x 4




PT. 1218 x 4

Step 08

SECURE THE SHELF.

Install and tighten the straps prior to using the product.

Adjust the feet to ensure the shelf is level prior to using the product.

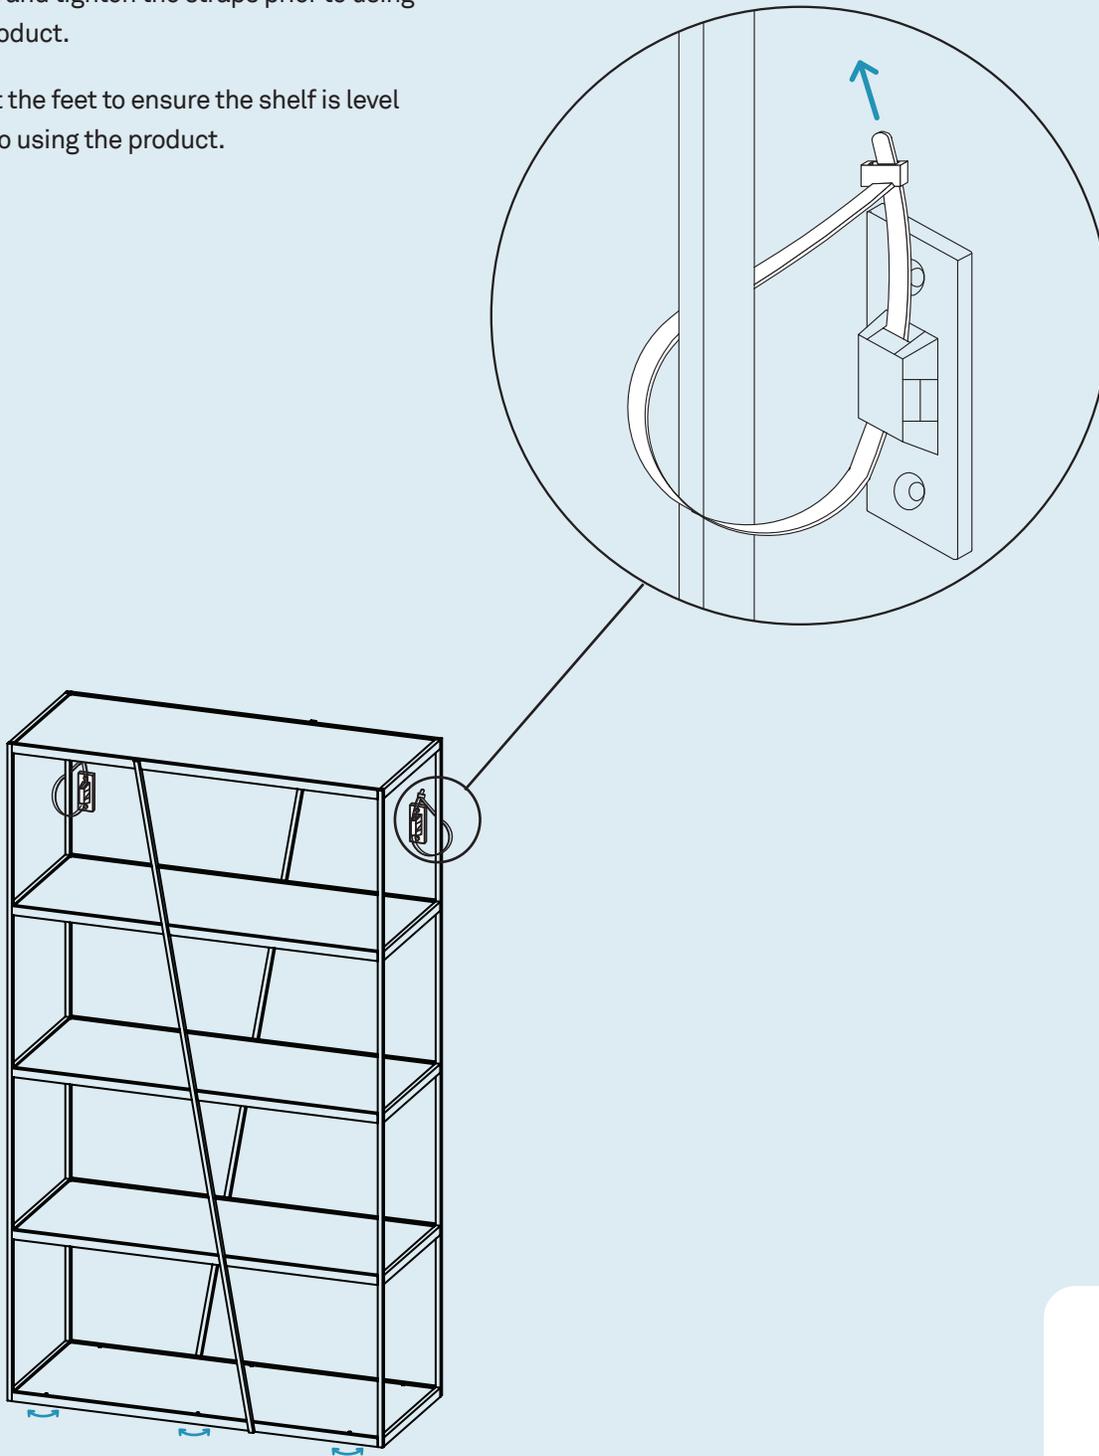

PT. 8042 x 2

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use a quality cleaner formulated for painted metal furniture. Wipe completely dry with a soft cloth.

