



# Open Plan Small Low Bookcase

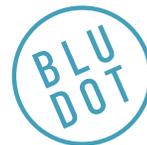

DESIGNED IN 2019

ASSEMBLY NOTES | REV 01

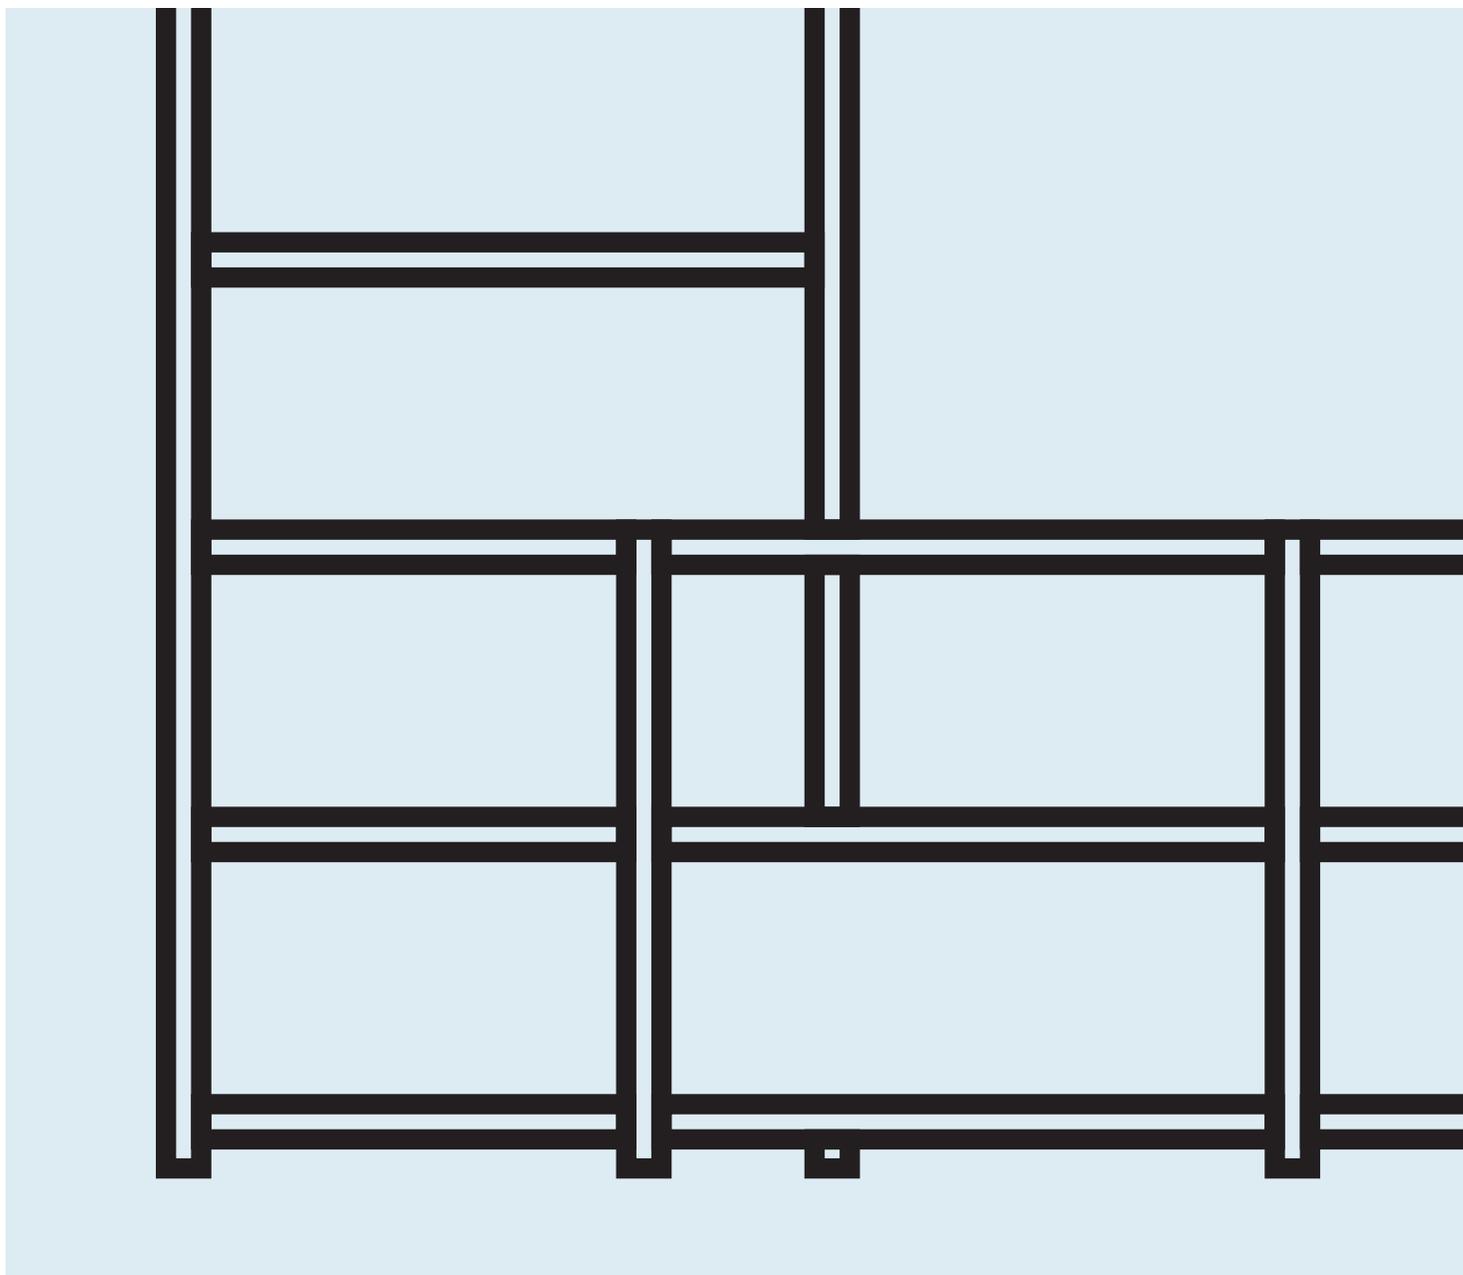

NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or  
**844.425.8368** for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow  
along on Instagram for some sneak peeks into the process.

# Parts & Hardware




QTY 2

Pt. 1217




QTY 2

Pt. 1218

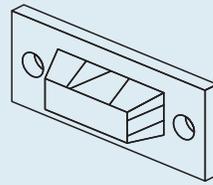


QTY 2

Pt. 8041

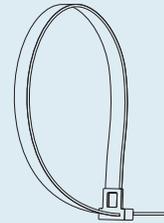


QTY 1

Pt. 8042




QTY 2

Pt. 8054

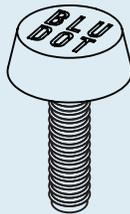


QTY 4

Pt. 4022



QTY 12

Pt. 1690



QTY 1

Pt. 9016




QTY 4

Pt. 8053



QTY 2

Front Upright

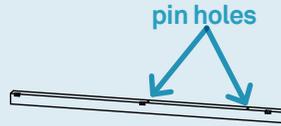

QTY 1

Rear Left Upright



QTY 1

Rear Right Upright



QTY 1

Back Panel



QTY 1

Top Panel





QTY 2

Shelf Panel

# Step 01

ATTACH BACK PANEL TO REAR UPRIGHTS.


Place metal pins in the rear uprights and align with back panel piece as shown.

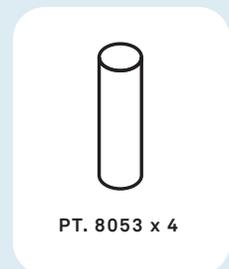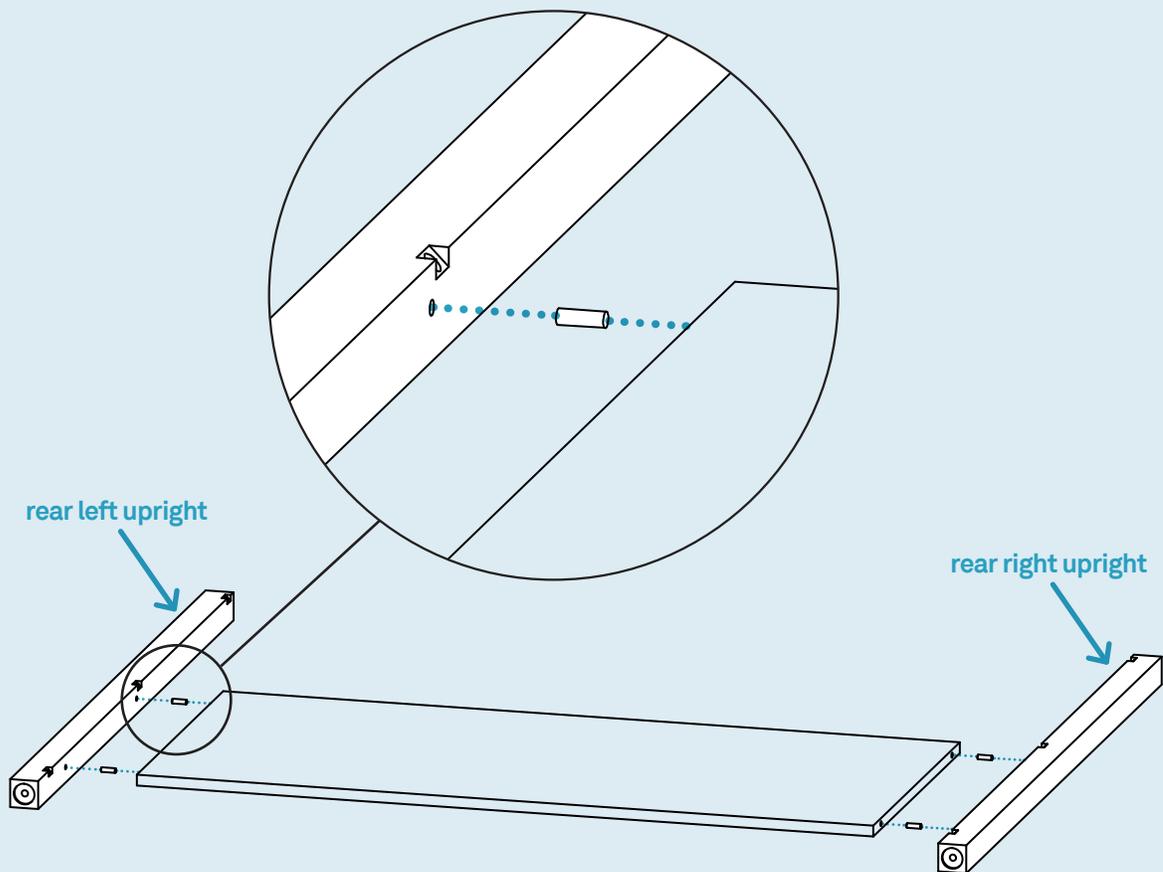

## Step 02

### ATTACH TOP PANEL AND SHELF PANELS.

Attach the top panel and shelf panels to the rear uprights using the provided hardware as shown.

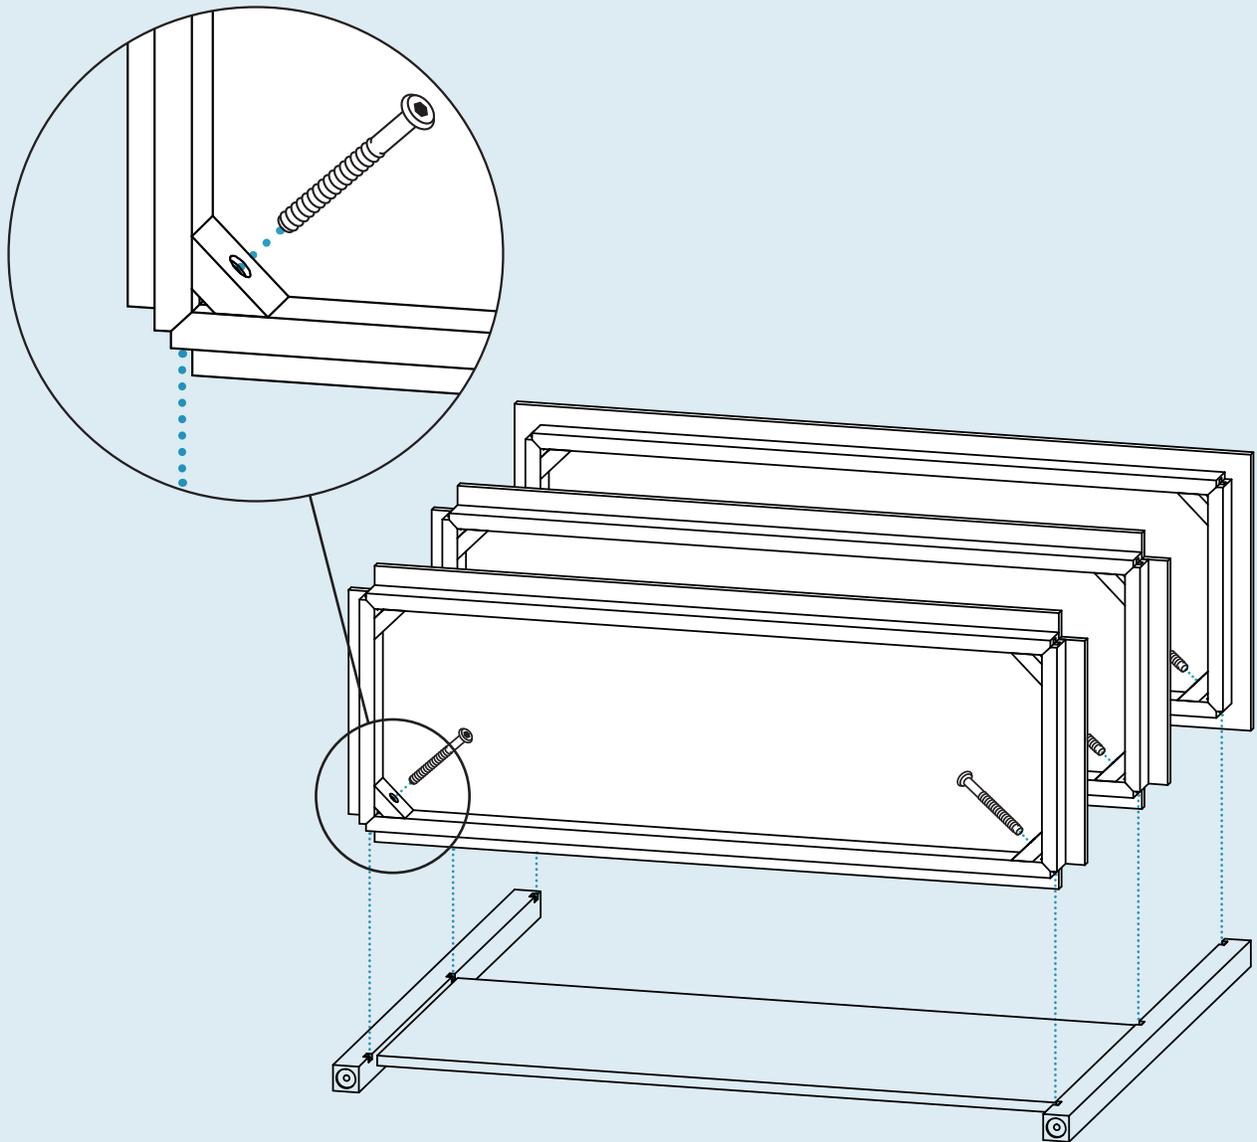

PT. 1690 x 6



PT. 9016 x 1

## Step 03

### ATTACH FRONT UPRIGHTS.


Attach the front uprights to the top panel and shelf panels using the provided hardware as shown.



PT. 1690 x 6



PT. 9016 x 1

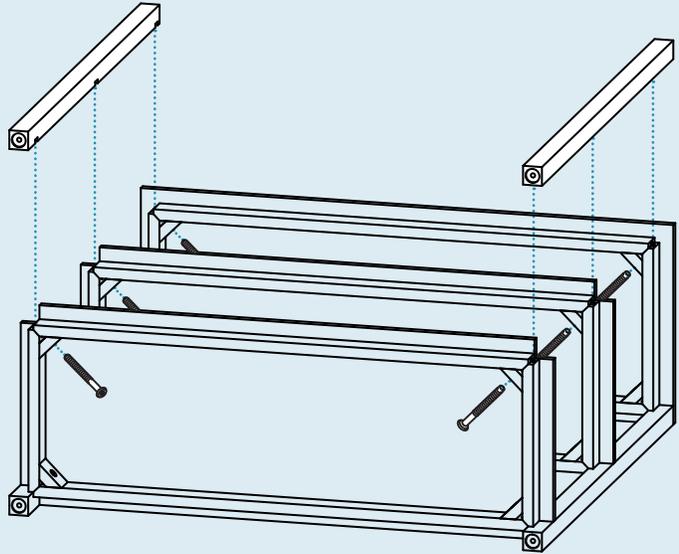


## Step 04

### INSTALL ADJUSTABLE GLIDES.

Install adjustable glides to the bottom of the uprights as shown. Ensure that the uprights are level prior to using the product.



PT. 4022 x 4


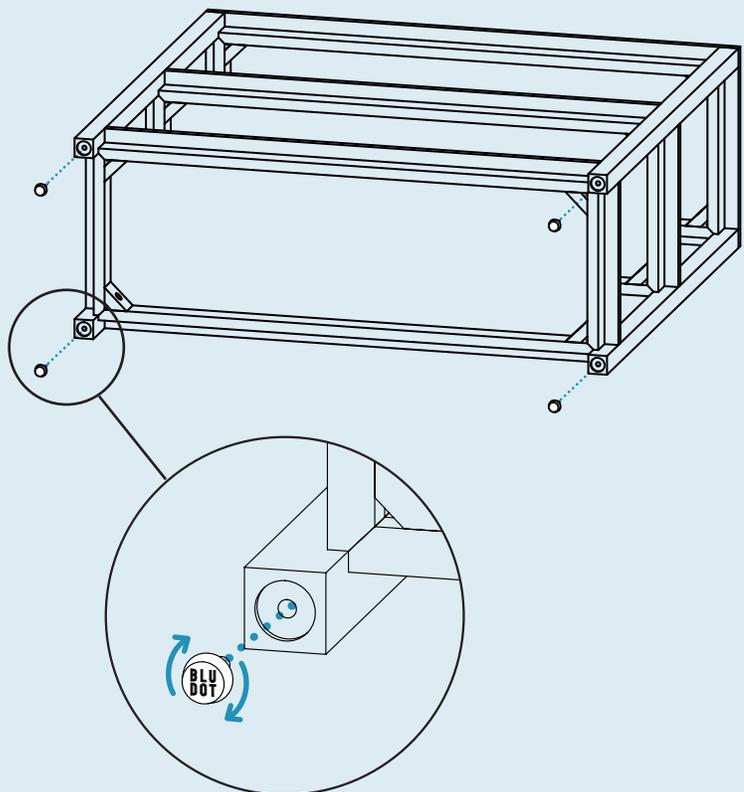


## Step 05


ATTACH ANTI-TIP BRACKET TO BOOKCASE.

Brackets must be installed to the back rail of the top panel. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

**Note:** Ensure that the depth of the pilot hole does not exceed 1/2". A deeper pilot hole may be visible on the opposite side.

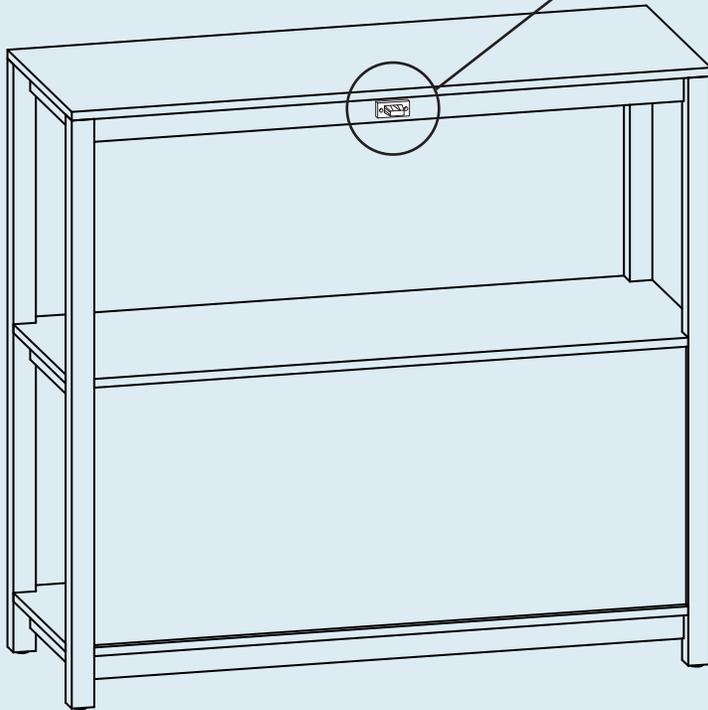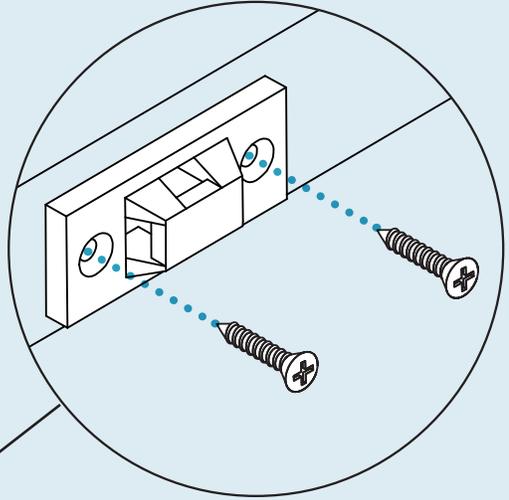

PT. 1217 x 2



PT. 8041 x 1



# Step 06

## ATTACH ANTI-TIP BRACKET TO WALL.


Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill  $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill  $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

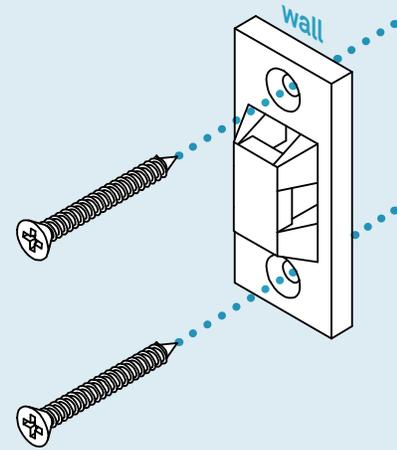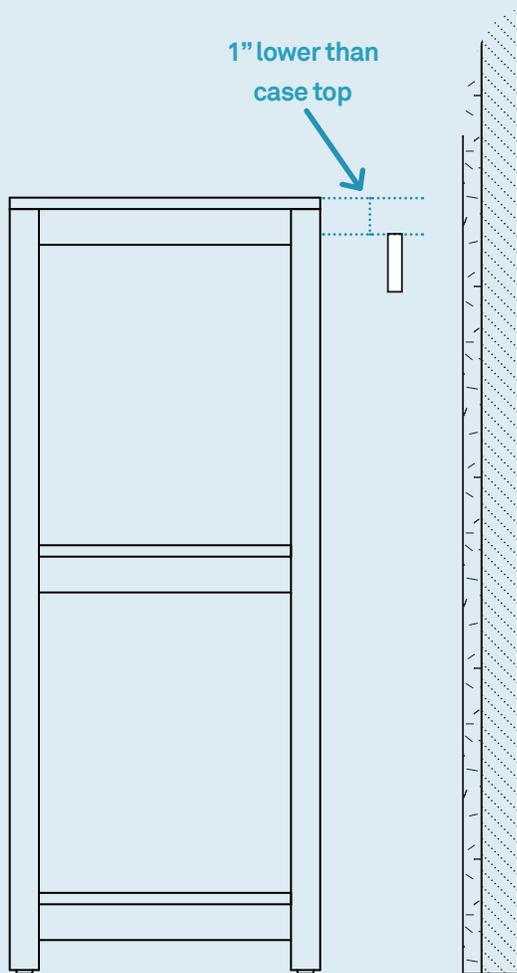


OR

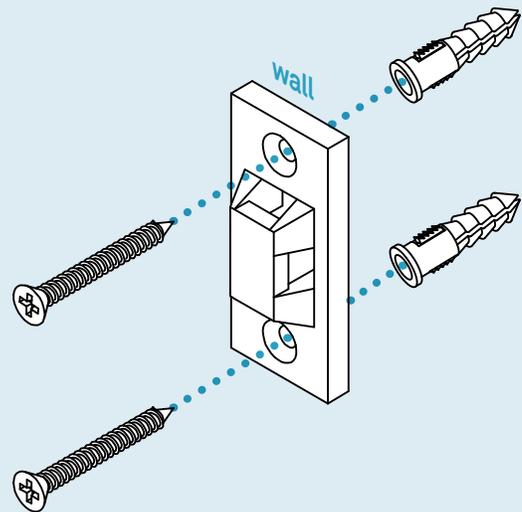

PT. 8054 x 2



PT. 1218 x 2




PT. 8041 x 1

# Step 07

## SECURE BOOKCASE.

Install and tighten wall strap prior to using the product.

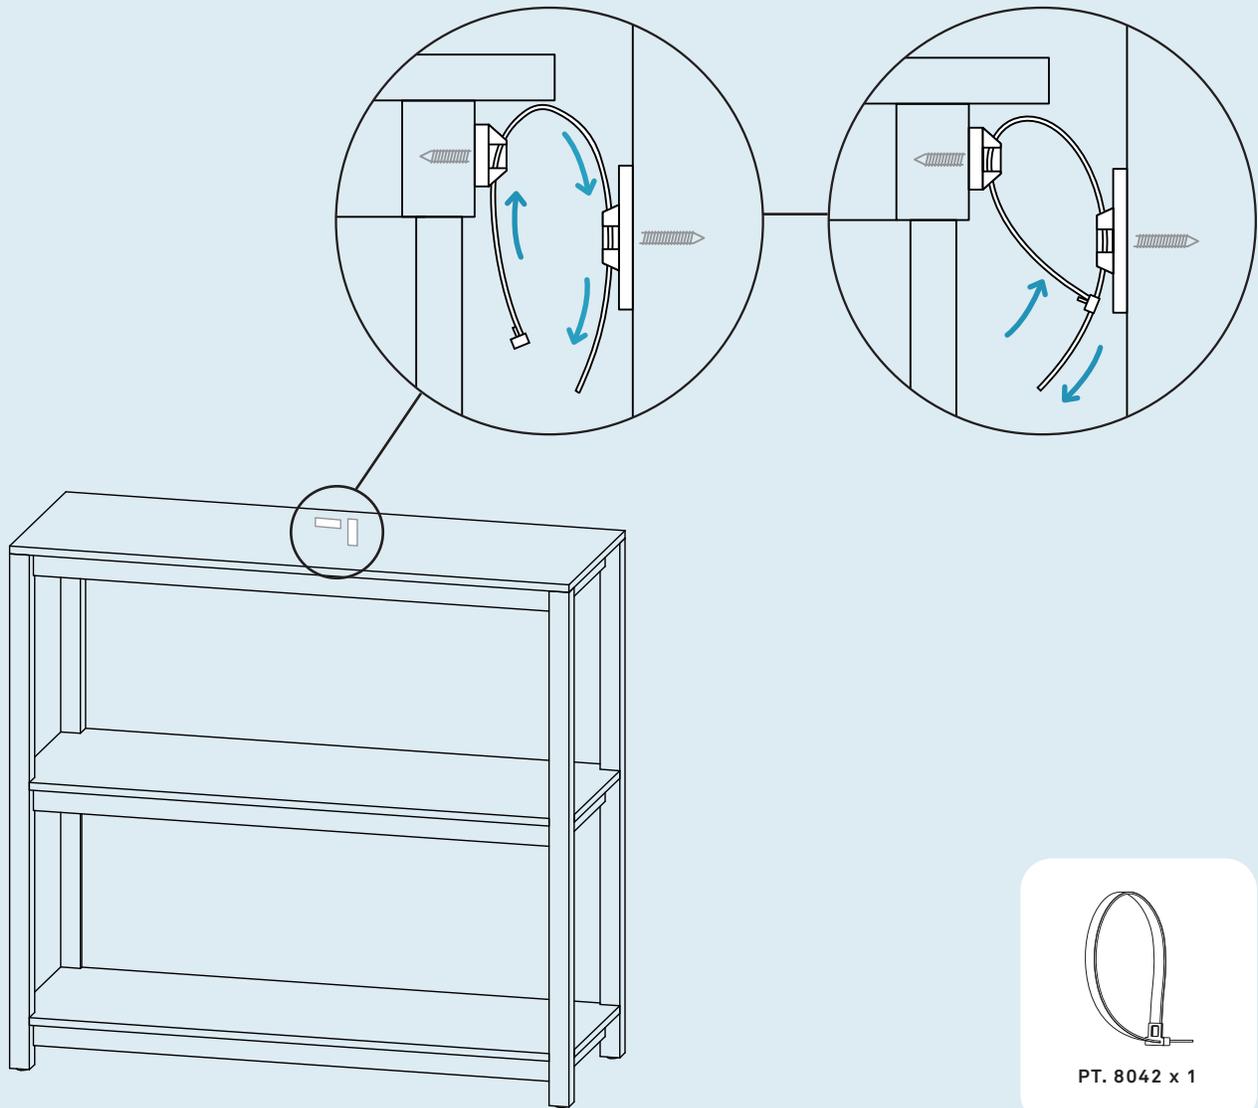

## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

