



# Open Plan Tall Bookcase

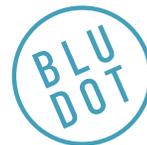

DESIGNED IN 2019

ASSEMBLY NOTES | REV 02

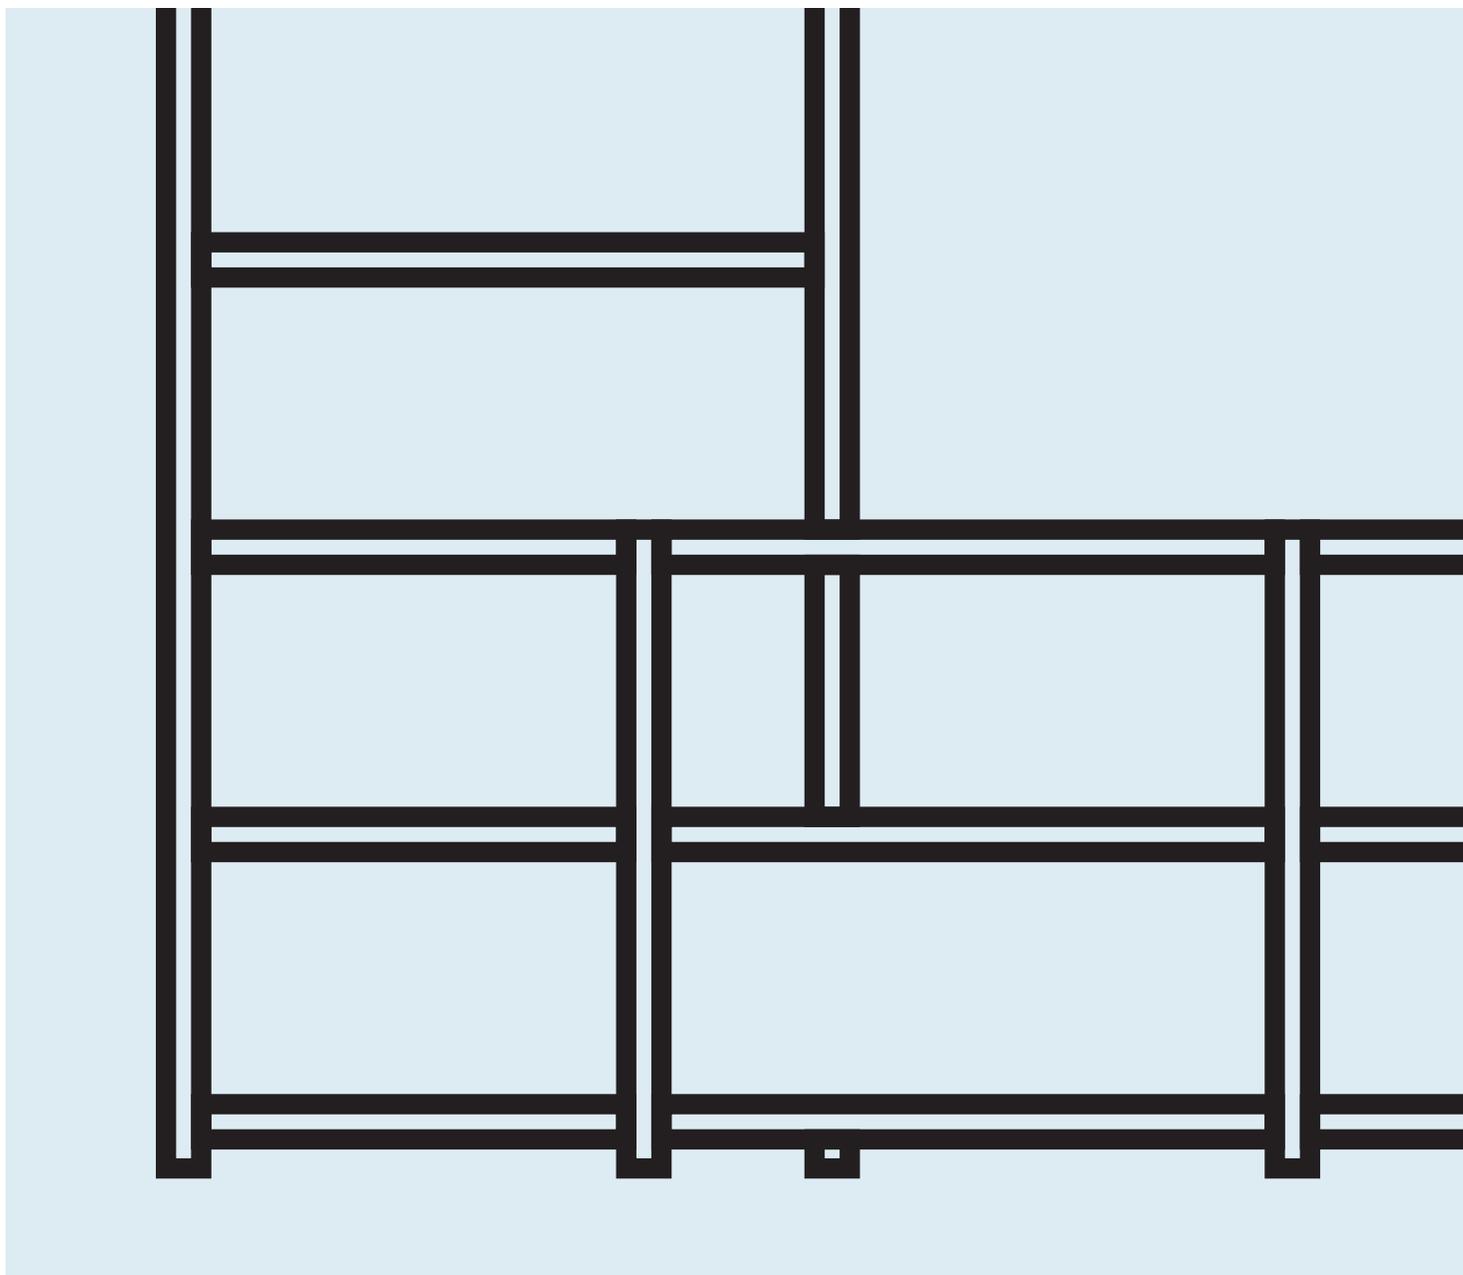

## NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or  
**844.425.8368** for assistance.

## @BLUDOT

We design all our pieces in our Minneapolis studio. Follow  
along on Instagram for some sneak peeks into the process.

# Parts & Hardware




QTY 2

Pt. 1217




QTY 2

Pt. 1218

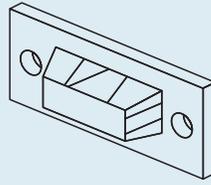

QTY 2

Pt. 8041

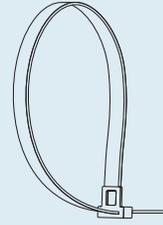


QTY 1

Pt. 8042



QTY 2

Pt. 8054

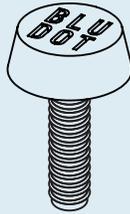

QTY 4

Pt. 4022



QTY 24

Pt. 1690



QTY 1

Pt. 9016



QTY 8

Pt. 8053



QTY 2

Back Panel



QTY 1

Top Panel




QTY 5

Shelf Panel



QTY 2

Front Upright

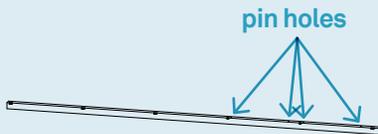

QTY 1

Rear Left Upright



QTY 1


Rear Right Upright

# Step 01

## ATTACH TOP PANEL AND SHELF PANELS.

Attach the top and shelf panels to the rear right upright and front upright using the provided hardware as shown.


Ensure that the correct rear upright part is used by matching the orientation of the pin holes shown below.

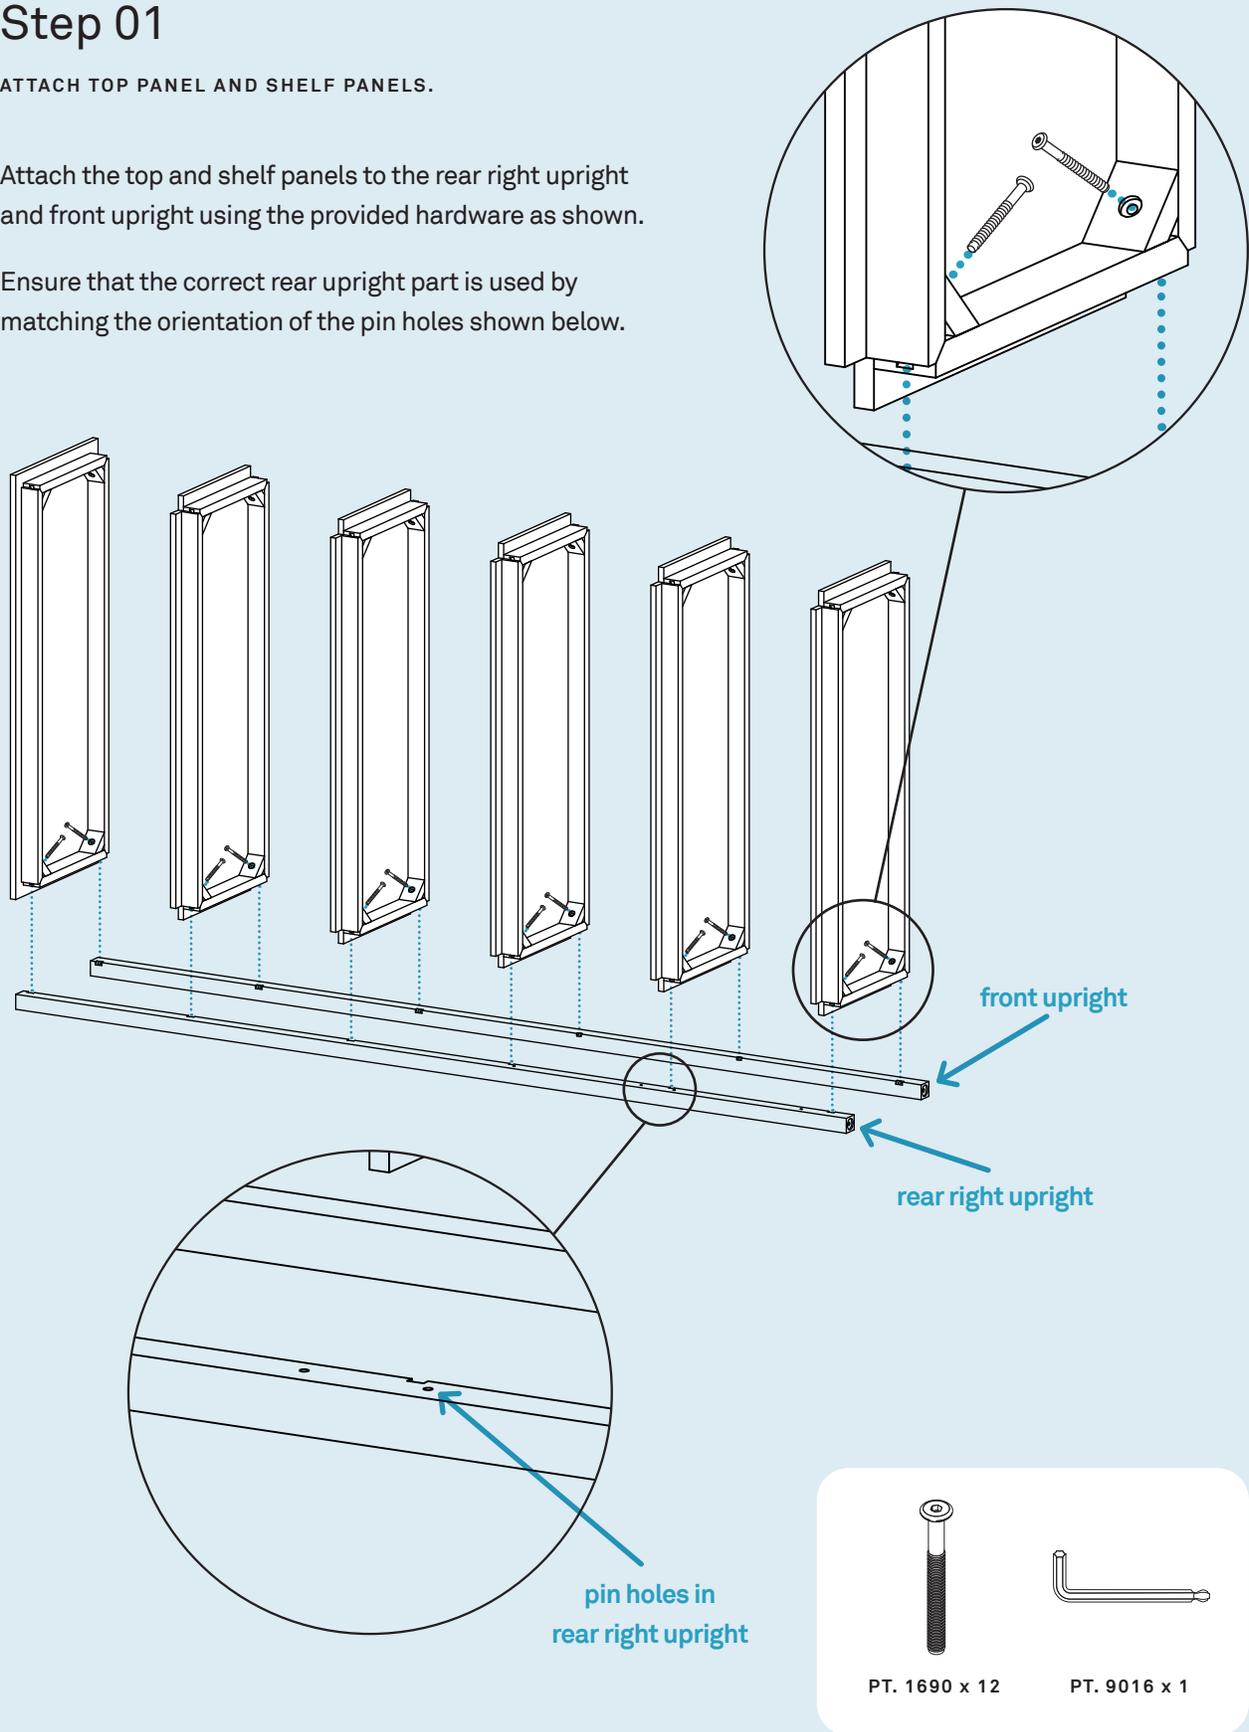

## Step 02

ATTACH BACK PANEL TO REAR UPRIGHT.

Place metal pins in the rear right uprights and align with back panel pieces as shown.

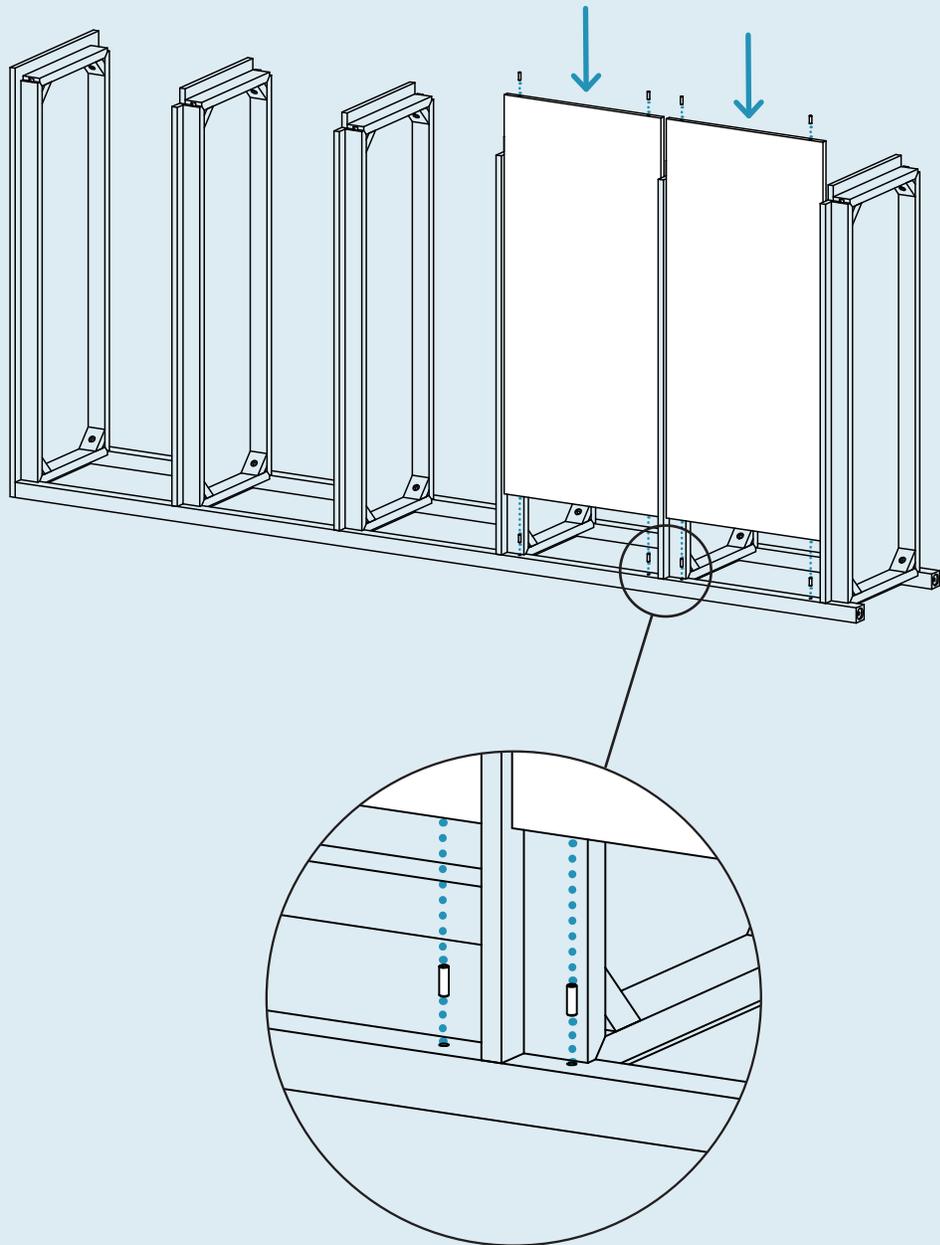


PT. 8053 x 8

## Step 03

### ATTACH REMAINING UPRIGHTS.

Attach the remaining rear left upright and front upright using the provided hardware as shown. Ensure that the back panel pins align with the rear left upright.

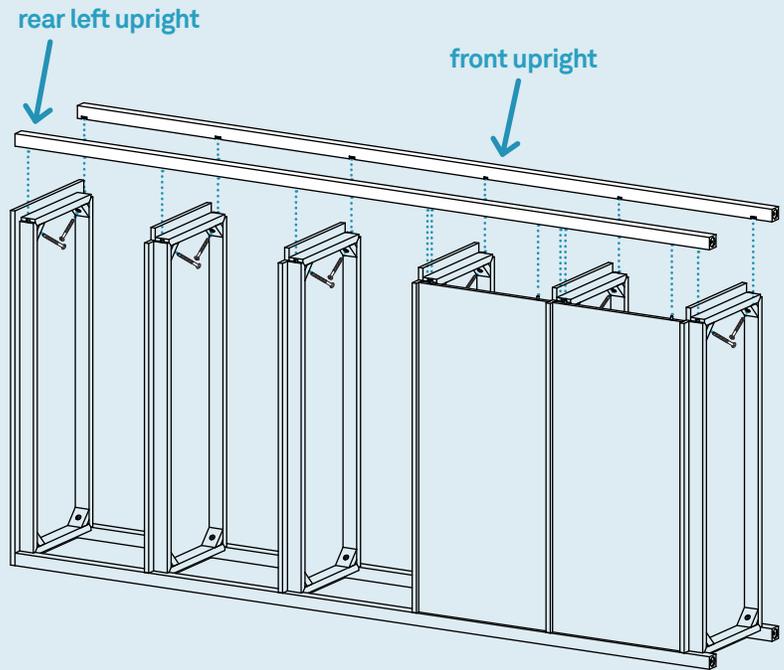

PT. 1690 x 12




PT. 9016 x 1


## Step 04

### INSTALL ADJUSTABLE GLIDES.

Install adjustable glides to the bottom of the uprights as shown. Ensure that the uprights are level prior to using the product.

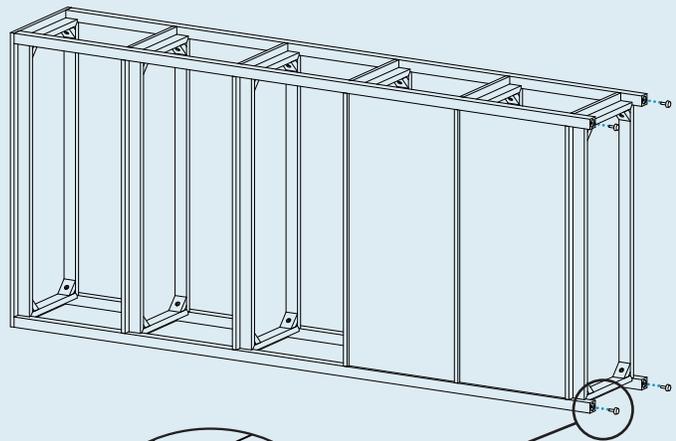

PT. 4022 x 4


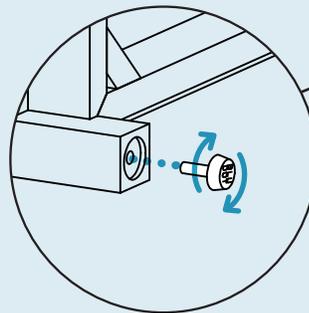


## Step 05


ATTACH ANTI-TIP BRACKET TO BOOKCASE.

Brackets must be installed to the back rail of the shelf panel. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

**Note:** Ensure that the depth of the pilot hole does not exceed 1/2". A deeper pilot hole may be visible on the opposite side.

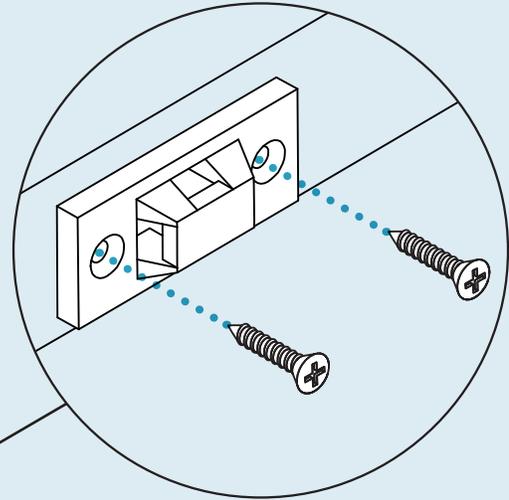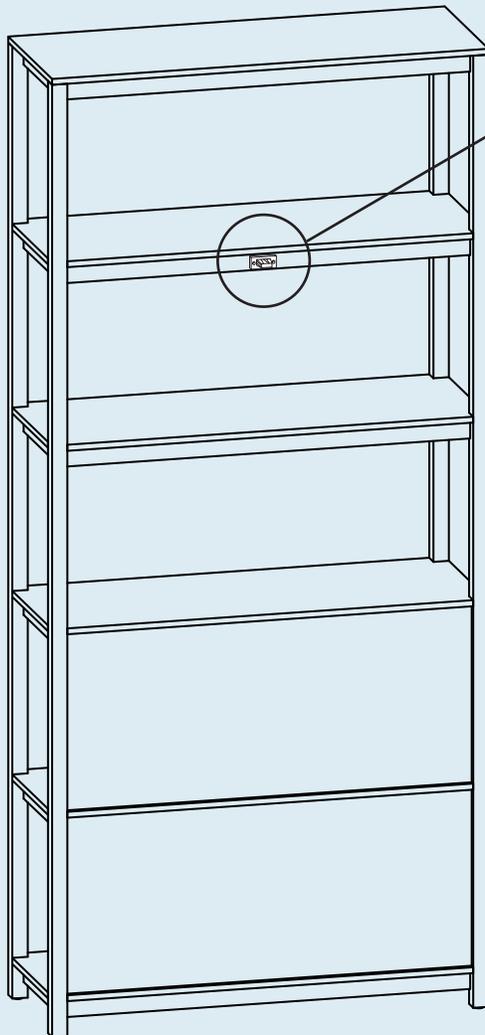

PT. 1217 x 2



PT. 8041 x 1



# Step 06

## ATTACH ANTI-TIP BRACKET TO WALL.


Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill  $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill  $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

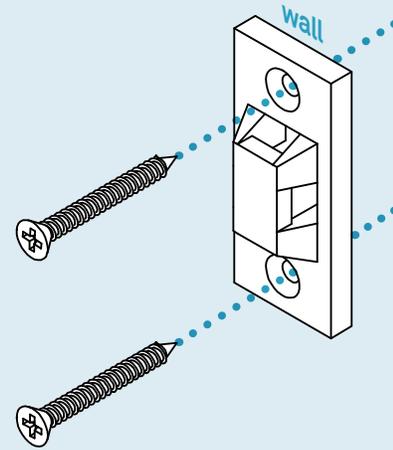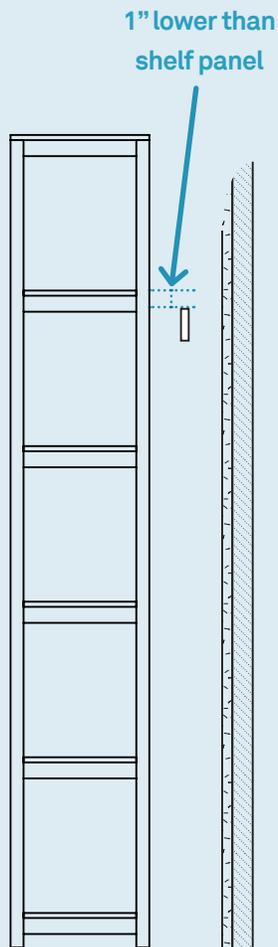


OR

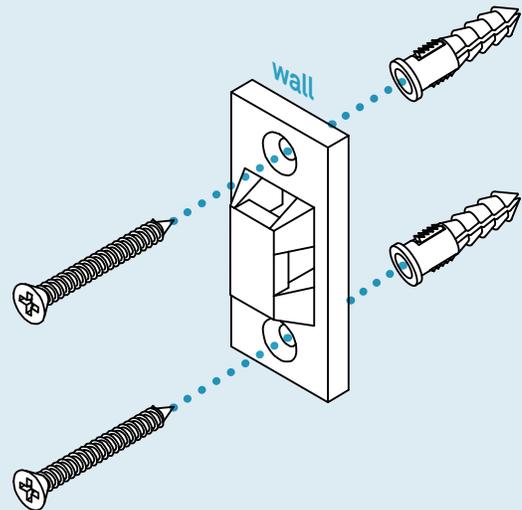

PT. 8054 x 2



PT. 1218 x 2




PT. 8041 x 1

# Step 07

## SECURE BOOKCASE.

Install and tighten wall strap prior to using the product.

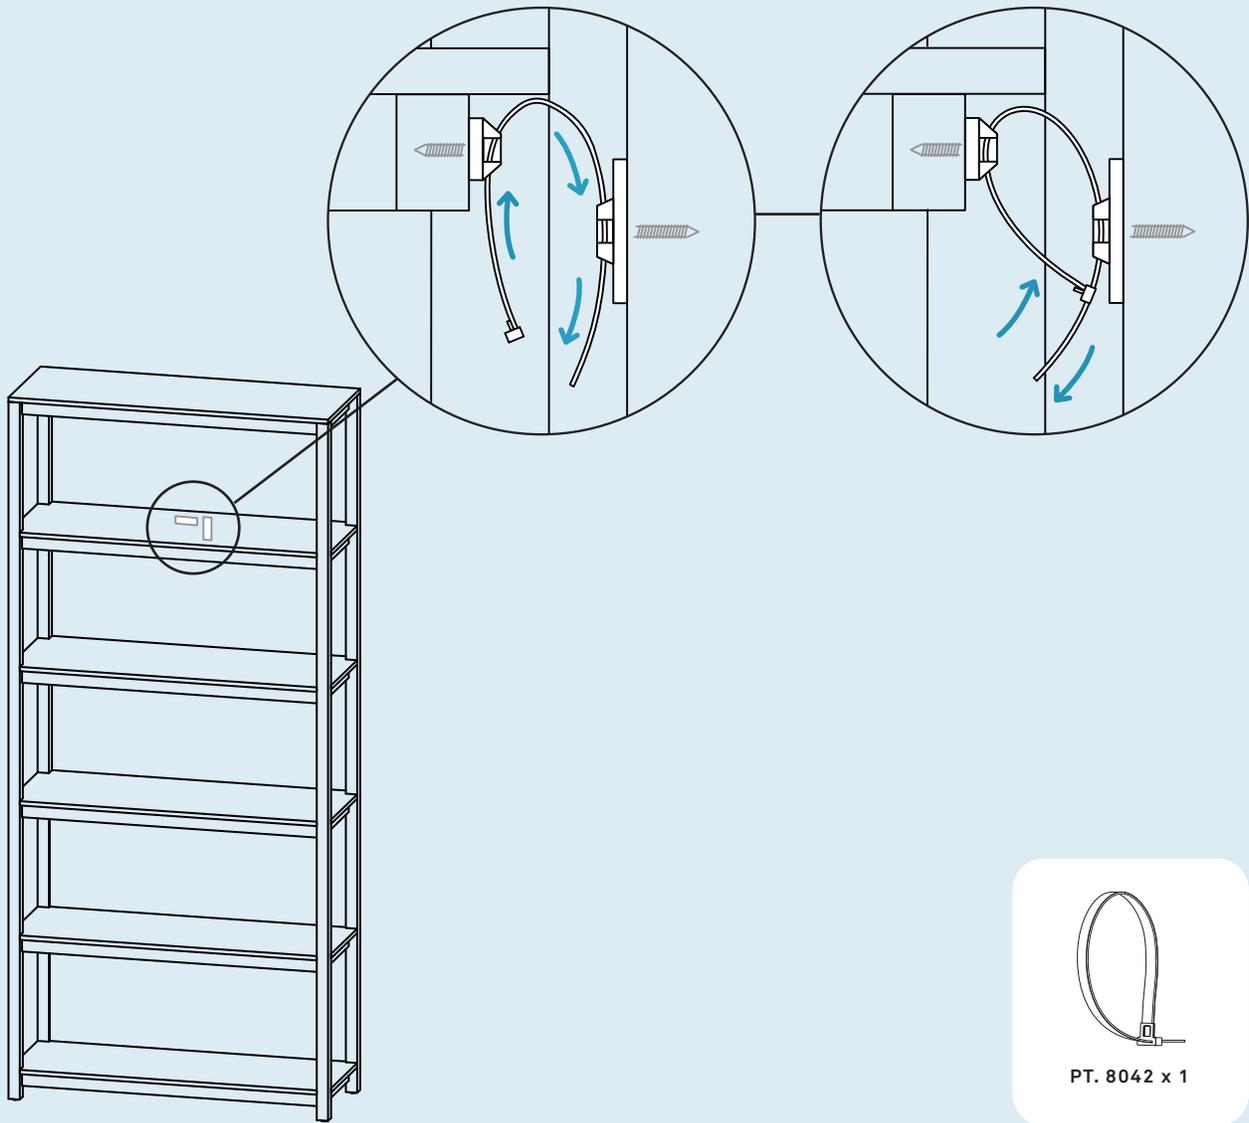

## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

