


# Open Plan Desk

DESIGNED IN 2020

ASSEMBLY NOTES | REV 00

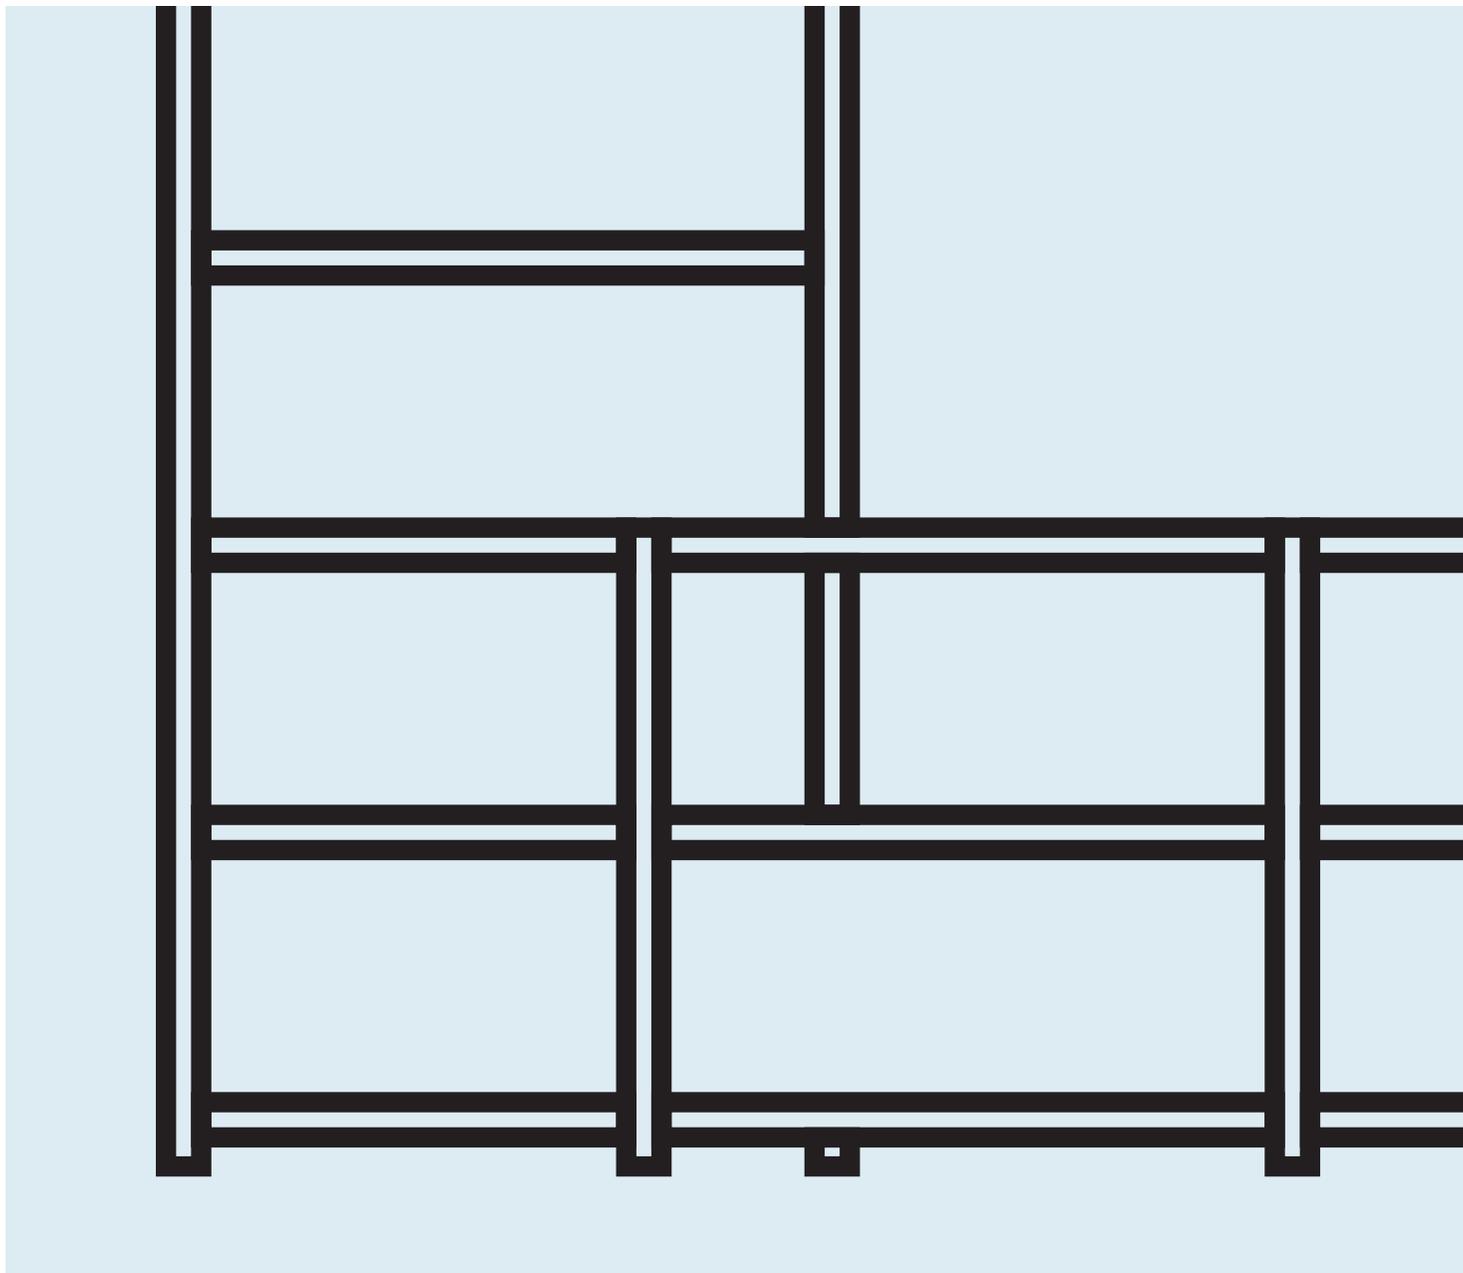

## NEED A HAND?

Contact us at [service@bludot.com](mailto:service@bludot.com) or **844.425.8368** for assistance.

## @BLUDOT

We design all our pieces in our Minneapolis studio. Follow along on Instagram for some sneak peeks into the process.

# Parts & Hardware




QTY 2

Pt. 1217




QTY 2

Pt. 1218

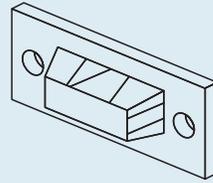


QTY 2

Pt. 8041

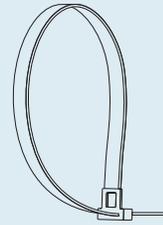


QTY 1

Pt. 8042



QTY 2

Pt. 8054

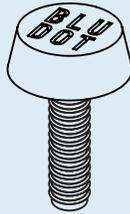

QTY 4

Pt. 4022



QTY 4

Pt. 8053




QTY 4

Pt. 5013



QTY 2

Pt. 1613



QTY 2

Pt. 3002



QTY 8

Pt. 1690



QTY 1

Pt. 9016



QTY 1

Left Side Frame



QTY 1

Right Side Frame



QTY 1

Stretcher



QTY 1

Desk Top


# Step 01

ATTACH STRETCHER TO SIDE FRAMES.

Assemble the desk on soft surface.

Assemble stretcher to side frames using the provided hardware as shown. Do not fully tighten bolts.

Thread adjustable glides into place as shown.

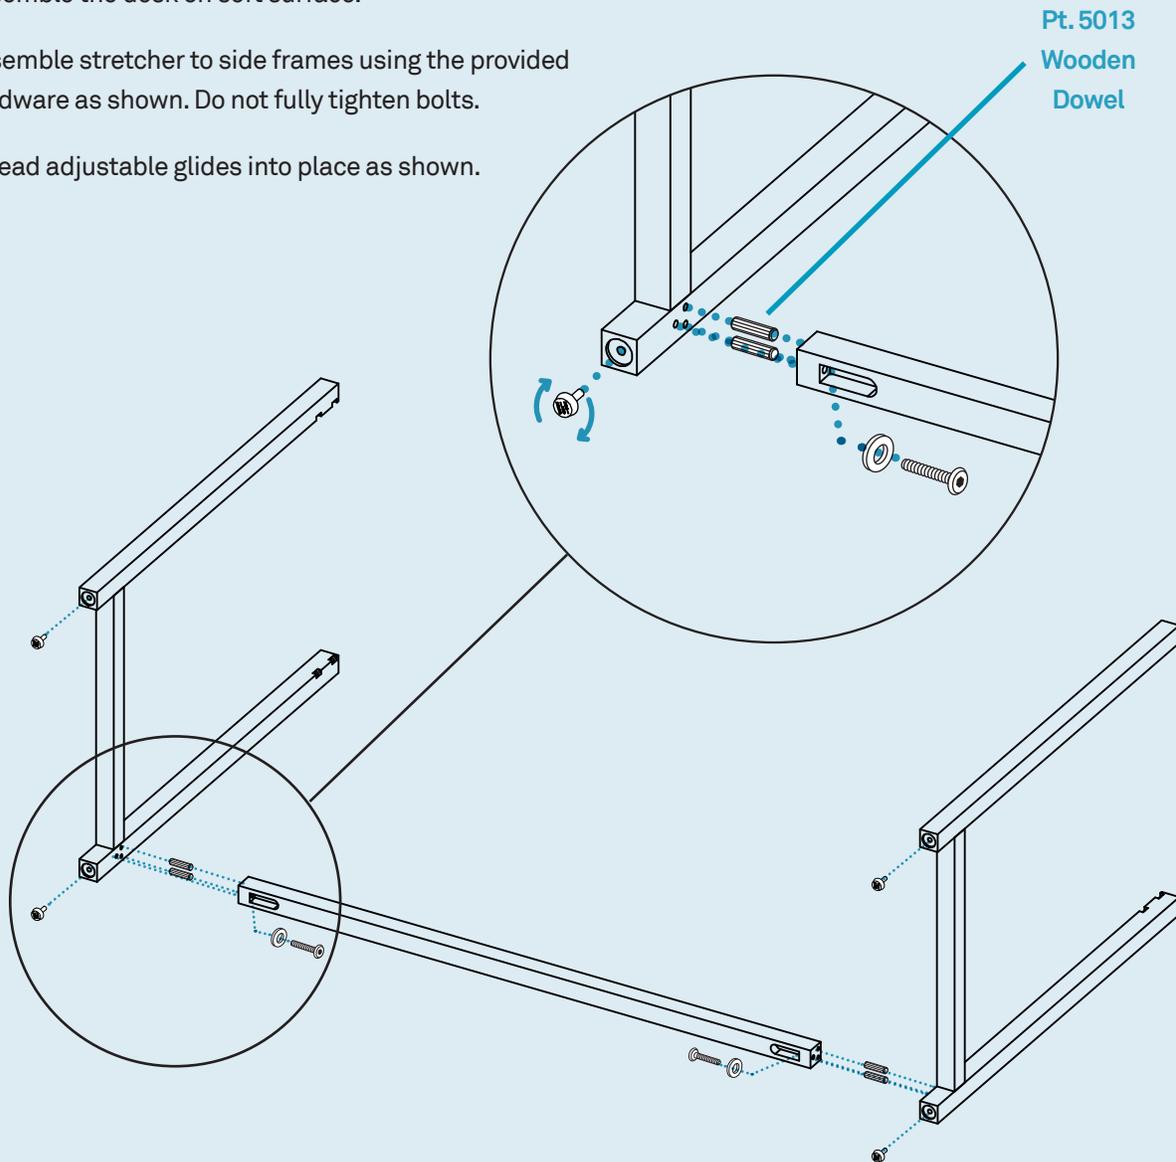

PT. 5013 x 4



PT. 1613 x 2



PT. 3002 x 2



PT. 9016 x 1




PT. 4022 x 4

# Step 02

## ATTACH DESK TOP.

Attach the side frames to the desk top using the provided hardware as shown. Tighten bolts in the stretcher and all four corners before use.

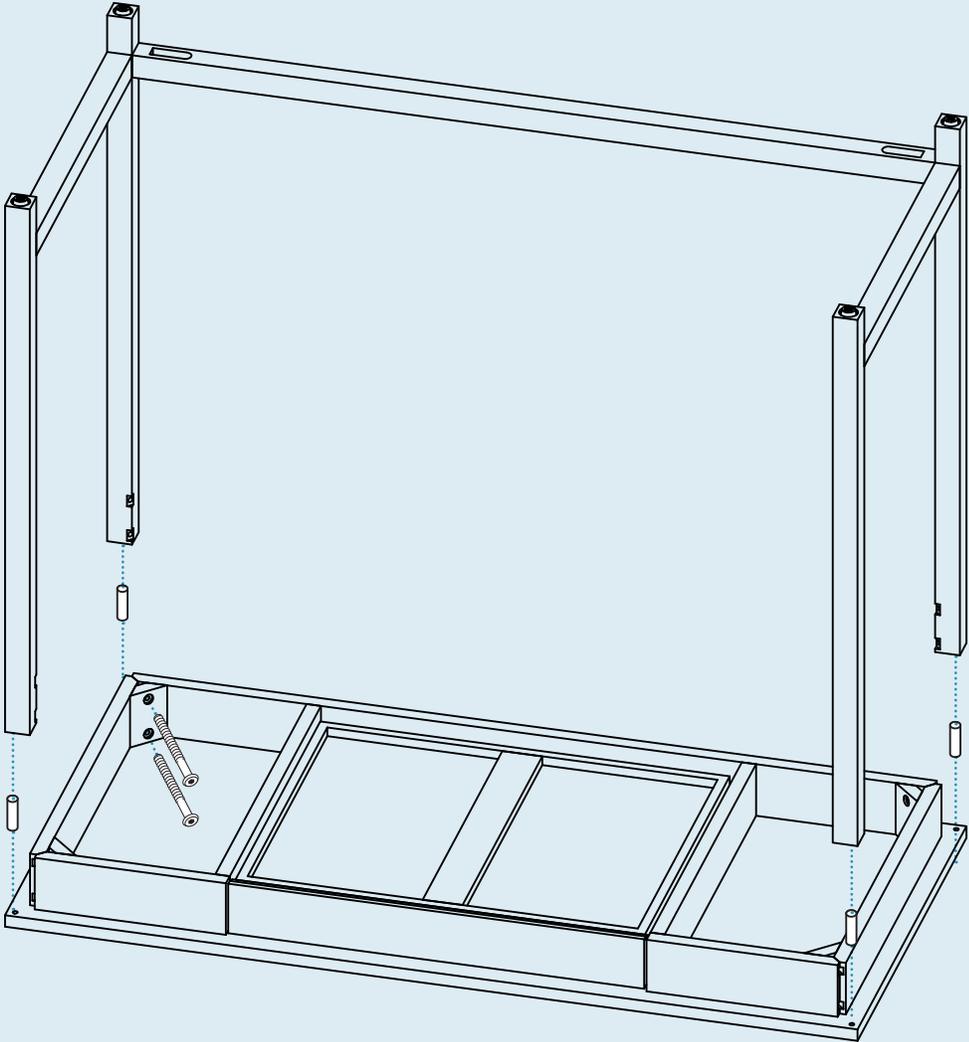

PT. 8053 x 4



PT. 1690 x 8




PT. 9016 x 1

## Step 03


ATTACH ANTI-TIP BRACKET TO DESK.

Brackets must be installed to the back rail of the desk. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

**Note:** Ensure that the depth of the pilot hole does not exceed 1/2". A deeper pilot hole may be visible on the opposite side.

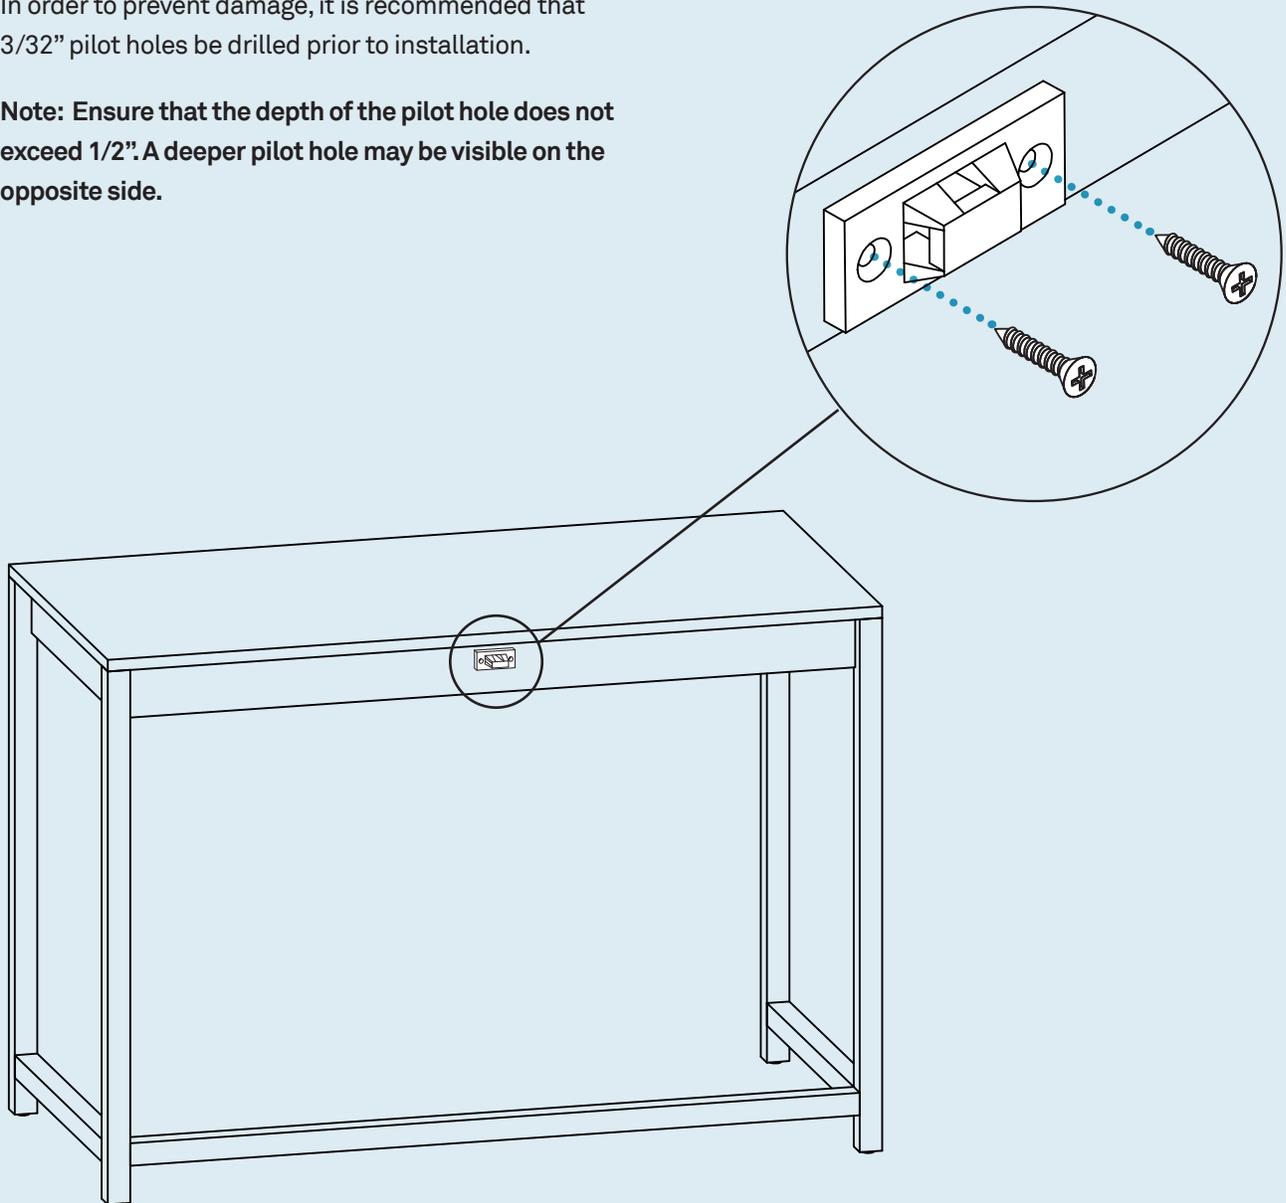

PT. 1217 x 2



PT. 8041 x 1



## Step 04

### ATTACH ANTI-TIP BRACKET TO WALL.


Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill  $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill  $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

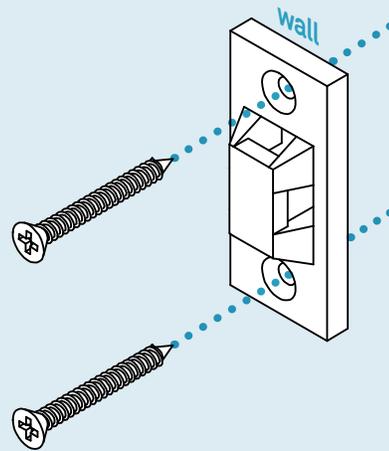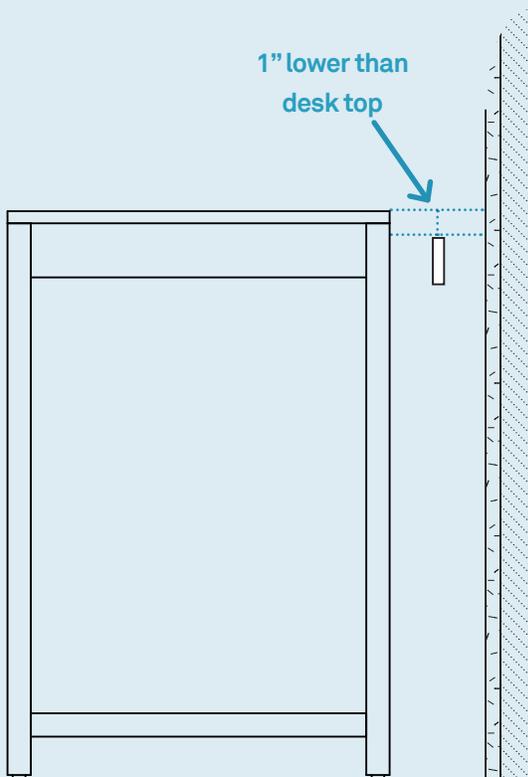


OR

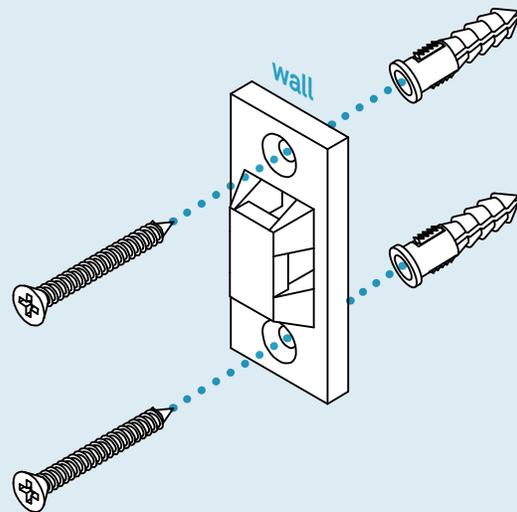

PT. 8054 x 2



PT. 1218 x 2




PT. 8041 x 1

# Step 05

## SECURE DESK.

Install and tighten wall strap prior to using the product.  
Ensure the desk is level prior to use.

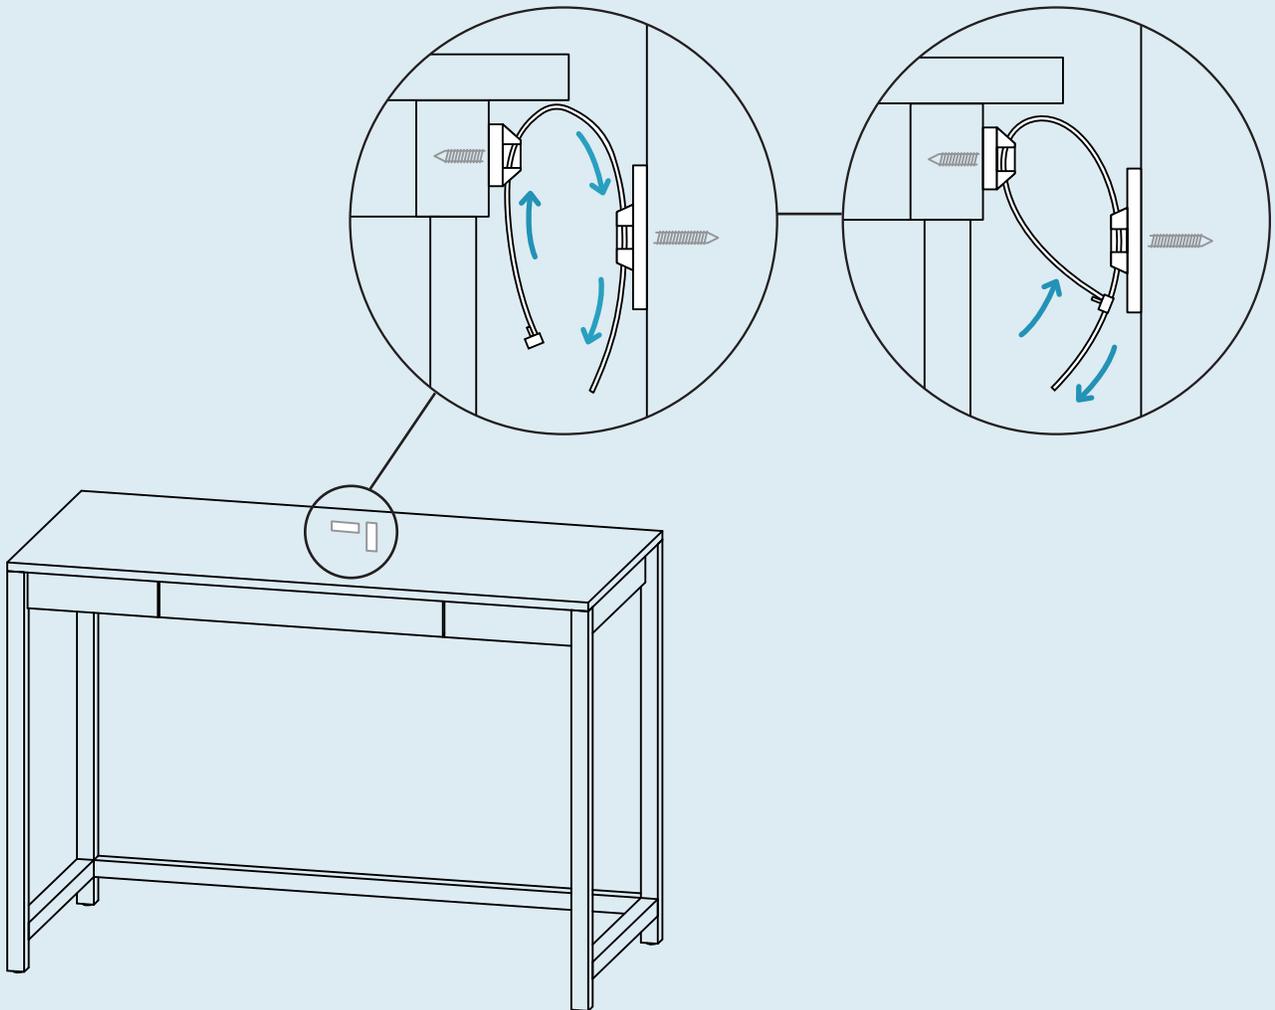

## Additional Information

### CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

