


Open Plan Low Bookcase With Storage

DESIGNED IN 2020

ASSEMBLY NOTES | REV 02

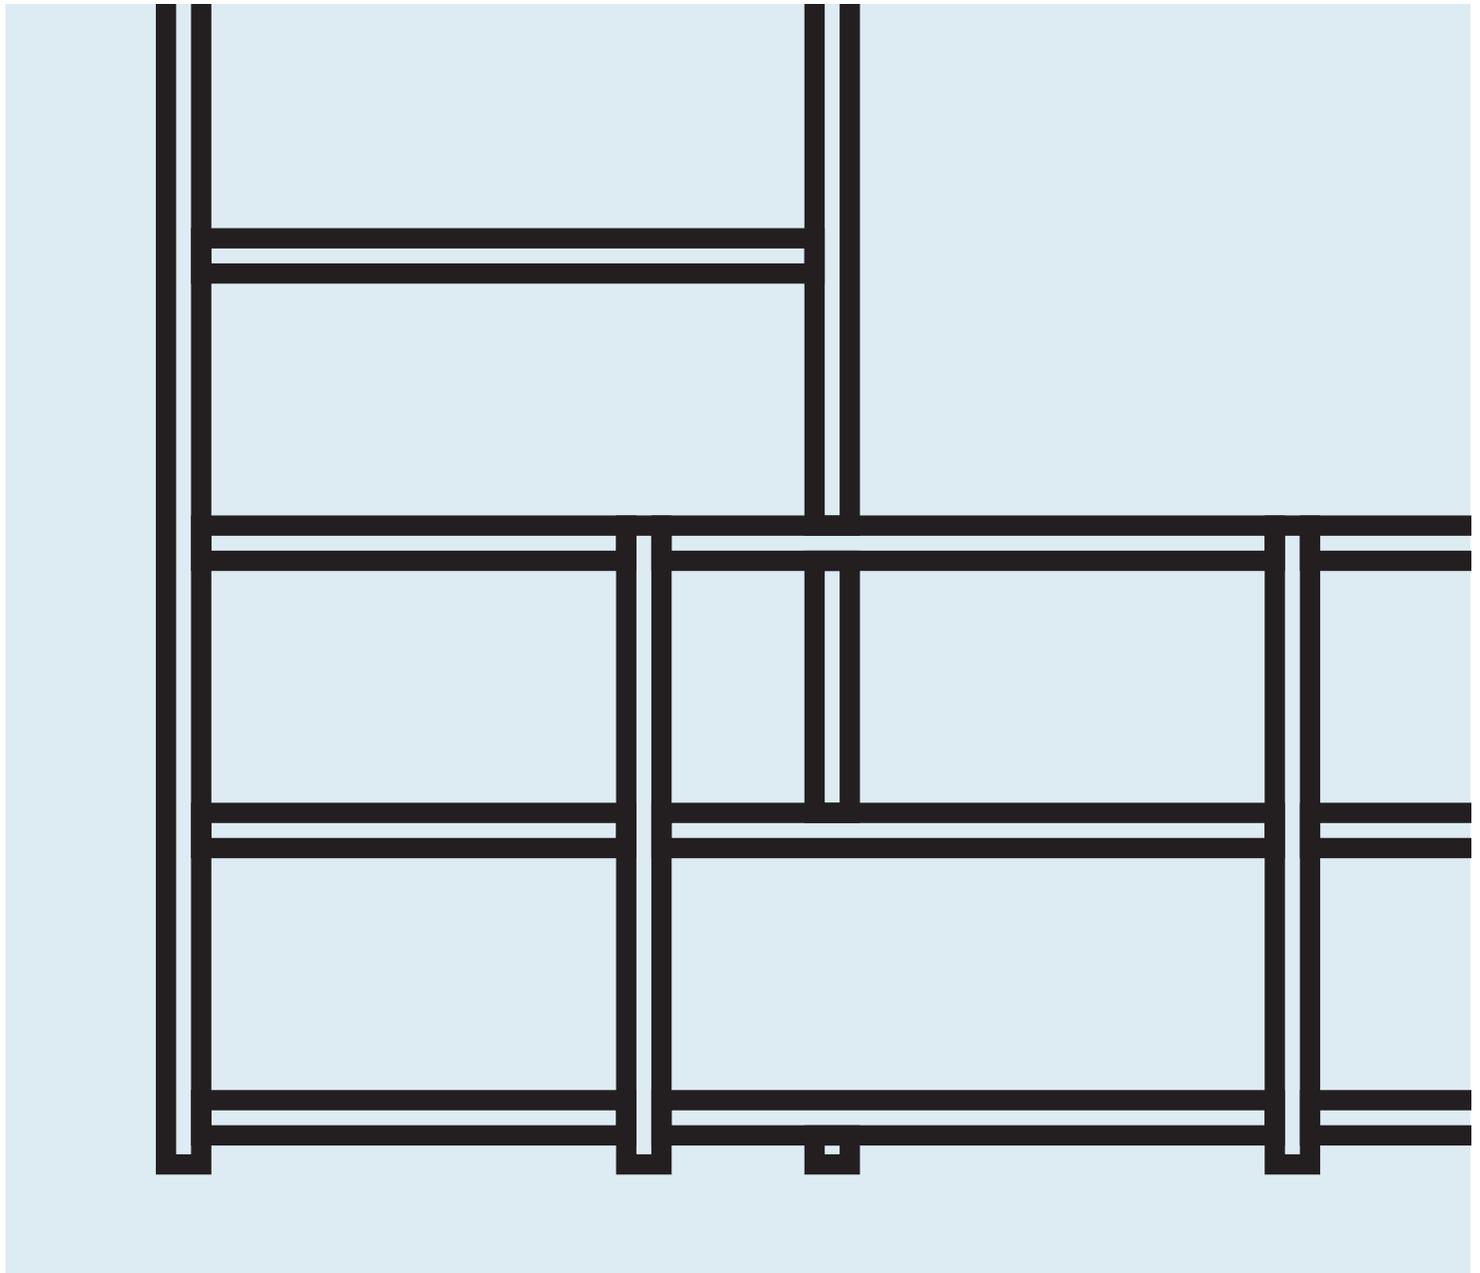

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 52

Pt. 1217




QTY 4

Pt. 1218

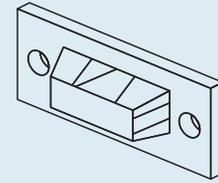

QTY 4

Pt. 8041

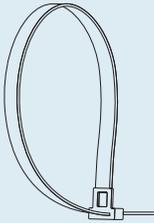

QTY 2

Pt. 8042



QTY 4

Pt. 8054



QTY 14

Pt. 1695



QTY 8

Pt. 1690




QTY 8

Pt. 8053




QTY 1

Pt. 9016

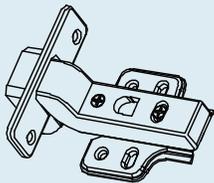


QTY 8

Door Hinge

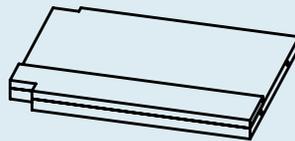

QTY 1


Partition Panel

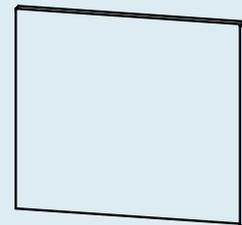

QTY 4

Door Panel

Parts & Hardware




QTY 1

Center Front Leg




QTY 1

Center Back Leg

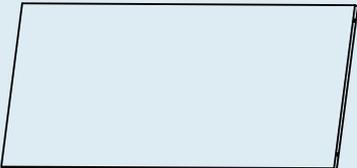


QTY 2

Back Panel

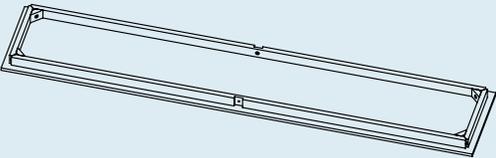


QTY 1

Top Panel

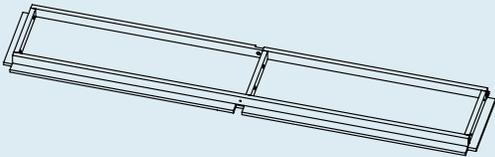


QTY 1

Center Panel

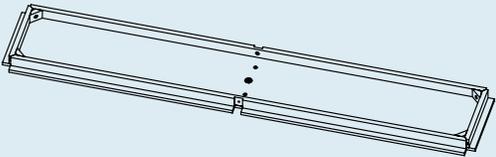


QTY 1

Bottom Panel

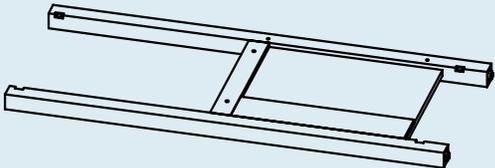

QTY 1

Left Side Frame

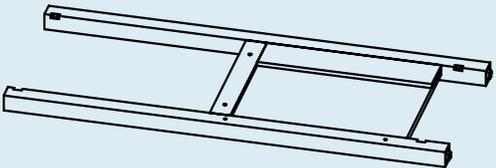

QTY 1

Right Side Frame


Step 01

ATTACH PANELS TO CENTER FRONT LEG.

Assemble this product on a soft clean surface with the help of another individual.

Attach the top, center, and bottom panels to the center front leg using the hardware provided. Ensure that the center front leg is being used and not the center back leg which has pin holes. See page 2 for reference.

NOTE: Do not fully tighten all bolts until after step 6.

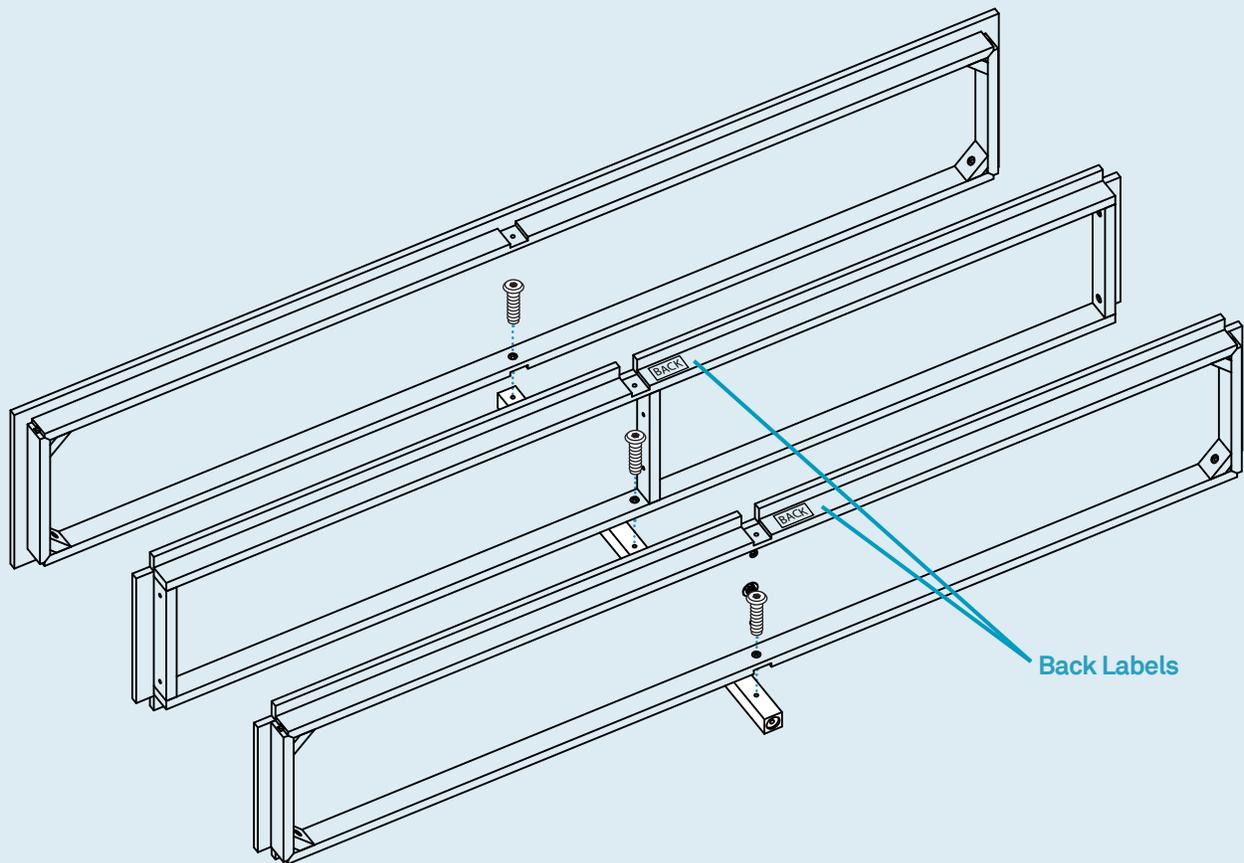

PT. 1695 x 3




PT. 9016 x 1

Step 02

ATTACH CENTER BACK LEG.

Attach center back leg using the hardware provided.

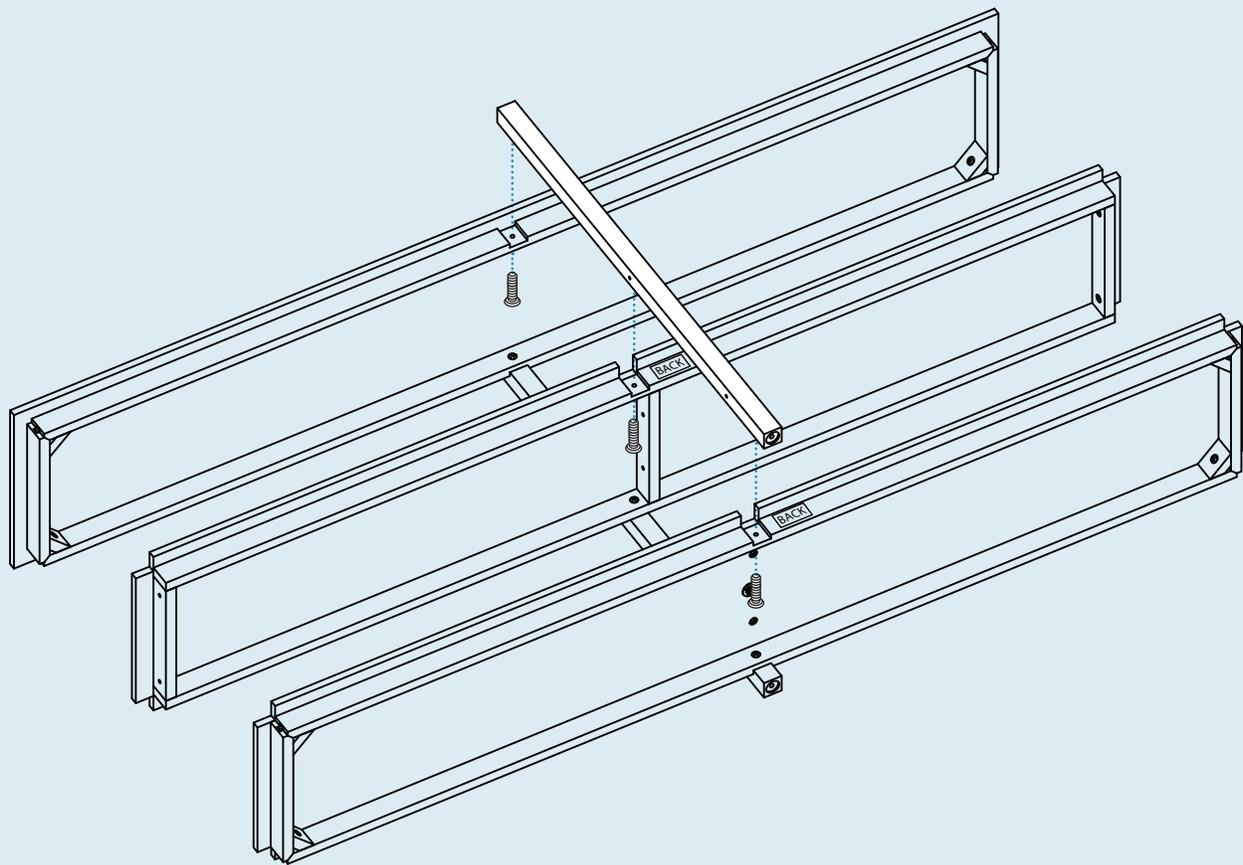

PT. 1695 x 3




PT. 9016 x 1

Step 03

ALIGN BACK PANEL.

Place metal pins in the center back panel and align with back panel pieces as shown.

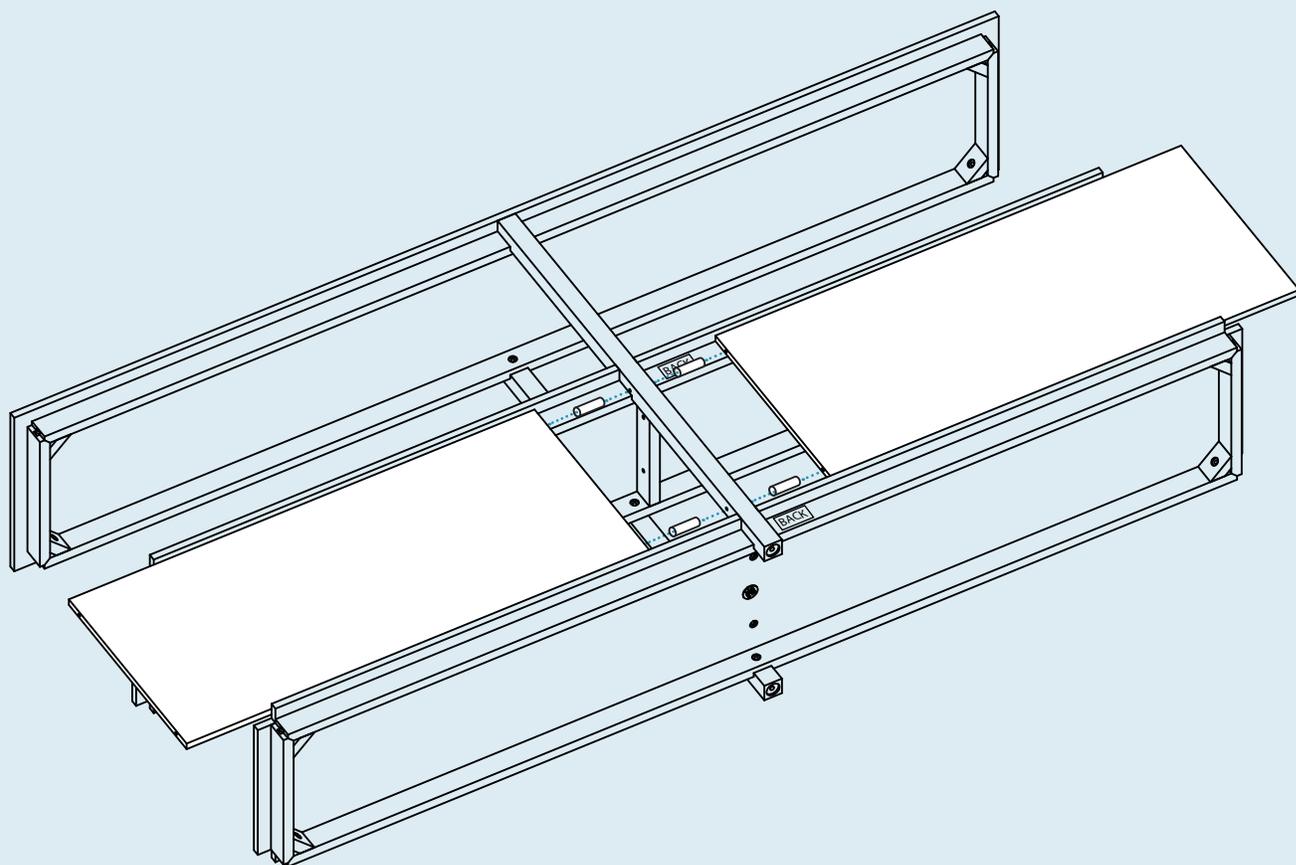


PT. 8053 x 4

Step 04

ATTACH SIDE FRAMES.

Align metal pins in the back panel and attach the side frames using the hardware provided.

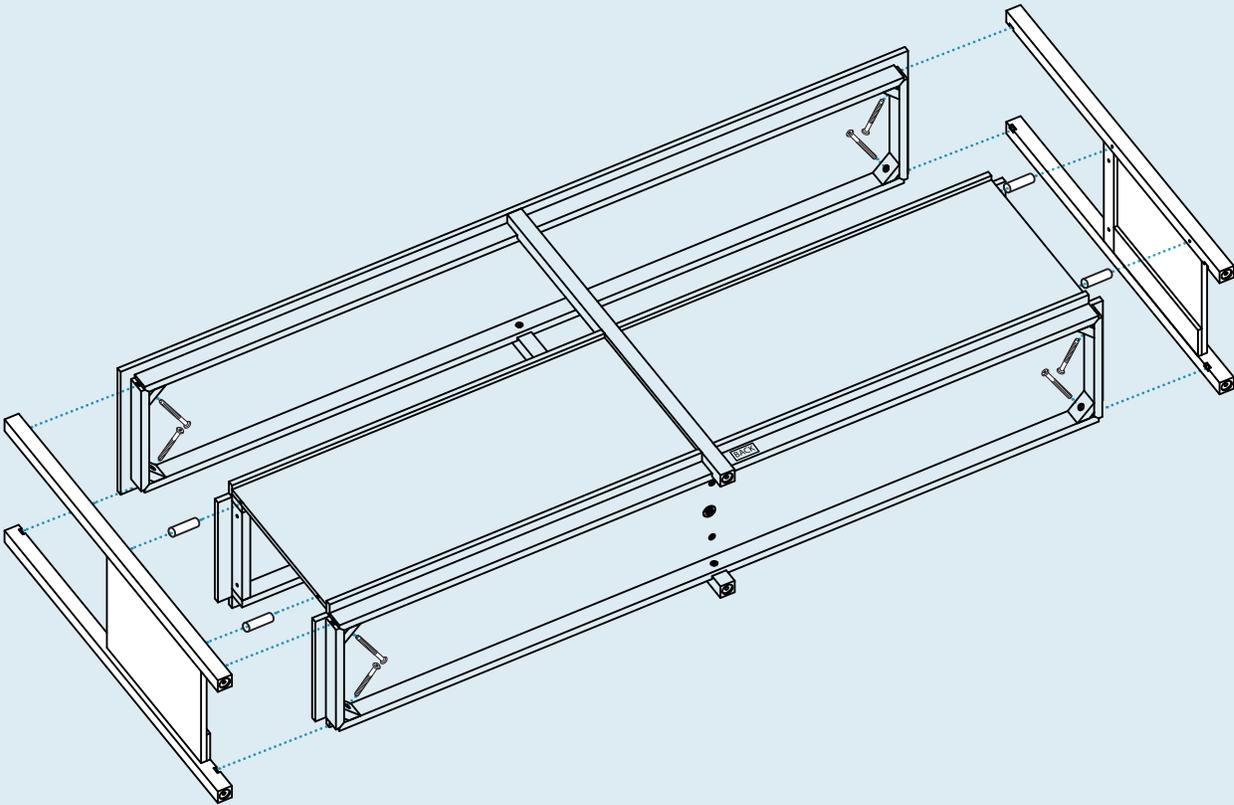


PT. 8053 x 4 PT. 1690 x 8 PT. 9016 x 1

Step 05

SECURE SIDE FRAMES.

Carefully flip the bookcase to position it on its back.

Secure side frames in place as shown using the hardware provided.

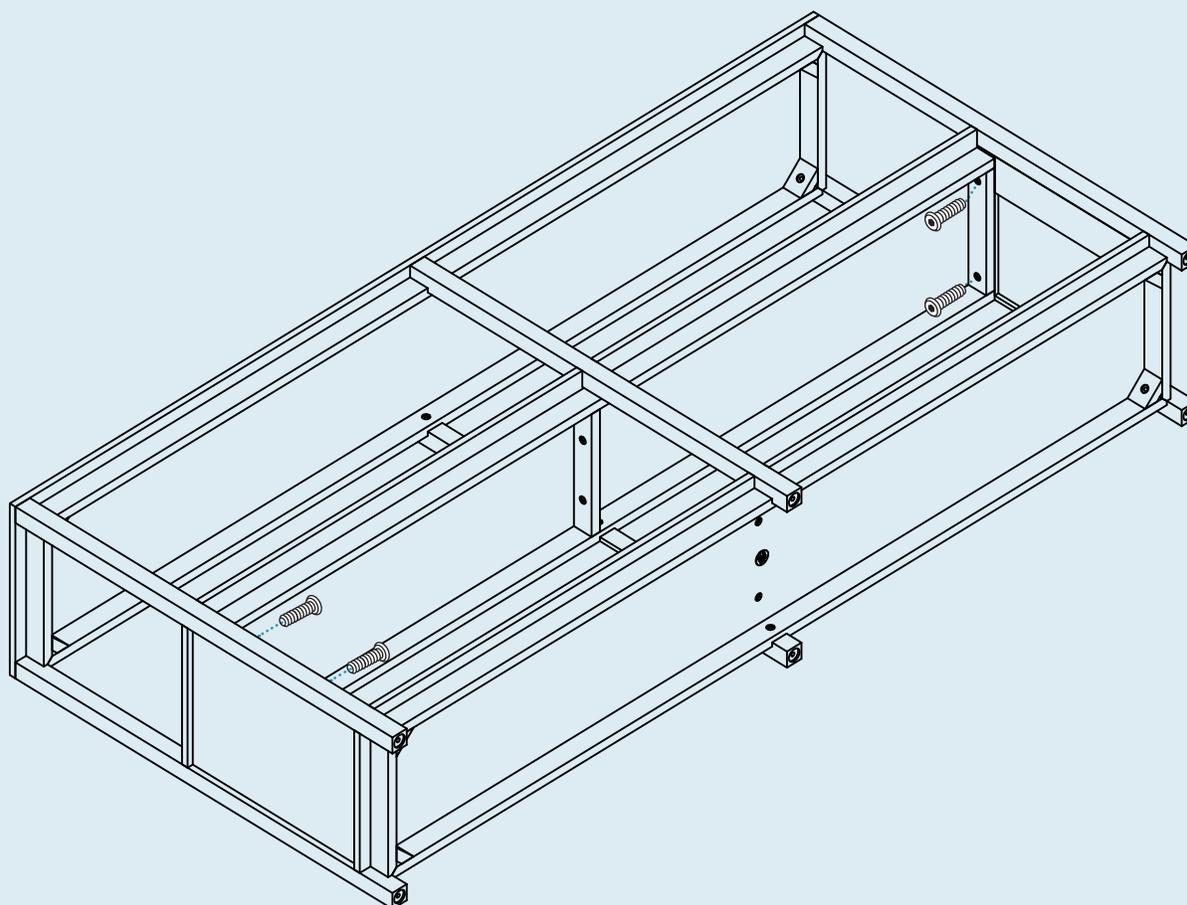

PT. 1695 x 4





PT. 9016 x 1

Step 06

ATTACH PARTITION PANEL.

Insert partition panel inside the bookcase at an angle as shown. Attach the side frames using the hardware provided.

Tighten bolts that were installed in previous steps.

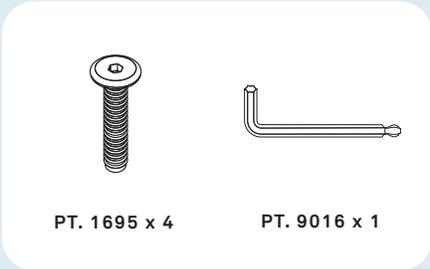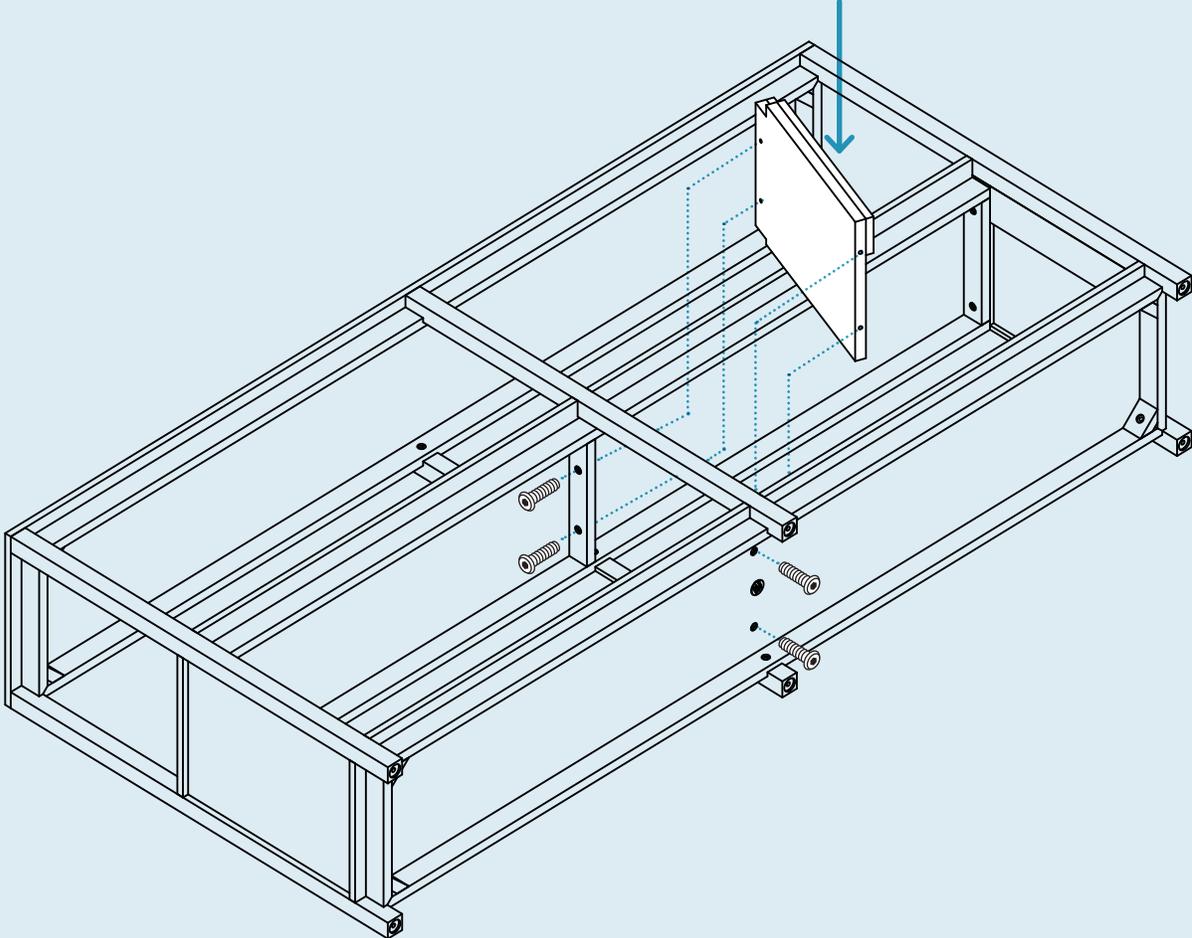


Step 07

INSTALL DOOR HINGES.

Install hinges to the doors as shown using the hardware provided.



PT. 1217 x 16

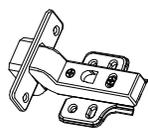


Door Hinge x 8

Step 08

INSTALL DOORS.

Install doors as shown using the hardware provided.

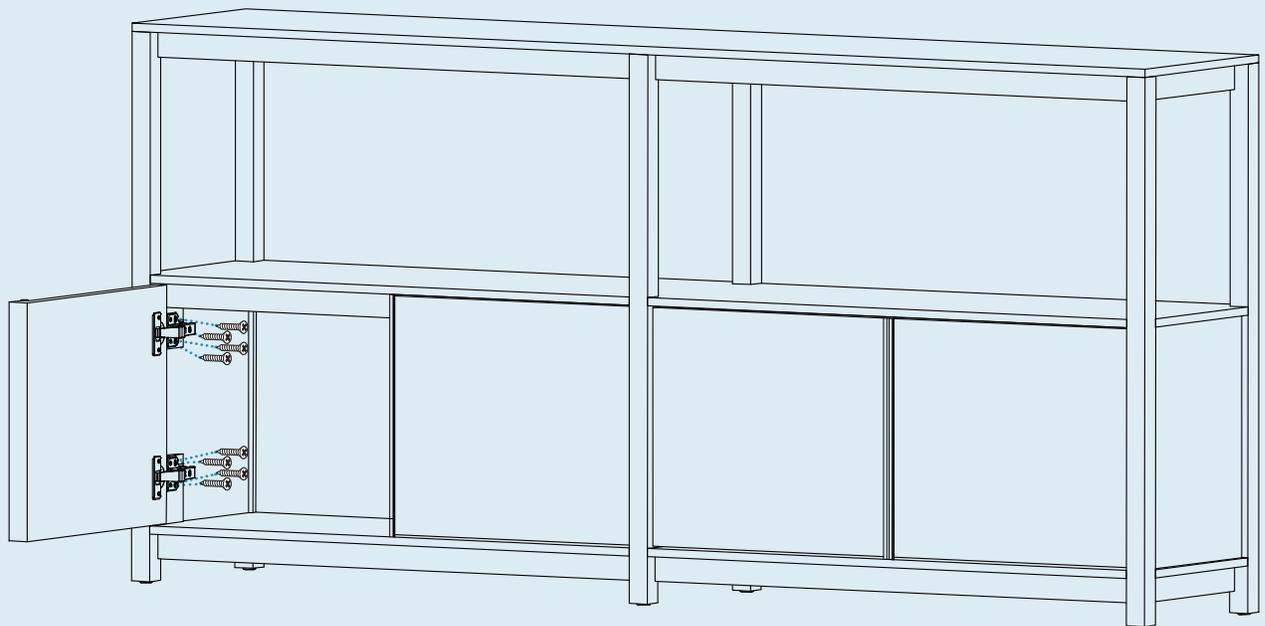


PT. 1217 x 32

Step 09


ATTACH ANTI-TIP BRACKET TO BOOKCASE.

Brackets must be installed to the back rail of the top panel. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

Note: Ensure that the depth of the pilot hole does not exceed 1/2". A deeper pilot hole may be visible on the opposite side.

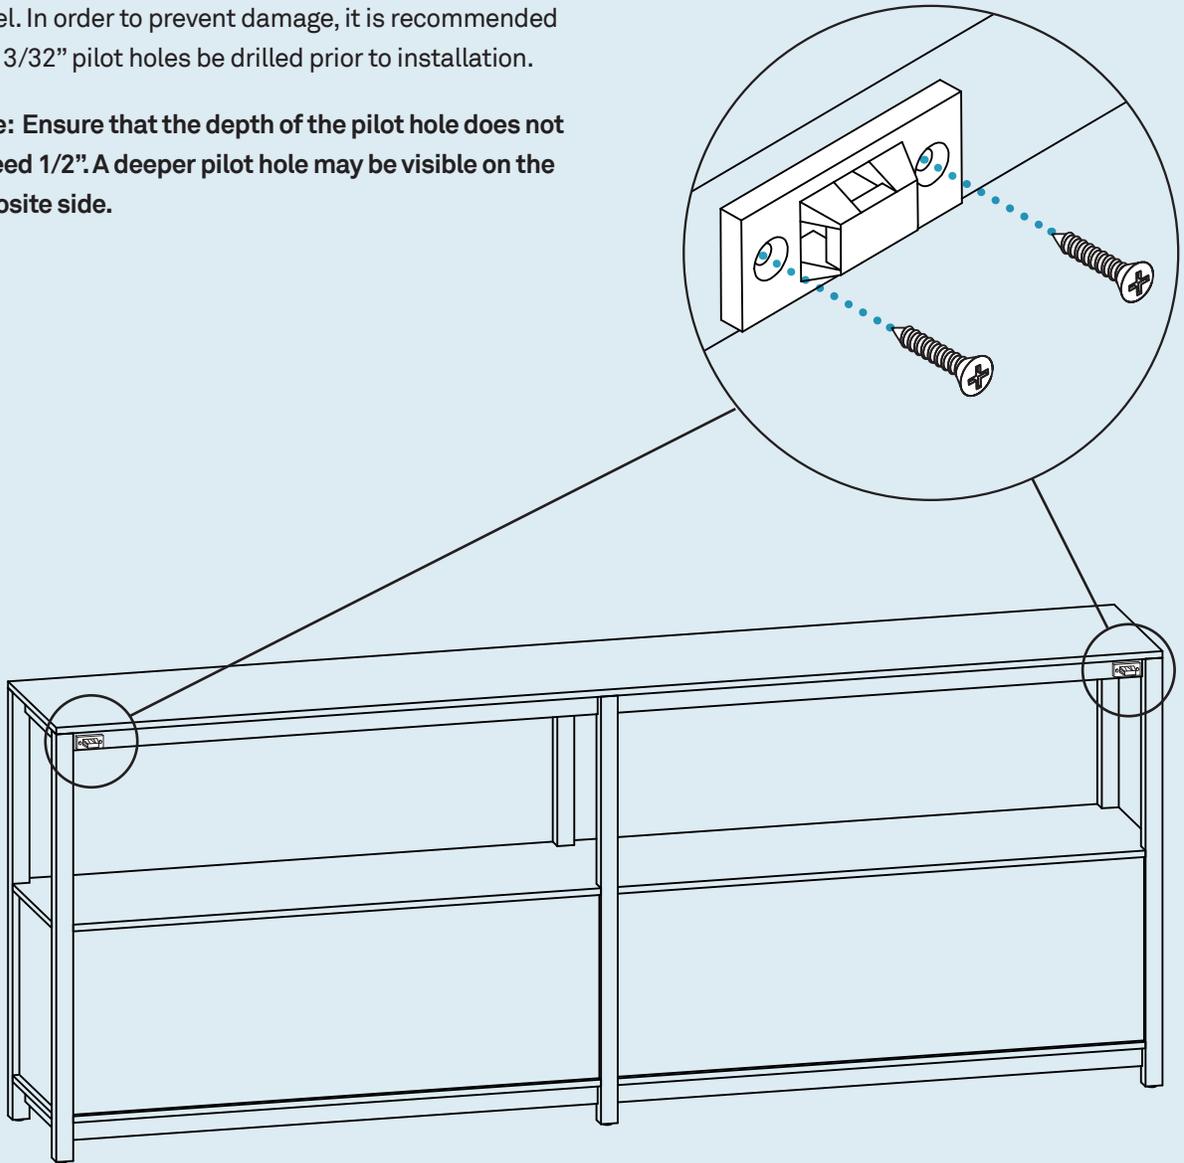

PT. 1217 x 4

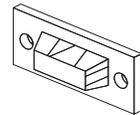

PT. 8041 x 2



Step 10

ATTACH ANTI-TIP BRACKET TO WALL.


Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

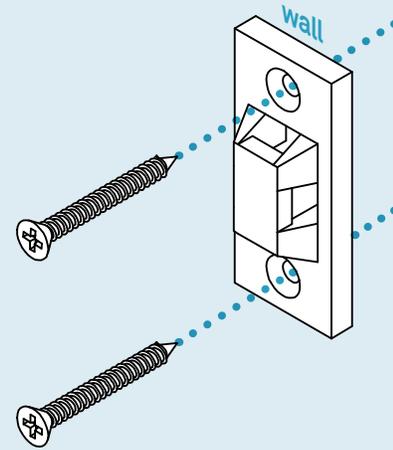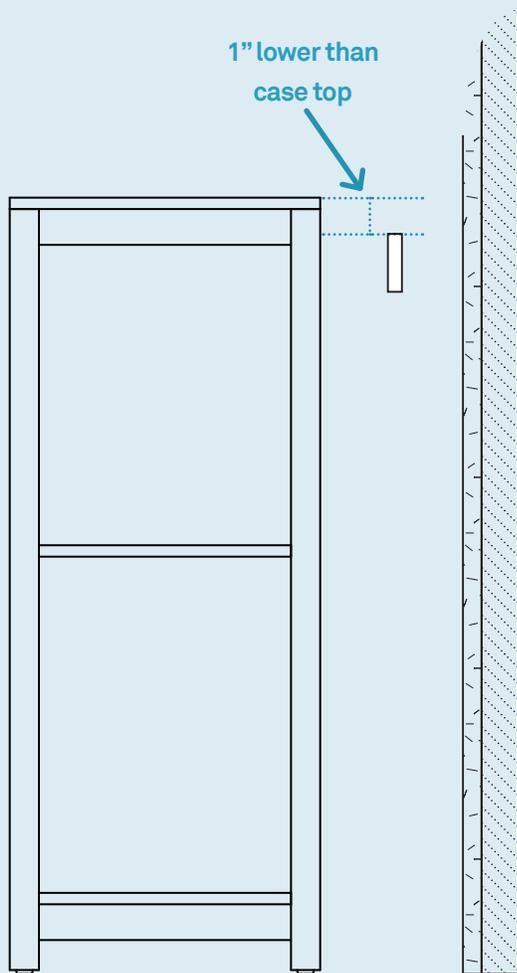


OR

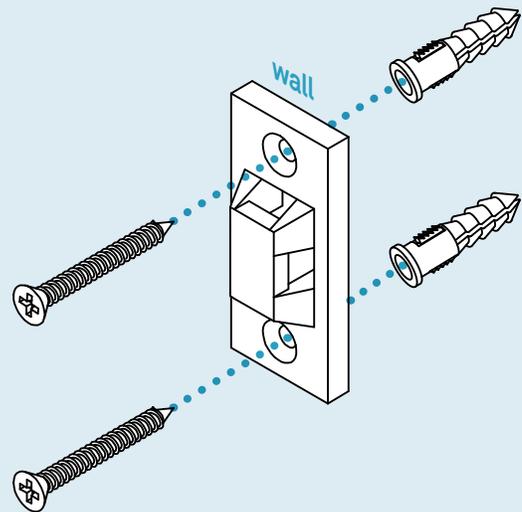

PT. 8054 x 4



PT. 1218 x 4

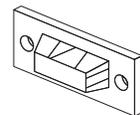


PT. 8041 x 2

Step 11

SECURE BOOKCASE.


Install and tighten wall straps prior to using the product.
Adjust glides at bottom of legs to ensure they are level prior to use.

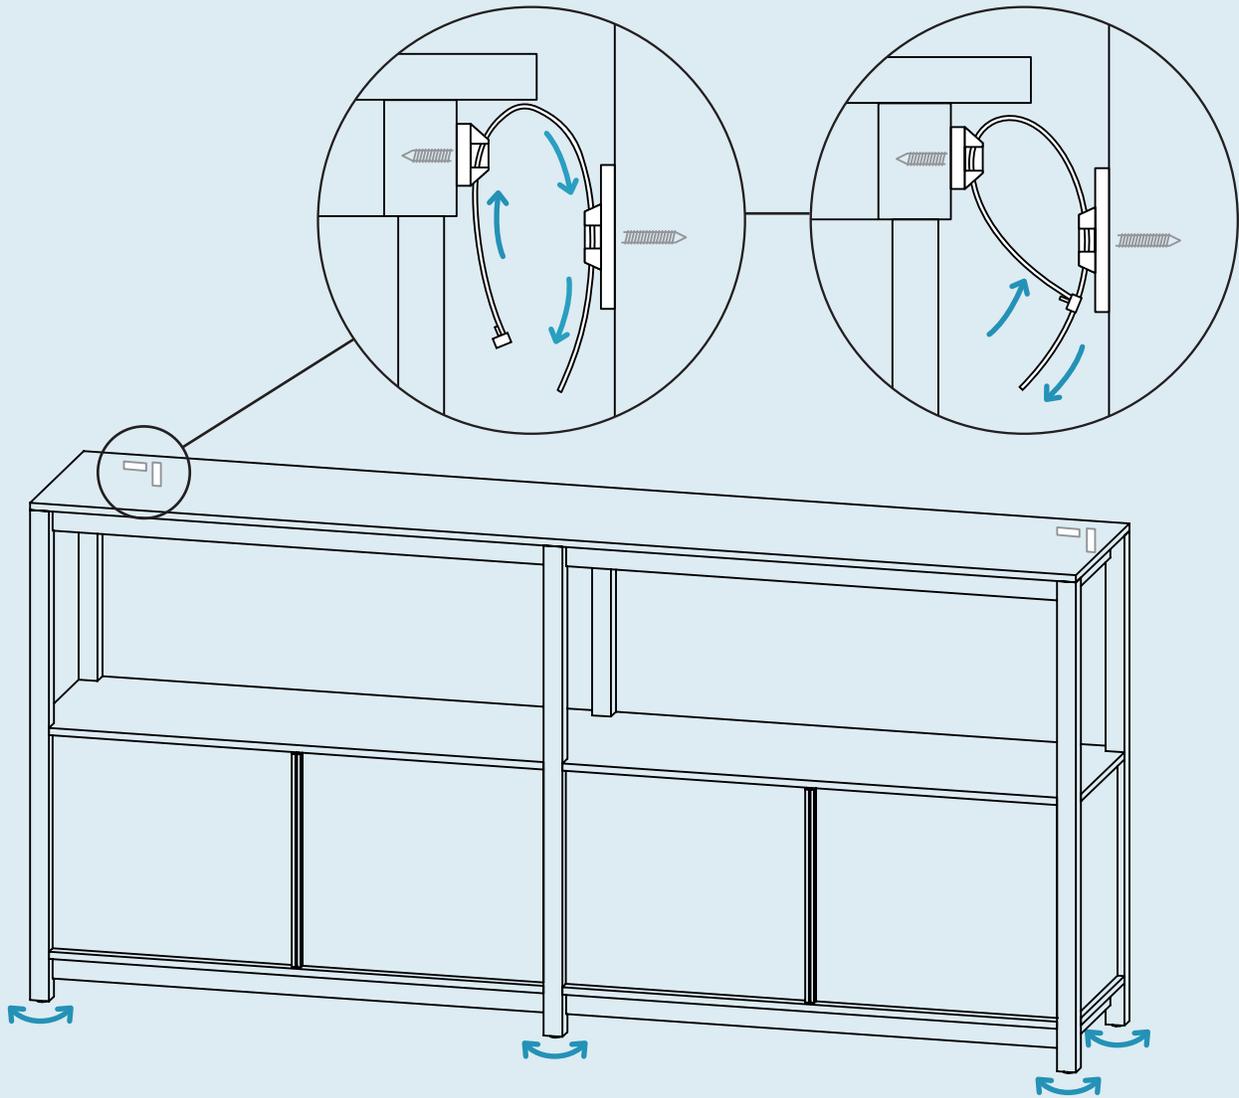

Step 12

DOOR ADJUSTMENT.


Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

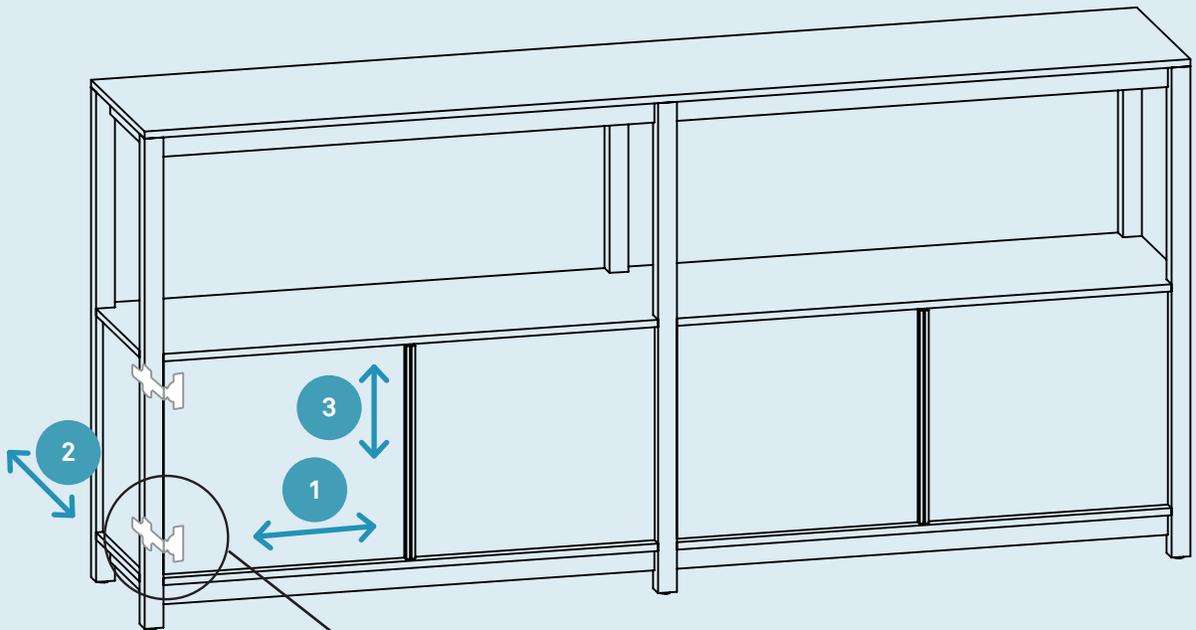

If door needs adjustment from TOP TO BOTTOM, Use Screw #3.

If door needs adjustment from SIDE TO SIDE, Use Screw #1.

If door needs adjustment from FRONT TO BACK, Use Screw #2.

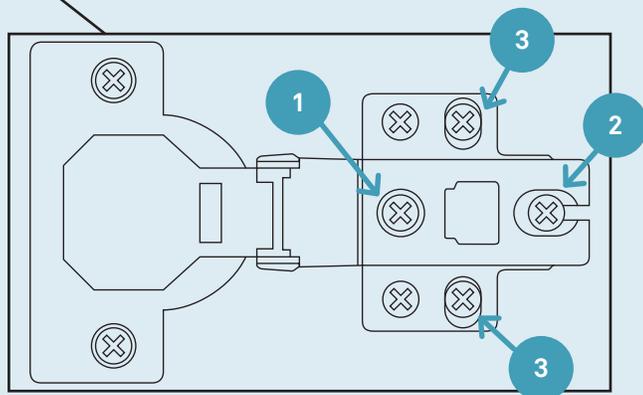

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

