


Open Plan Tall Bookcase With Storage

DESIGNED IN 2020

ASSEMBLY NOTES | REV 02

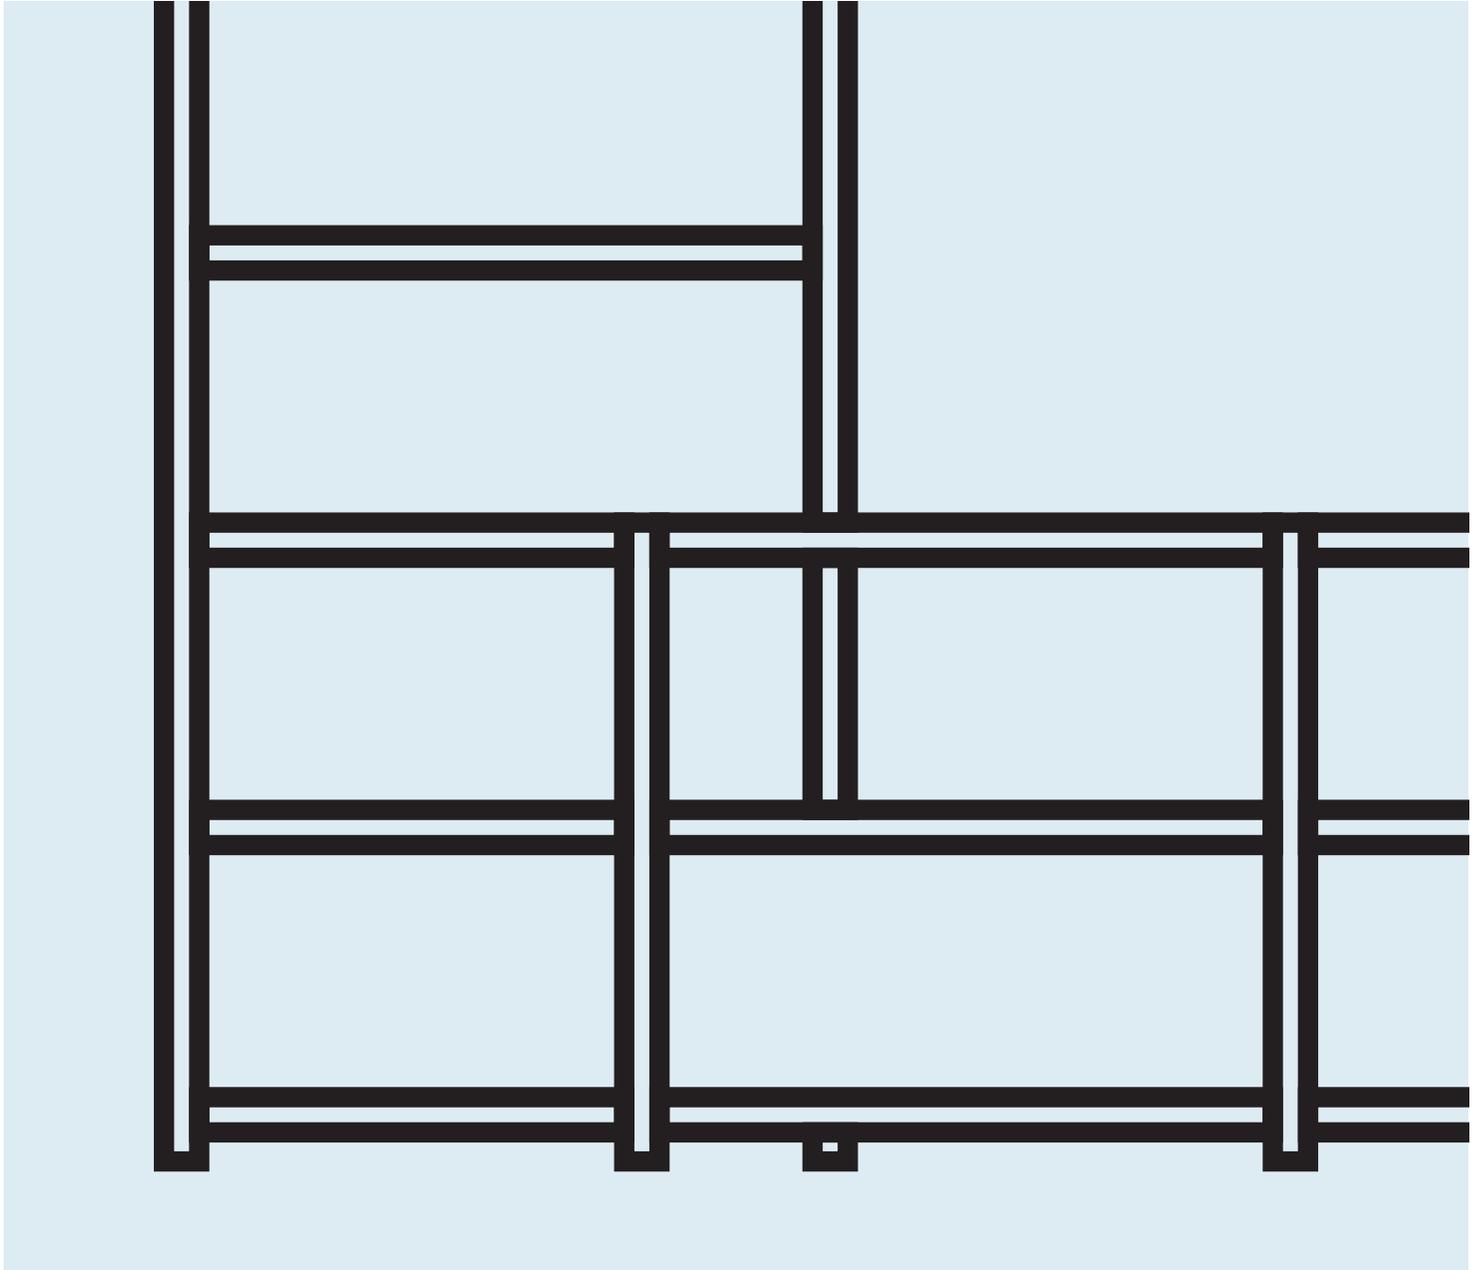

NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.

Parts & Hardware




QTY 26

Pt. 1217




QTY 2

Pt. 1218

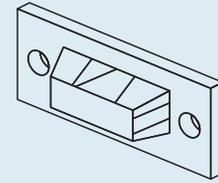

QTY 2

Pt. 8041

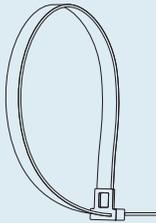

QTY 1

Pt. 8042



QTY 2

Pt. 8054



QTY 4

Shelf Pin



QTY 4

Pt. 1695



QTY 16

Pt. 1690




QTY 6

Pt. 8053



QTY 1

Pt. 9016

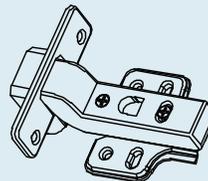

QTY 4

Door Hinge

Parts & Hardware



QTY _____ 2

Door



QTY _____ 1

Adjustable Shelf



QTY _____ 1

Back Panel



QTY _____ 1

Top Panel




QTY _____ 2

Shelf Panel




QTY _____ 1

Center Panel

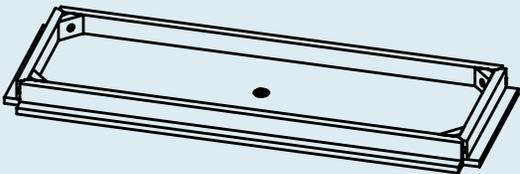


QTY _____ 1

Bottom Panel



QTY _____ 1

Left Side Frame



QTY _____ 1



Right Side Frame

Step 01

ATTACH PANELS TO LEFT SIDE FRAME.

Attach the top, shelf, center, and bottom panels to the left side frame using the hardware provided. Ensure that the longer PT. 1690 is used for attaching the top, shelf, and bottom panels.

Place metal pins in the side frame and align with back panel piece as shown.

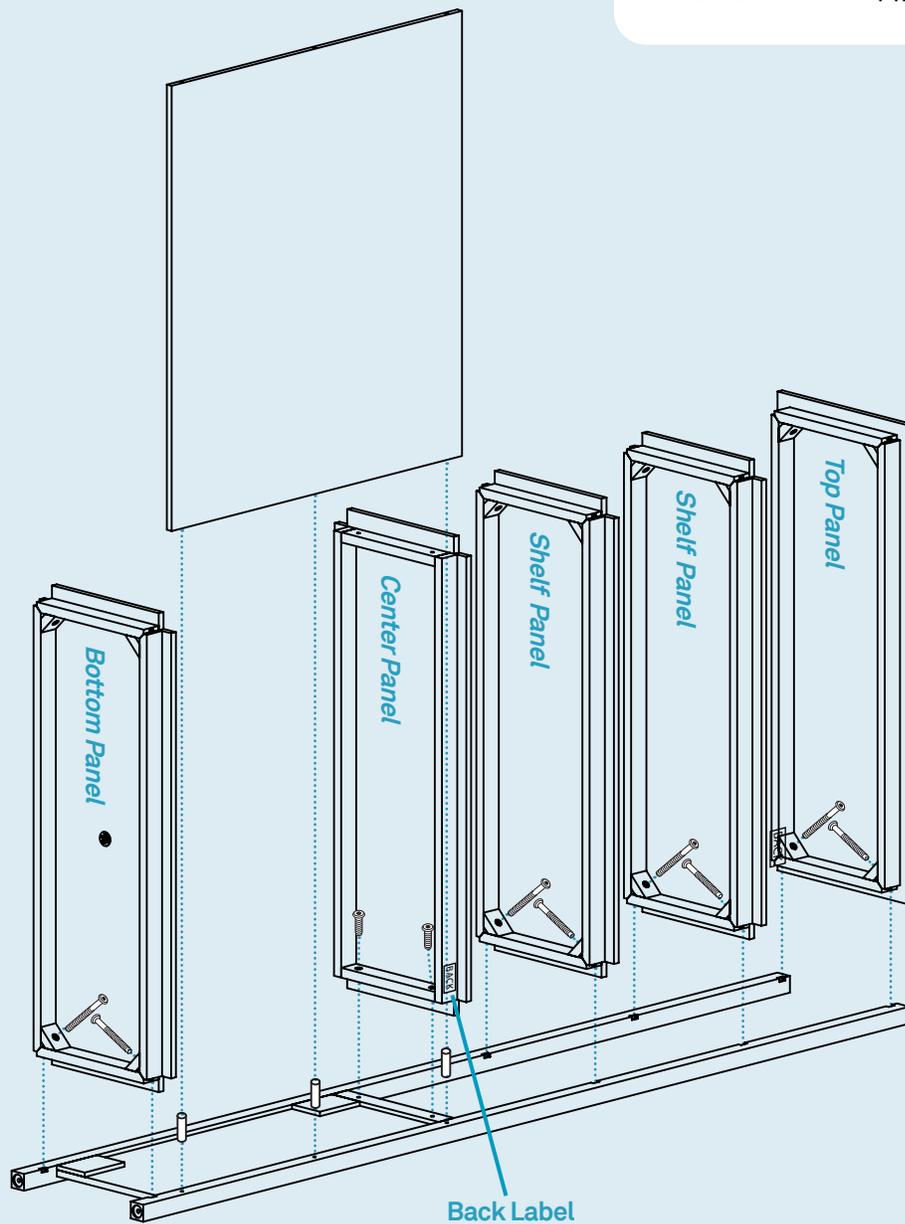
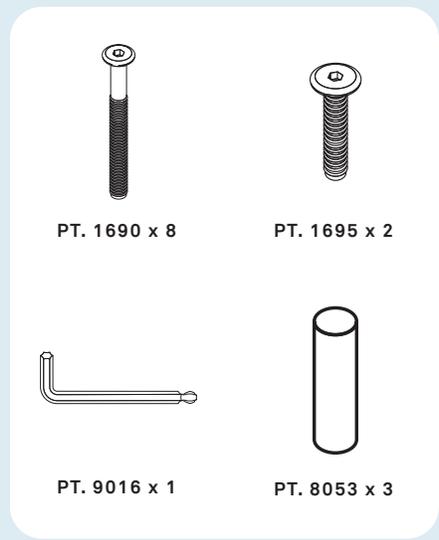


Step 02

ATTACH RIGHT SIDE FRAME.

Attach the right side frame using the hardware provided.


Place metal pins in the side frame and align with back panel piece as shown.

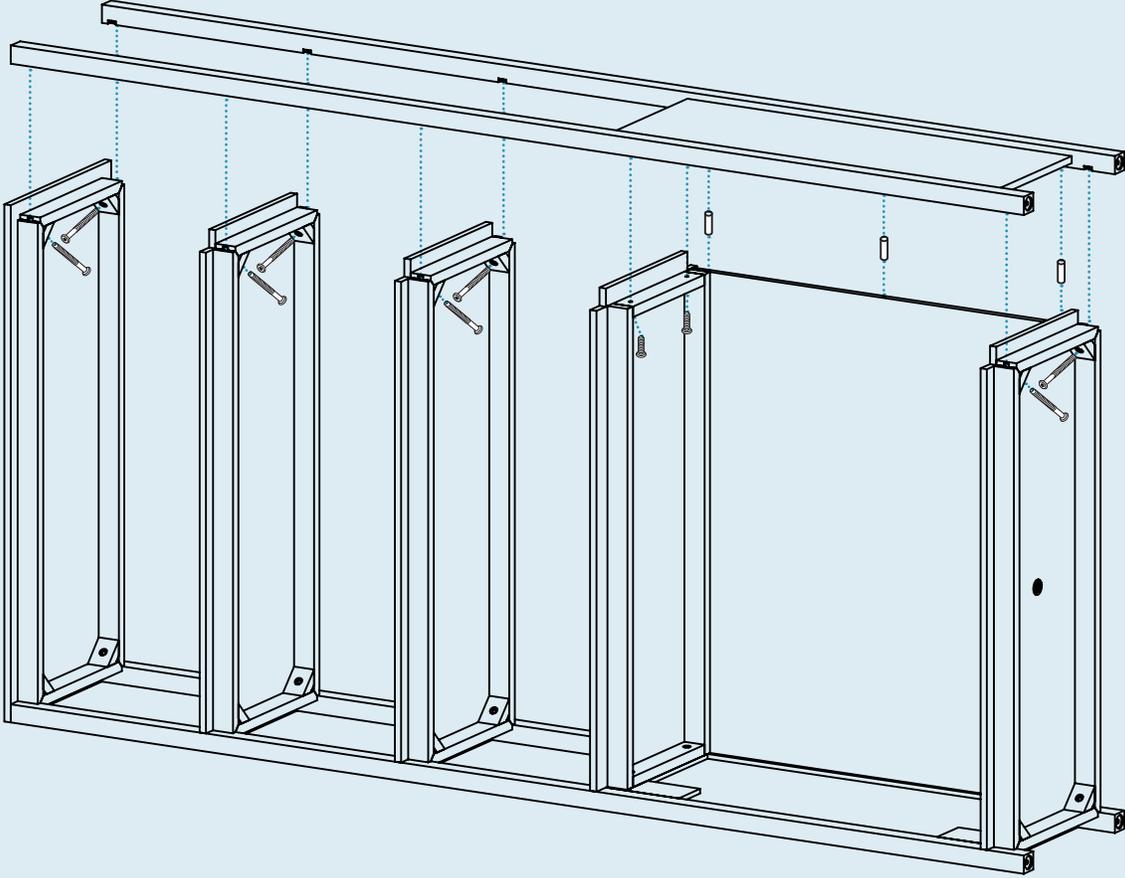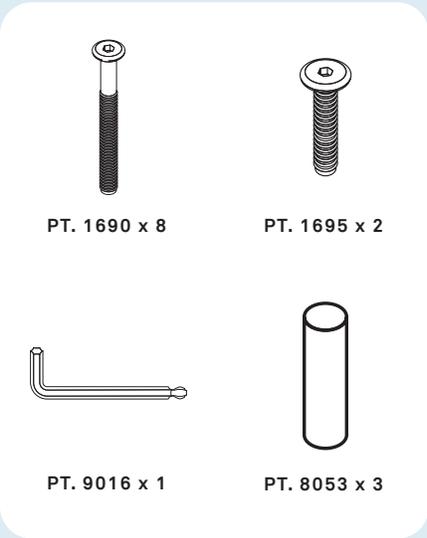

Step 03

INSTALL ADJUSTABLE SHELF.



Insert shelf pins at desired height and install adjustable shelf.

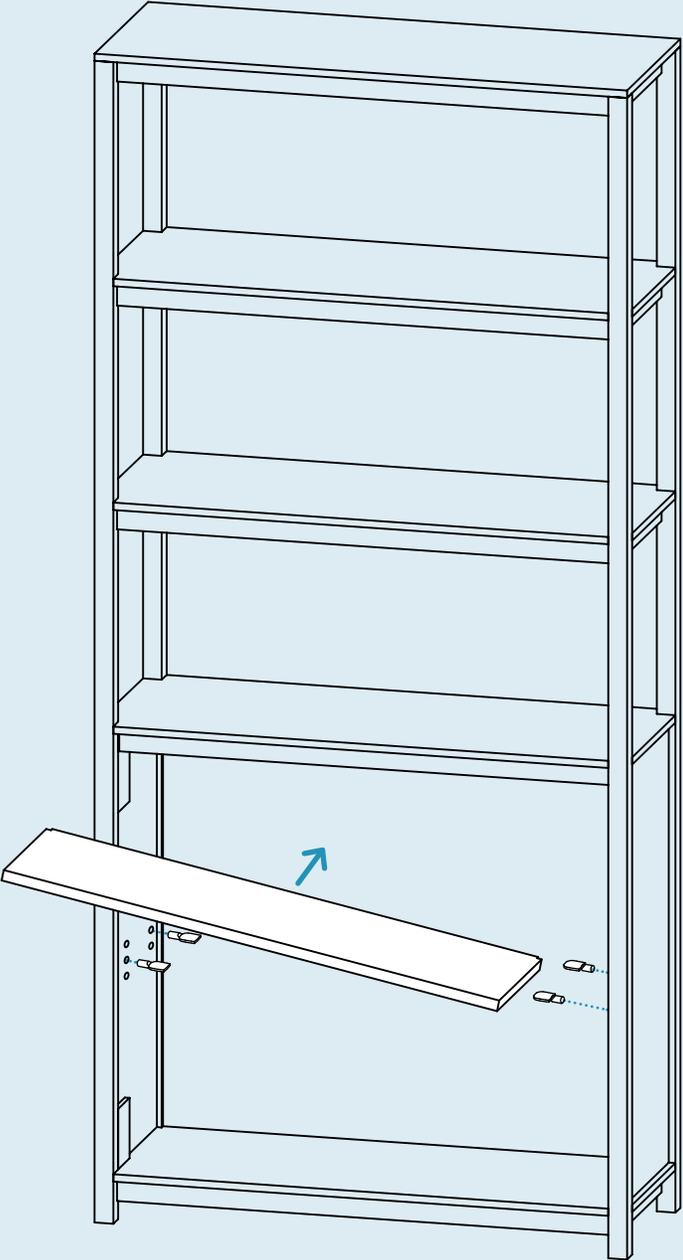

Step 04

INSTALL DOOR HINGES.


Install hinges to the doors as shown using the hardware provided.

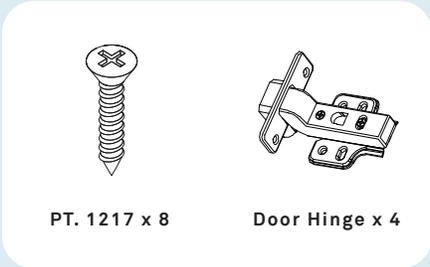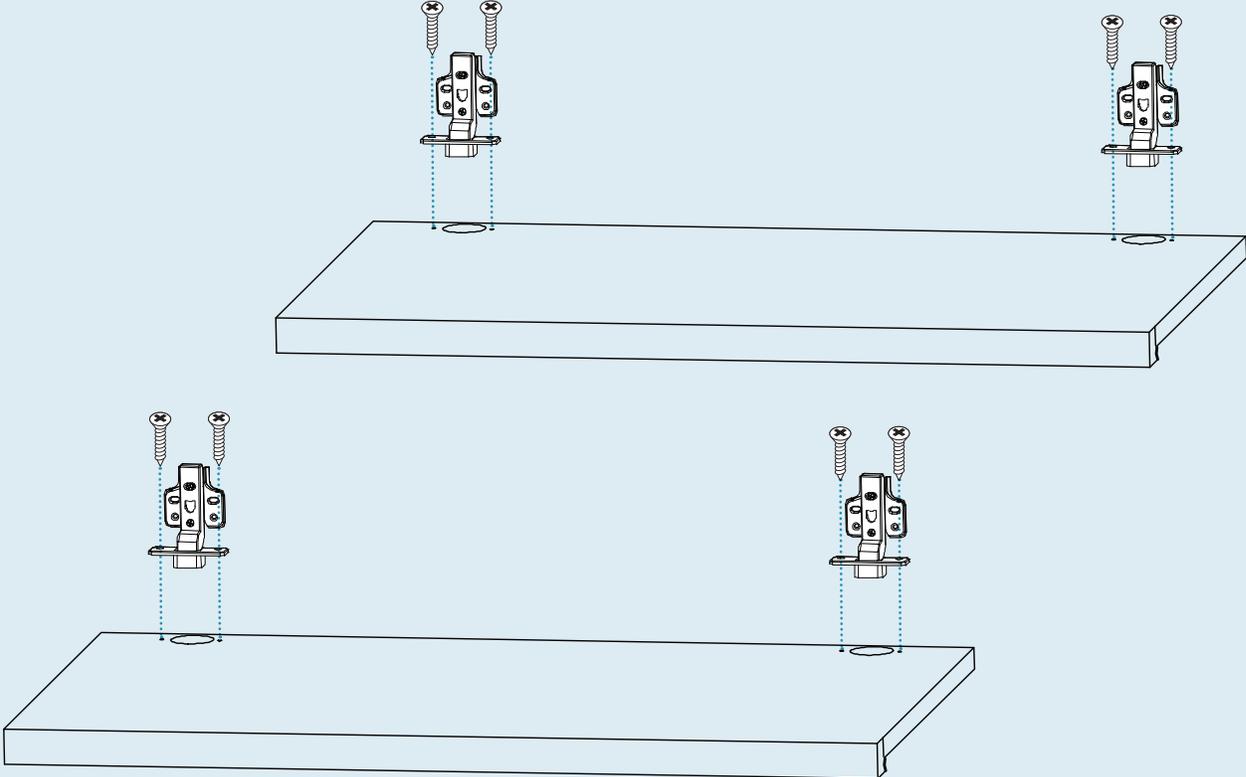

Step 05

INSTALL DOORS.

Install doors as shown using the hardware provided.

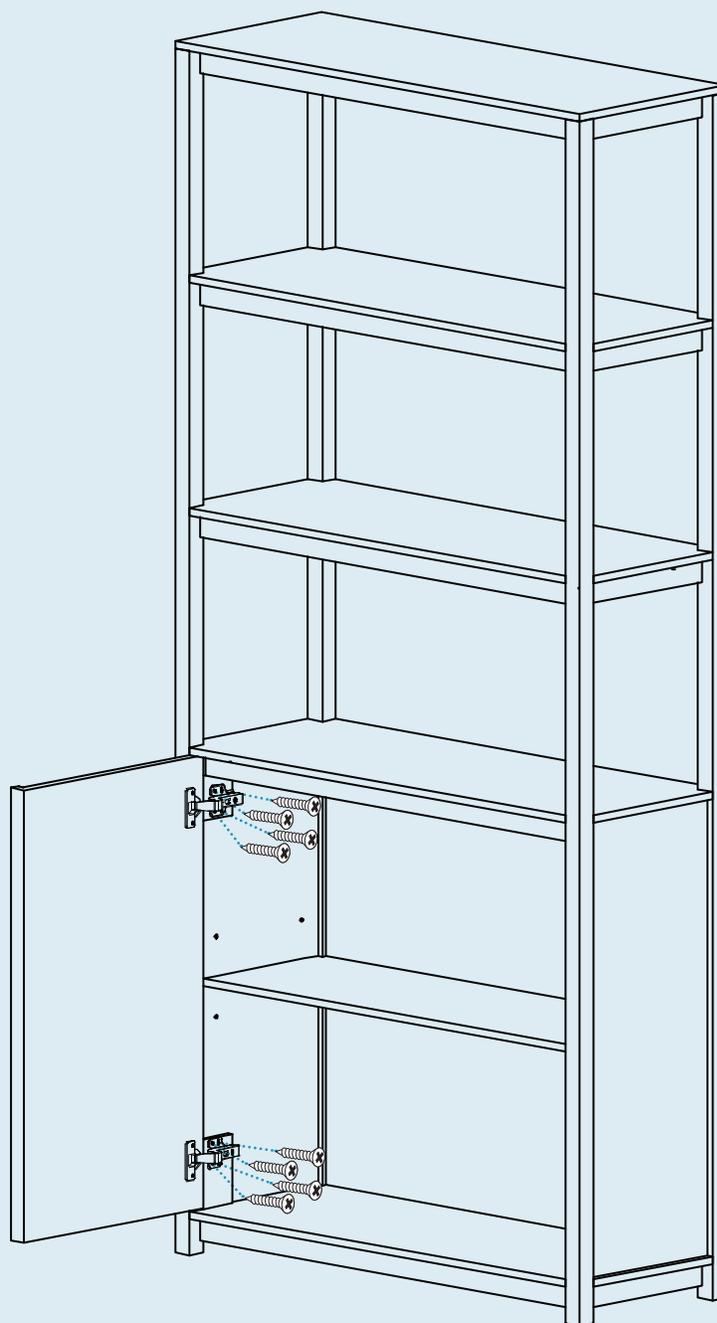


PT. 1217 x 16

Step 06


ATTACH ANTI-TIP BRACKET TO BOOKCASE.

Brackets must be installed to the back rail of the shelf panel as shown. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

Note: Ensure that the depth of the pilot hole does not exceed 1/2". A deeper pilot hole may be visible on the opposite side.

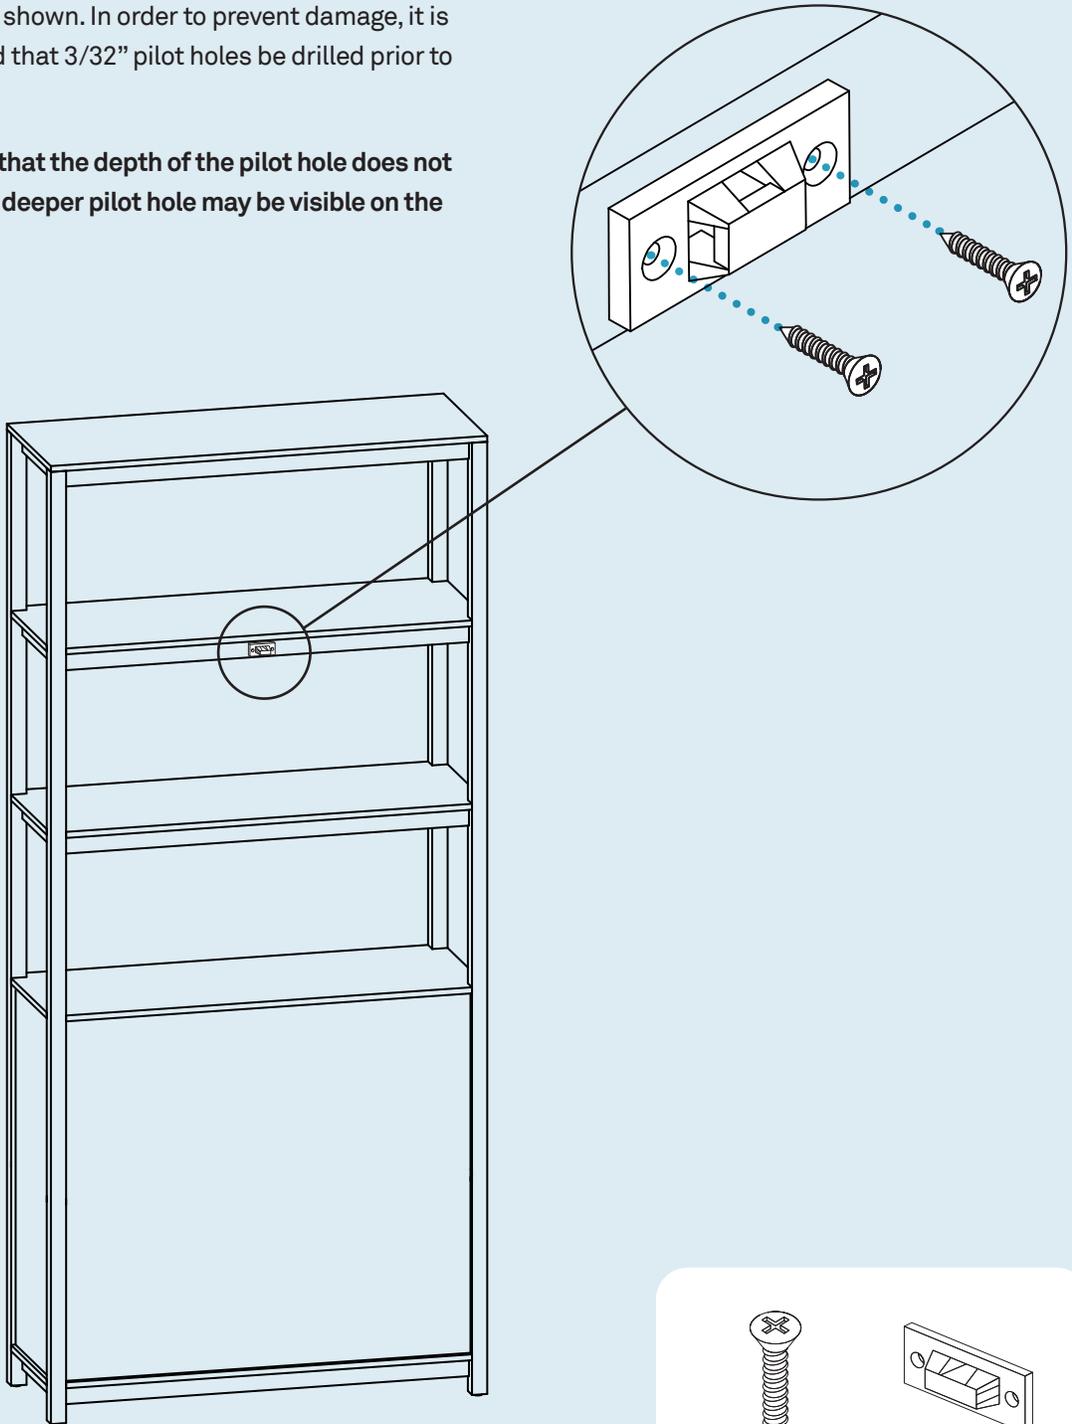

PT. 1217 x 2



PT. 8041 x 1


Step 07

ATTACH ANTI-TIP BRACKET TO WALL.



Wall anchors and fasteners are included for installation into drywall. Please consult your local hardware professional to determine the hardware best suited for your wall type.

If the mounting locations are positioned on a stud, the installation of wall anchors may be skipped. Instead, drill $7/64$ " pilot holes in the marked positions and install anti-tip bracket with provided hardware as shown.

If the mounting locations are not positioned on a stud, drill $15/64$ " holes into the marked locations and press wall anchors into the drilled holes and install anti-tip bracket with provided hardware as shown.

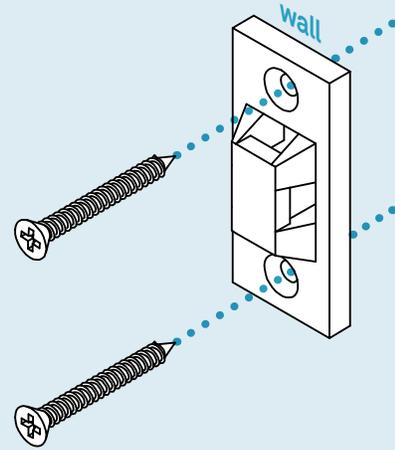


OR

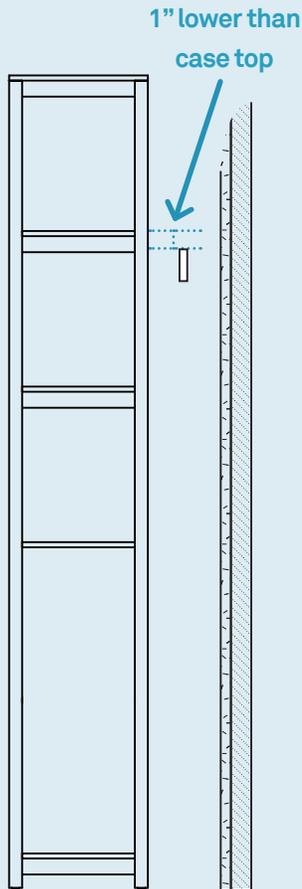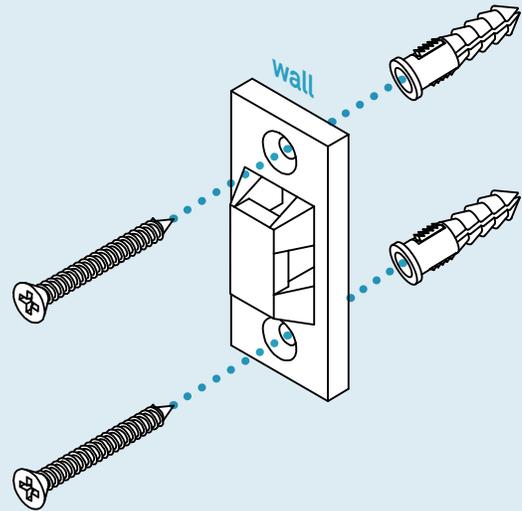

PT. 8054 x 2



PT. 1218 x 2




PT. 8041 x 1

Step 08

SECURE BOOKCASE.


Install and tighten wall strap prior to using the product.
Adjust glides at bottom of legs to ensure they are level prior to use.

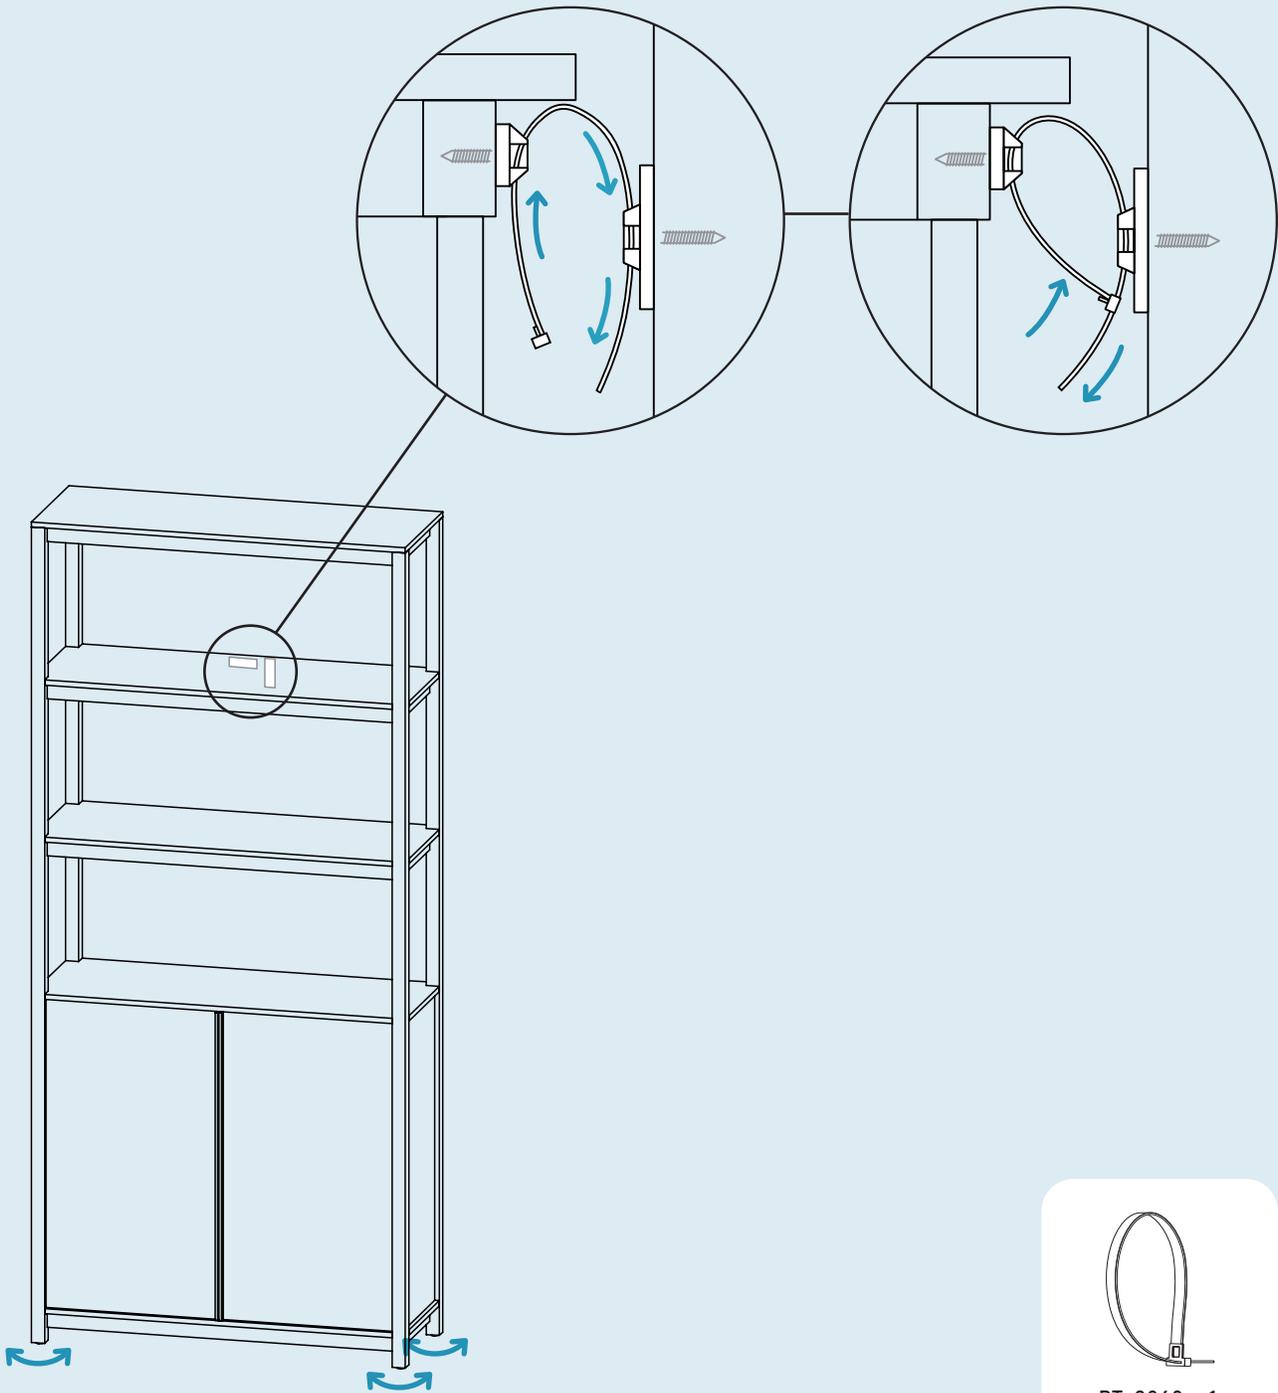

Step 09

DOOR ADJUSTMENT.


Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

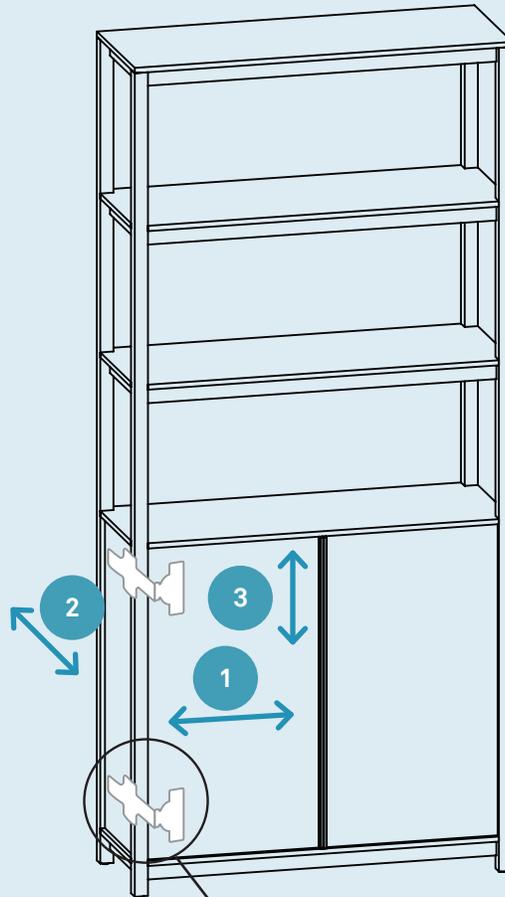

If door needs adjustment from TOP TO BOTTOM, Use Screw #3.

If door needs adjustment from SIDE TO SIDE, Use Screw #1.

If door needs adjustment from FRONT TO BACK, Use Screw #2.

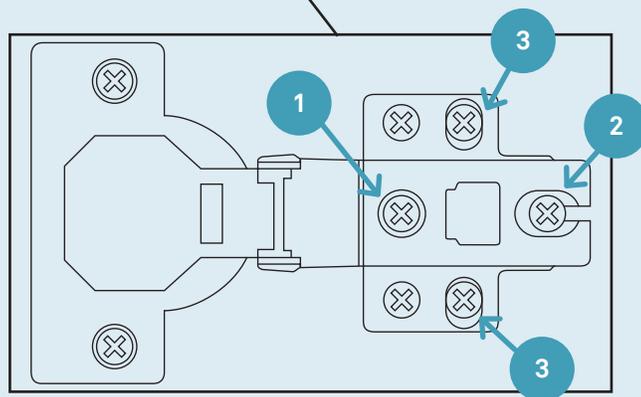

Additional Information

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth in the direction of the wood grain.

