


Perimeter Floor Lamp

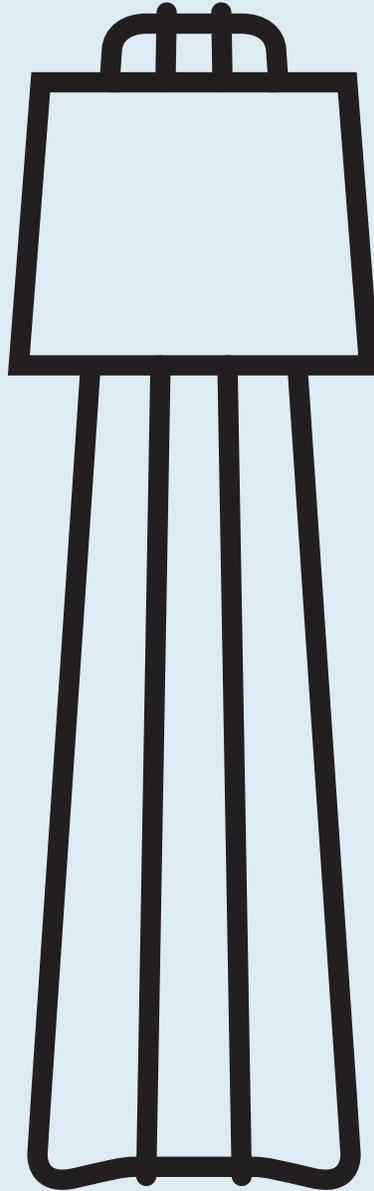

DESIGNED IN 2011

ASSEMBLY NOTES | REV 00



NEED A HAND?

Contact us at service@bludot.com or
844.425.8368 for assistance.

@BLUDOT

We design all our pieces in our Minneapolis studio. Follow
along on Instagram for some sneak peeks into the process.


Parts & Hardware




QTY 8
Pt.1042




QTY 1
Pt. 9004

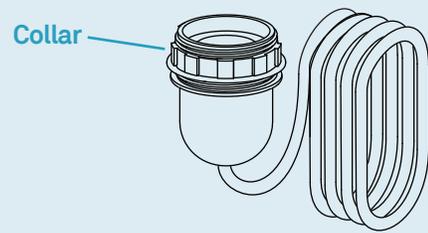

QTY 1
Socket

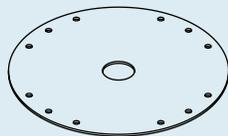


QTY 1
Diffuser

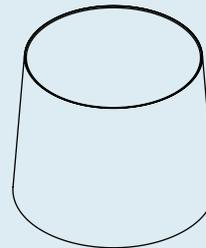

QTY 1
Shade



QTY 2
Outer Frame


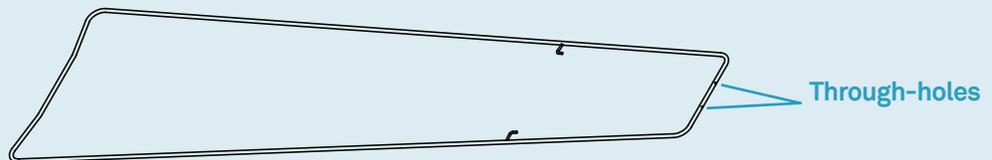


QTY 2
Inner Frame

Step 01

ASSEMBLE FRAME.


Attach inner frame and outer frame pieces using the provided hardware as shown. Do not fully tighten until all bolt locations are aligned.

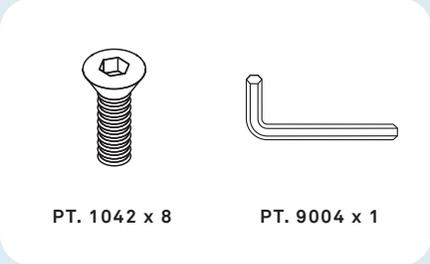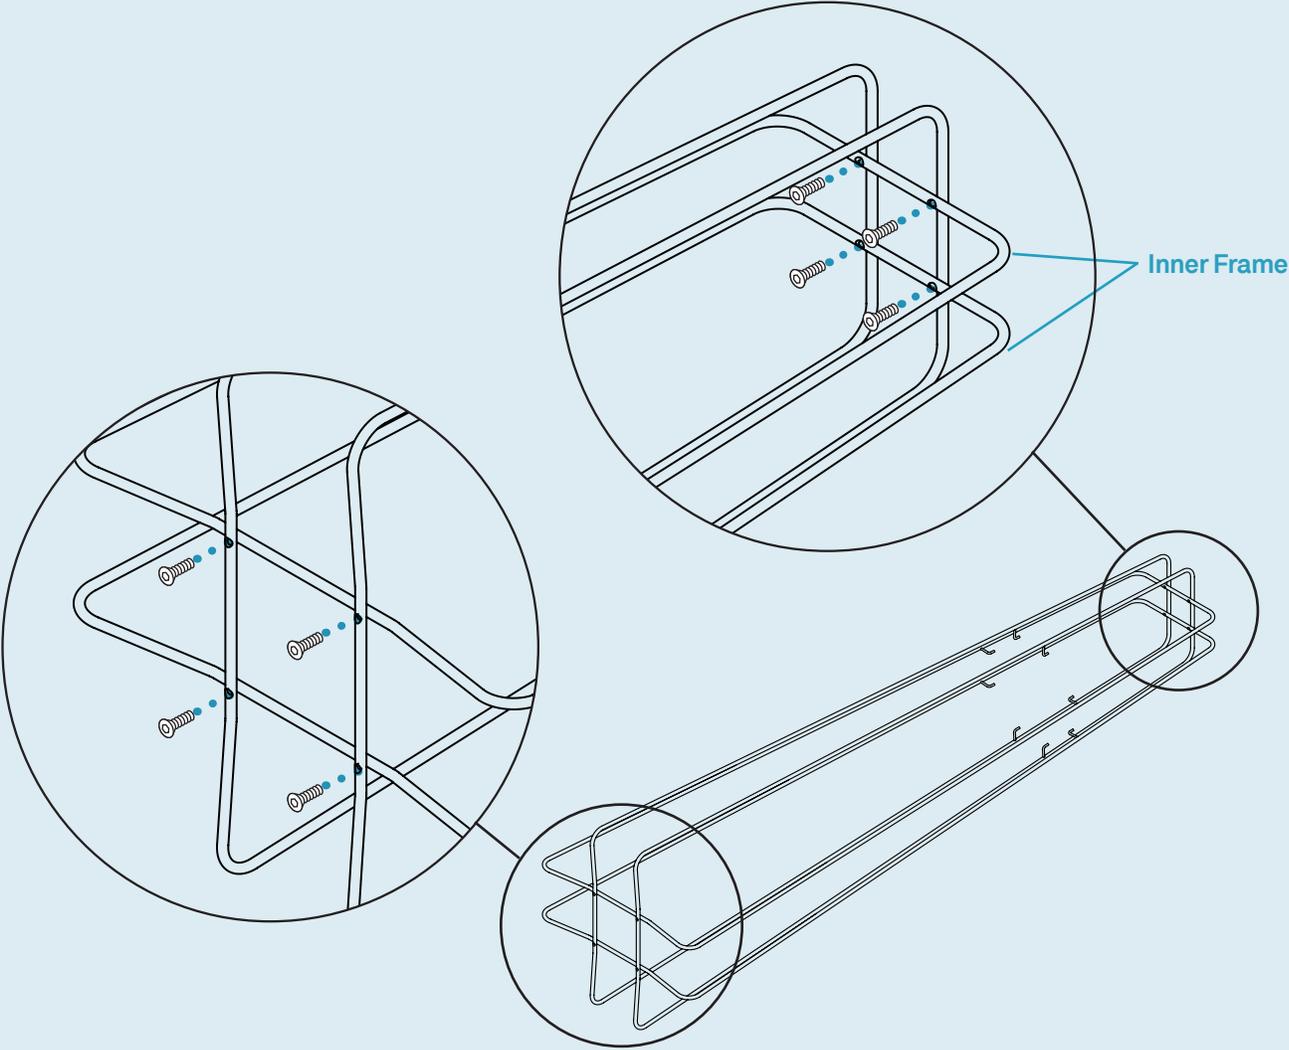

Step 02

INSTALL DIFFUSER.


Place diffuser inside the frame. Align the holes on the diffuser with the hooks on the frame as shown.

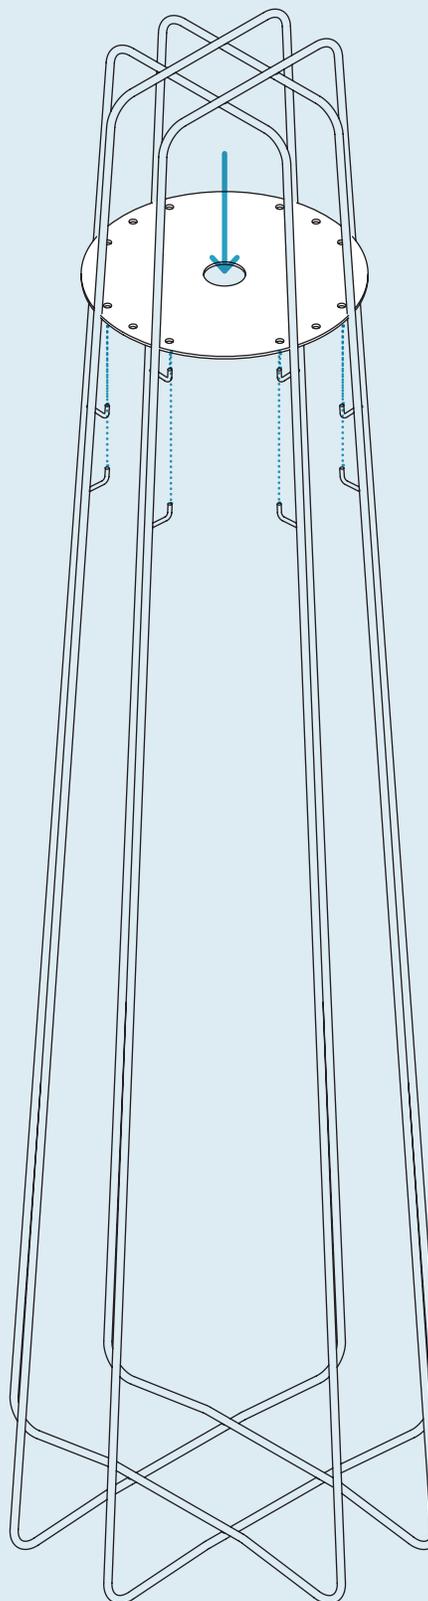

Step 03

INSTALL SOCKET.

Attach socket by threading the collar into place with the diffuser in between it as shown.

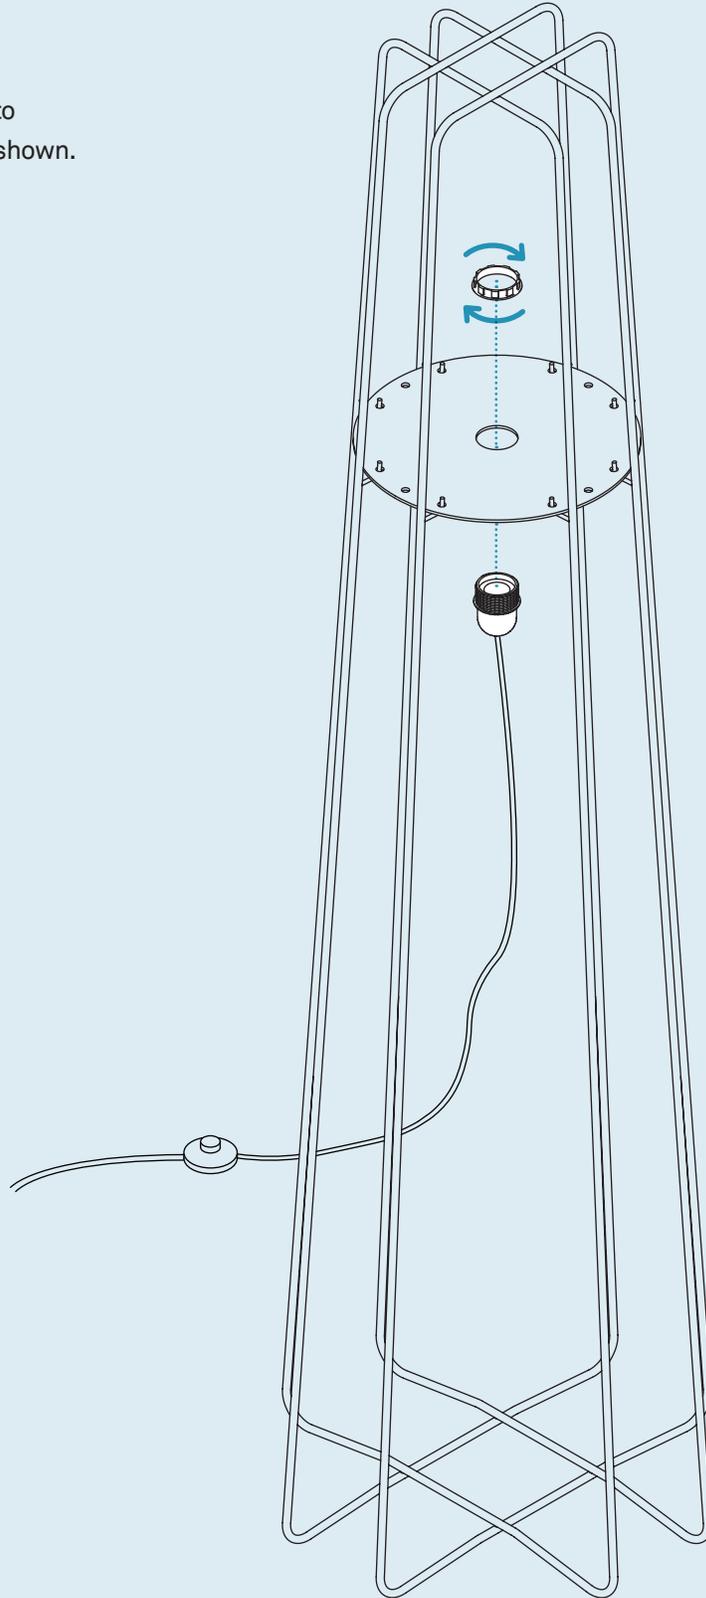


Step 04


INSTALL SHADE.

Place shade over frame. Align the hooks on the shade with the holes in the diffuser as shown.

Install provided bulb by threading it into place into the socket as shown.

Use the foot switch to turn the lamp on/off.

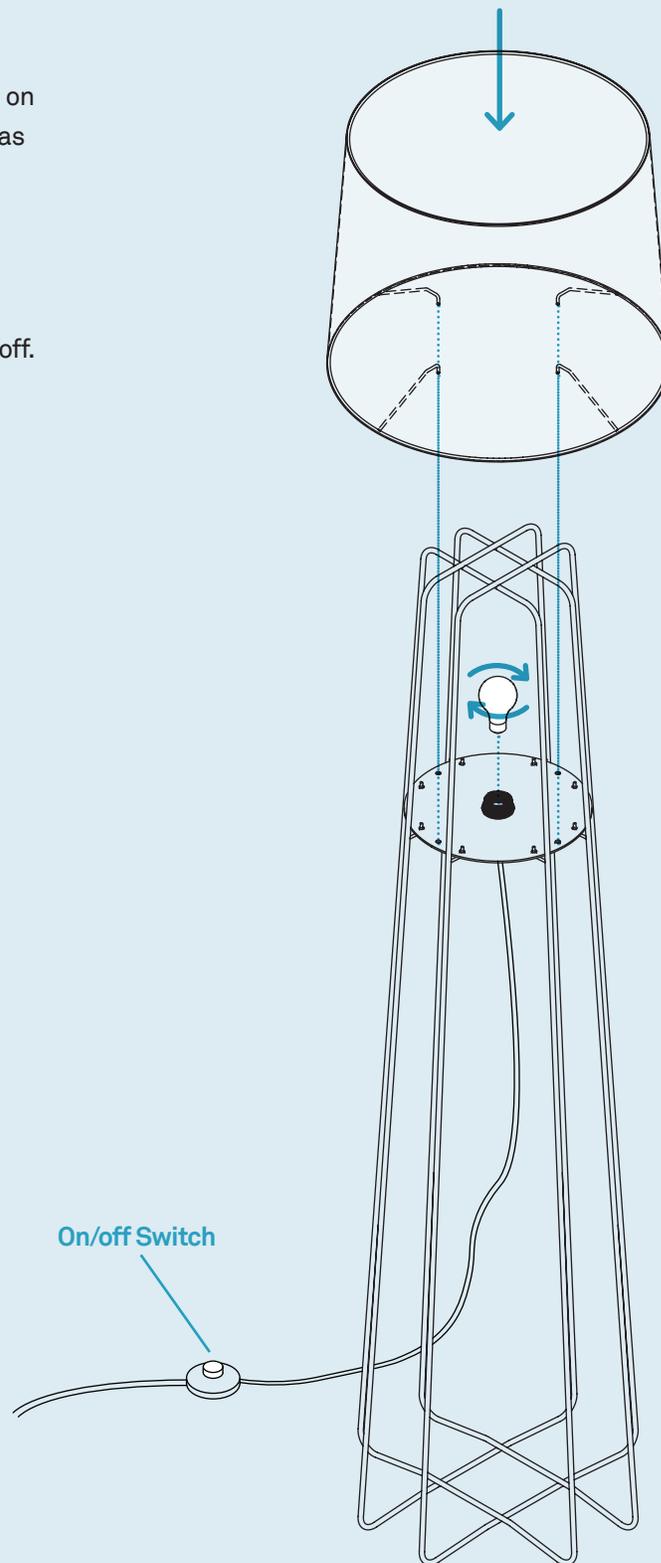



Additional Information

NOTE

This lamp uses an E26 bulb with a maximum wattage of 100W or an equivalent CFL or LED bulb.

CLEAN

Unplug lamp prior to cleaning. Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use an ammonia-free cleaner. Wipe completely dry with a soft cloth.

