



Superchoice Collection

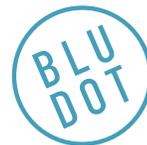

DESIGNED IN 2017

ASSEMBLY NOTES | REV 10

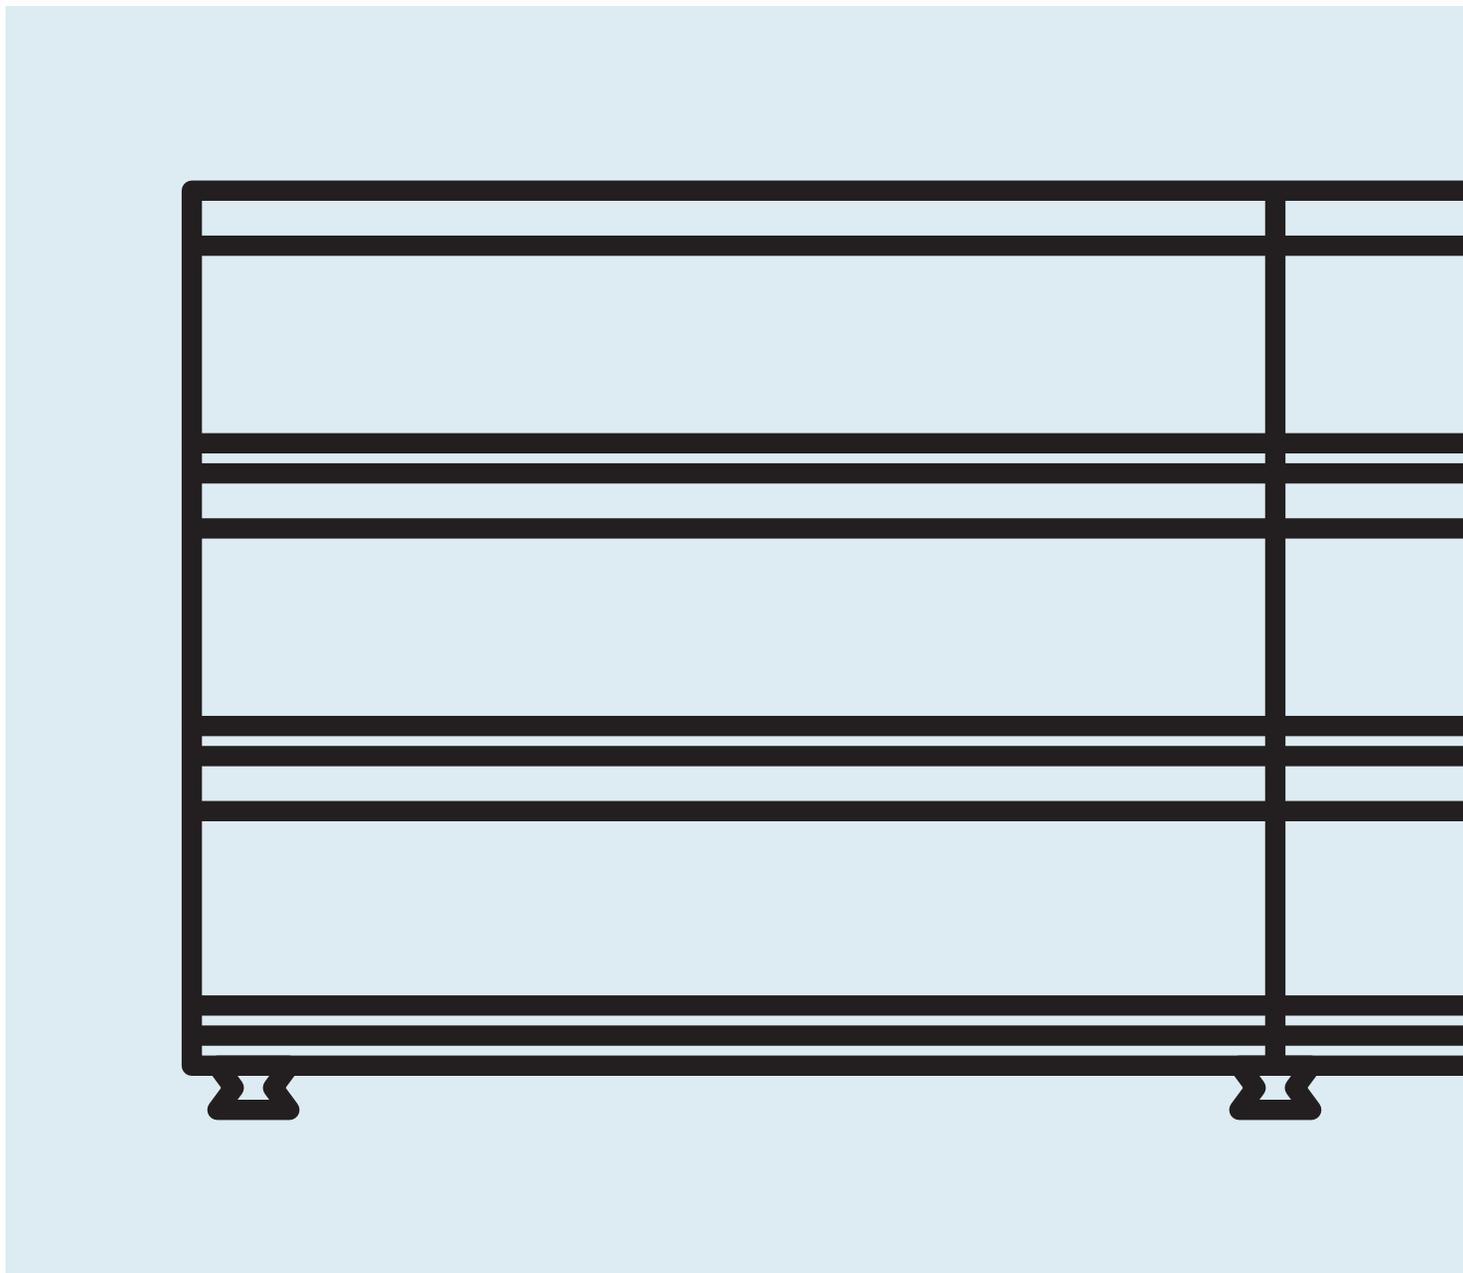

CONTOUR DU JOUR.

Uncomplicated storage for messy times. Beveled relief drawer pulls are set off by a matte painted finish.

NEED A HAND?

Contact us at service@bludot.com or **844.425.8368** for assistance.

Parts & Hardware



QTY

4*


QTY

PT. 1220



4*


PT. 1221

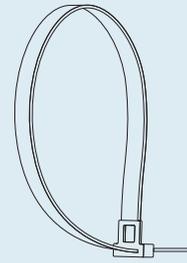

QTY

2*

PT. 8042

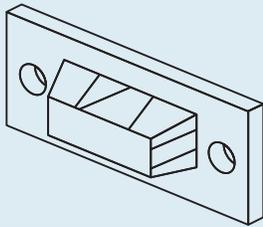


QTY

4*


QTY

PT. 8041

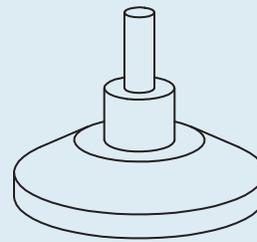

6*

Foot

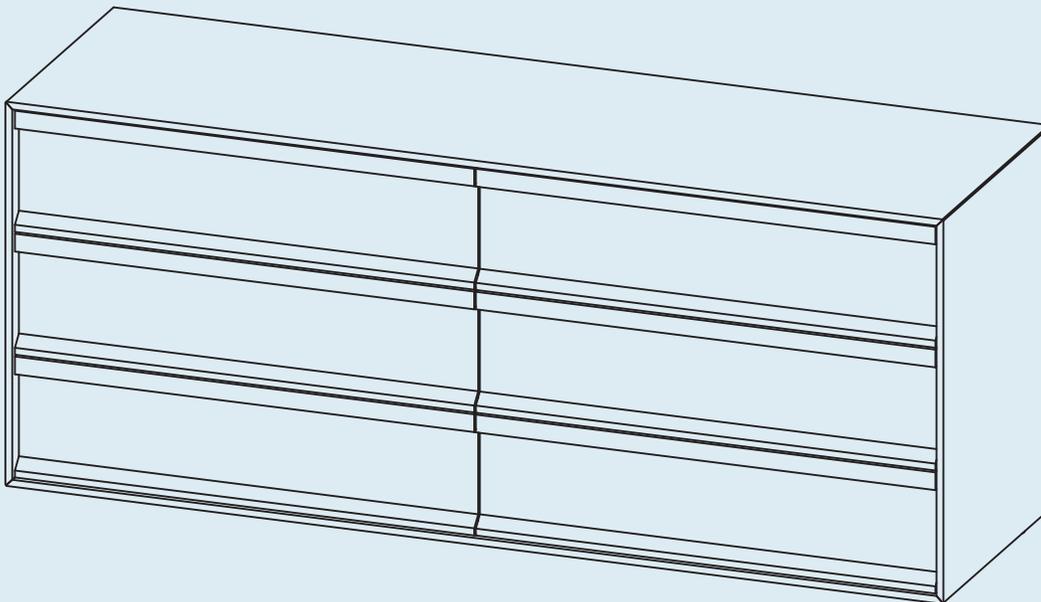

QTY

1

Case

*The number of feet and anti-tip hardware included may vary depending on the size of the case.


Step 01

ATTACH THE FEET.

Attach adjustable feet as shown. After the feet have been attached have a second person help lift and bring the case upright to prevent damage to feet.

Note: Adjust the feet to make the case level before use. Cases that are not level may have drawers and/or doors that mis-align or rub against other components.

See page 5 and 6 for adjustment details if your drawers or doors are rubbing against other components.


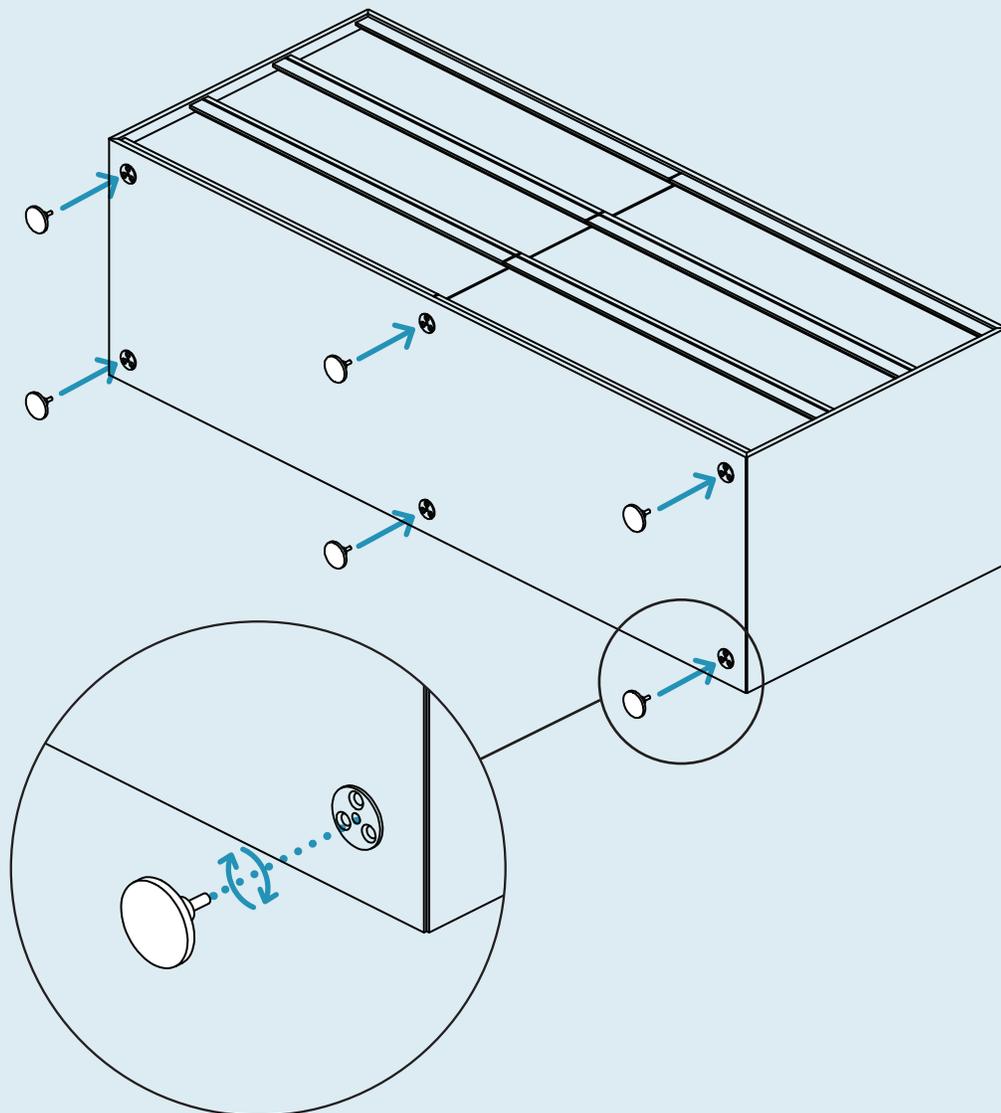


Step 02

INSTALL ANTI-TIP BRACKETS TO CASE.

Brackets must be installed to top panel of case. In order to prevent damage, it is recommended that 3/32" pilot holes be drilled prior to installation.

Note: Smaller casegoods such as nightstands may only include one set of anti-tip brackets. In these instances, attach the anti-tip bracket near the center.

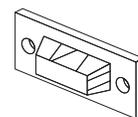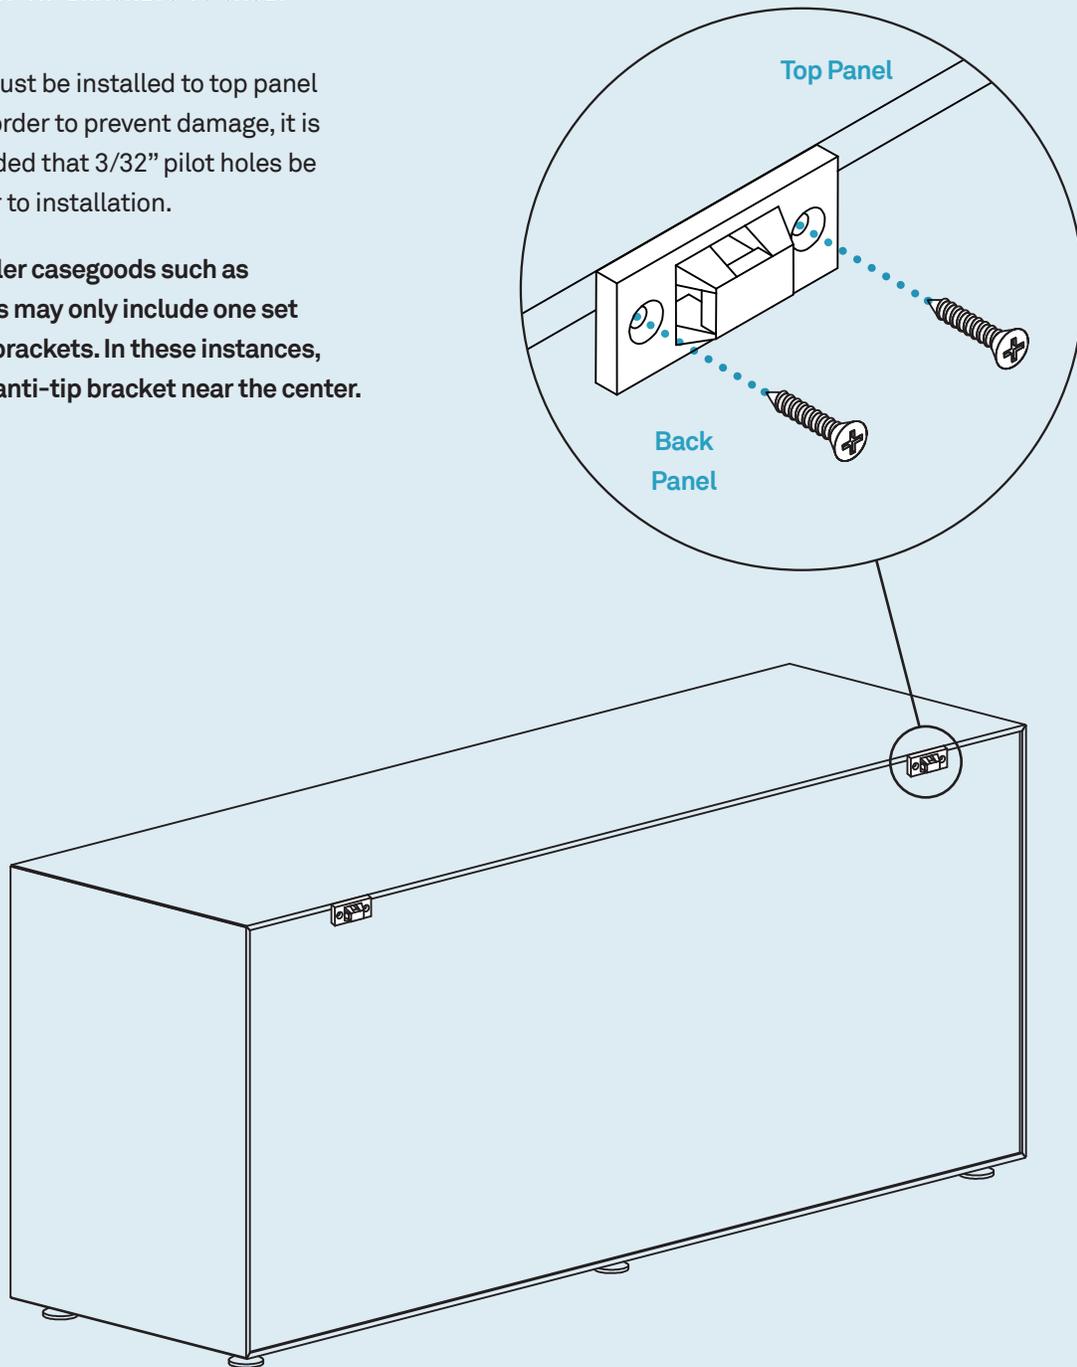

PT. 8041 x 2




PT. 1220 x 4

Step 03

ATTACH ANTI-TIP BRACKETS TO THE WALL.

Install anti-tip brackets to wall stud 1-inch below case top panel height.

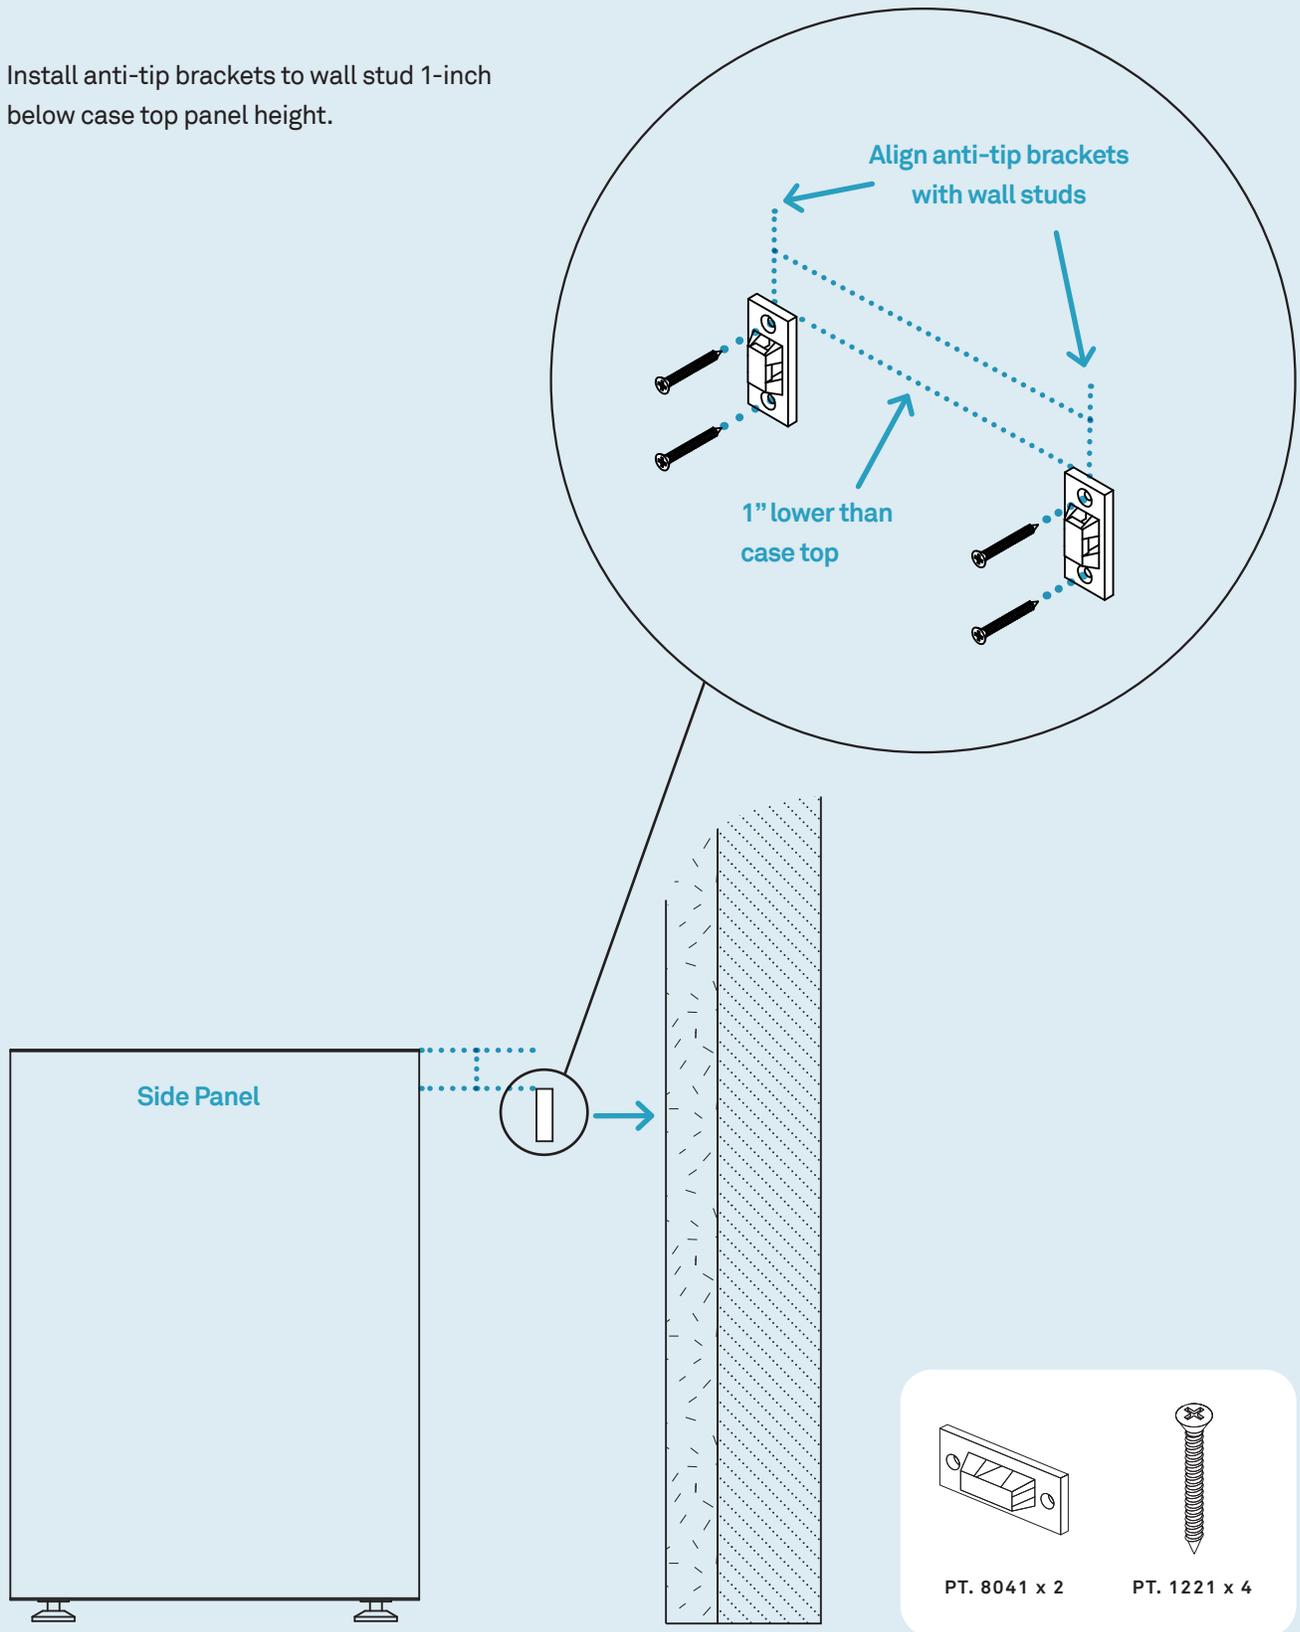


Step 04

SECURE THE CASE.

Install and tighten the strap prior to using the product.


Level product by fully retracting the adjustable levelers to create the lowest possible height. Then unthread the levelers as needed to make even contact with the floor.

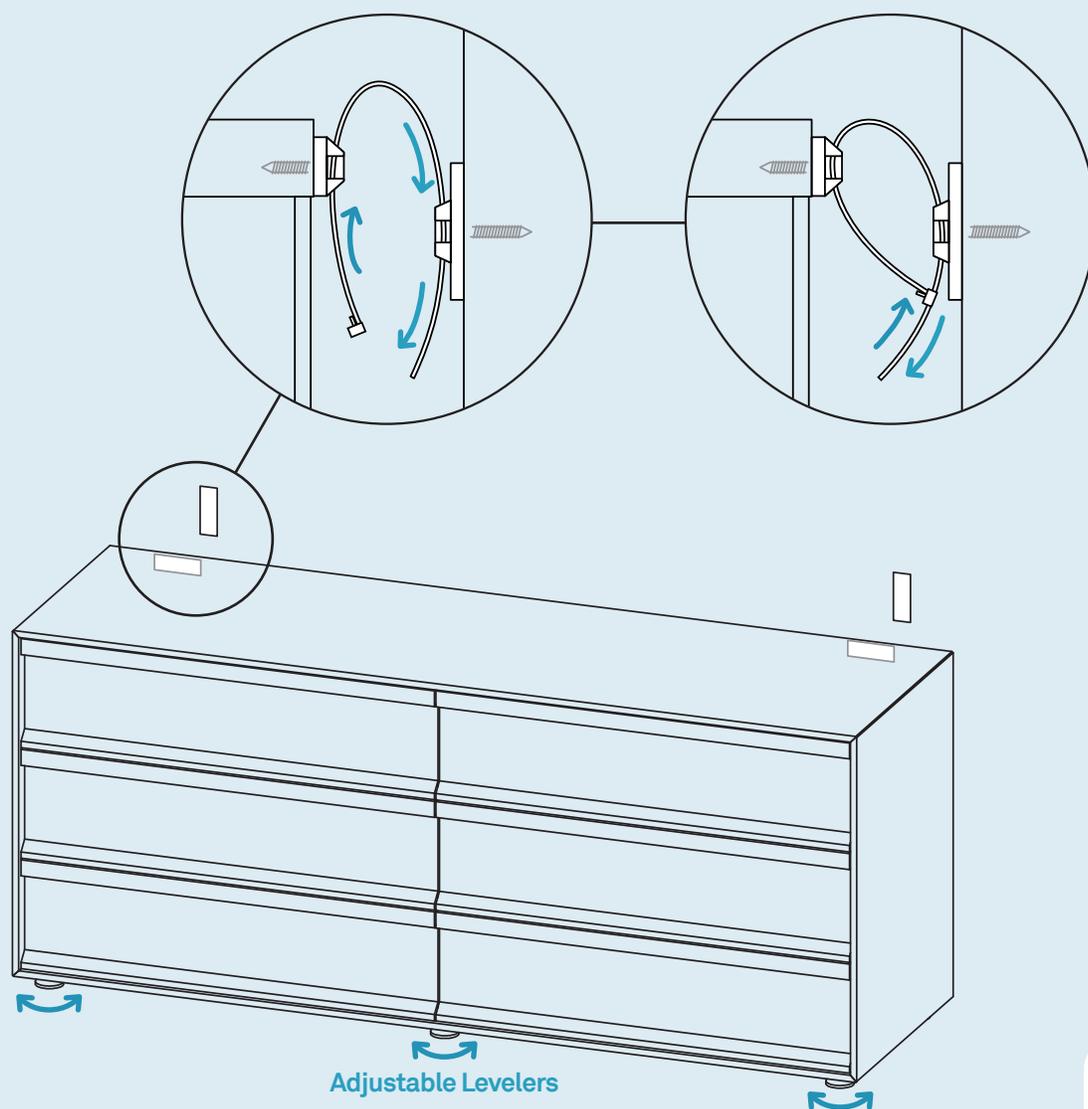

Adjusting Doors

ADJUSTING DOORS.

The doors may be adjusted to prevent surfaces from rubbing against each other. Hinges work in pairs. If you adjust one hinge, chances are you will have to adjust all the hinges.

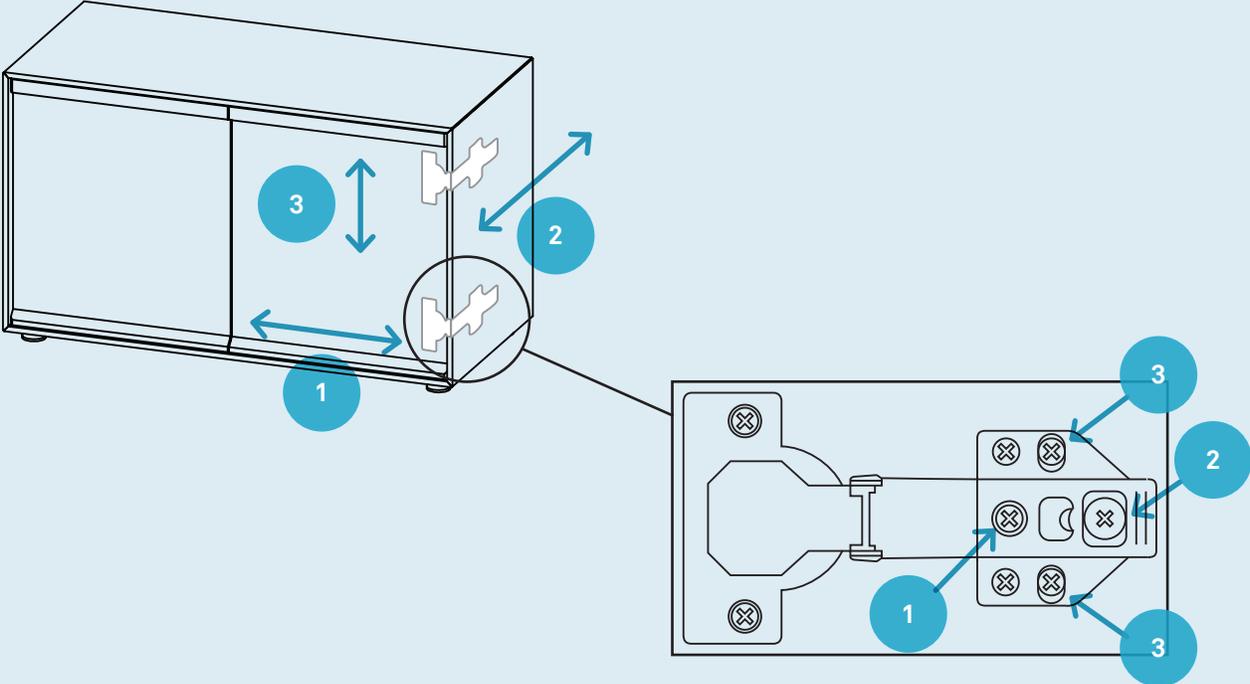

If door needs adjustment from
SIDE TO SIDE, Use Screw #1


If door needs adjustment from
FRONT TO BACK, Use Screw #2

If door needs adjustment from
TOP TO BOTTOM, Use Screw #3

Adjusting Drawers

ADJUSTING DRAWER HEIGHT.

The drawer heights may be adjusted to prevent surfaces from rubbing against each other. Press down on the blue tab and rotate as shown to move the drawer up or down.

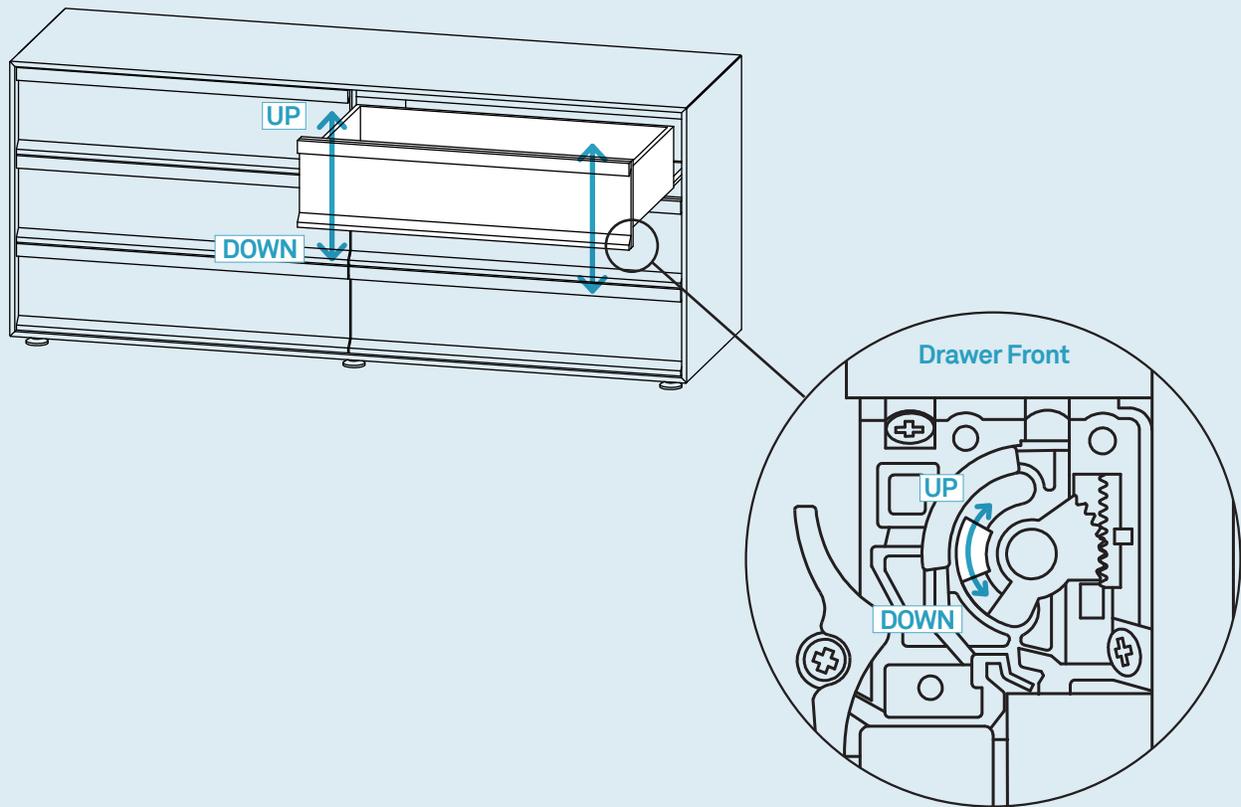


Drawer Removal

TO REMOVE DRAWERS.


Extend the drawer completely. Squeeze both locks on the underside of the drawer while pulling the drawer out.

NOTE: The 5 Drawer Dresser comes with an interlock system and requires additional steps for drawer removal and re-installation. See page 9 for details.

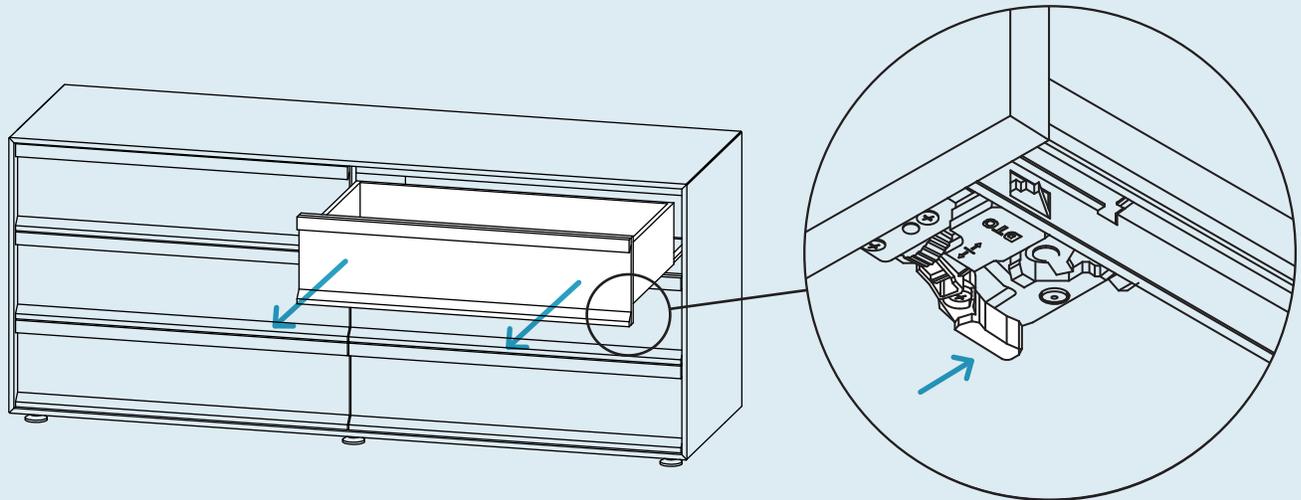

TO REINSTALL THE DRAWER.

Lower drawer front into place and push closed.

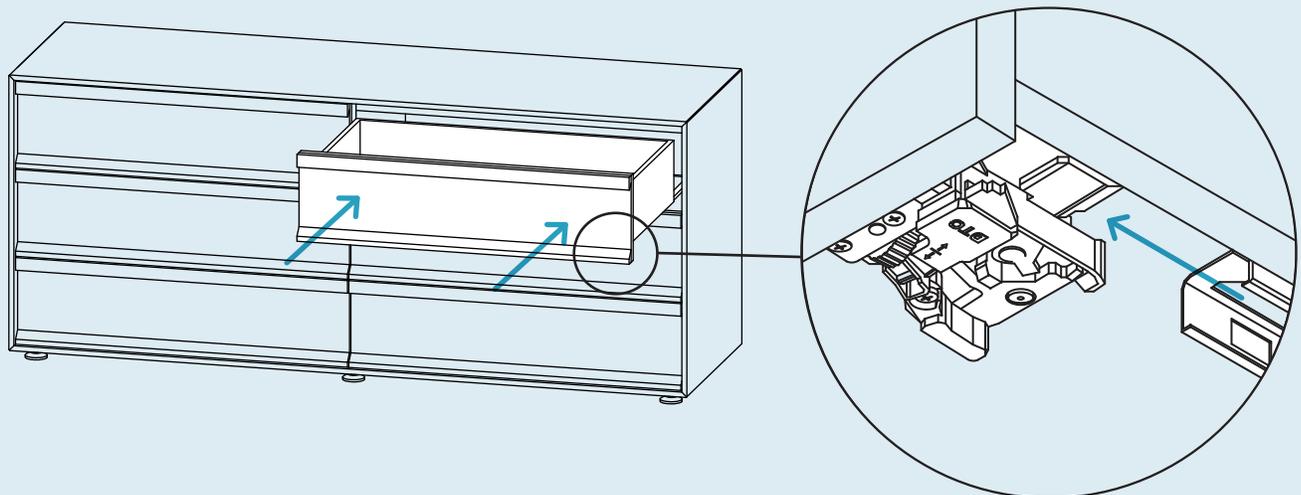


Interlock System

INSTRUCTIONS FOR 5 DRAWER DRESSER.


Any single drawer can be easily removed. The interlock will re-engage when the drawer is reinserted and closed. If multiple drawers need to be removed, the following procedure must be used:

1. Remove the 1st drawer.
2. Reach inside the back of the case and move the actuator to the 'CLOSED' position.
3. This will allow a 2nd drawer to be removed.
4. To remove a 3rd drawer, move the actuator to the 'CLOSED' position for the 2nd drawer.
5. Continue until all the drawers are removed.

OPEN ACTUATOR

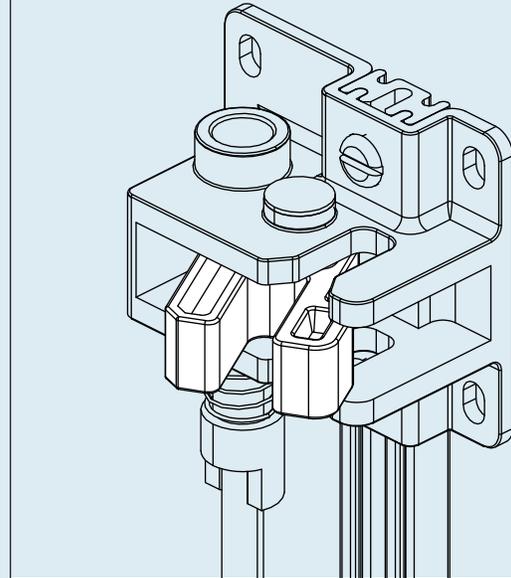

CLOSED ACTUATOR

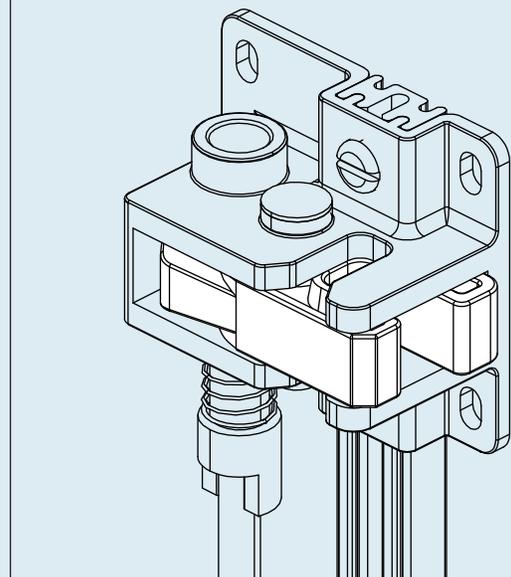

Interlock System

INSTRUCTIONS FOR 5 DRAWER DRESSER.


To install the drawers, the rear actuators must be moved to the 'OPEN' position for each drawer being installed. Only 1 actuator can be moved at a time.

CAUTION: Do not install and slam any drawer shut with the actuator in the 'CLOSED' position. This may damage the actuator or bend the latch which could cause the system to malfunction.


To reinstall the drawers, the following procedure must be used:

1. To install the 1st drawer, reach inside the back of the case and move the corresponding actuator to the 'OPEN' position.
2. Insert the drawer and slowly close until the interlock engages.
3. To install the 2nd drawer, reach inside to the back of the case and move this actuator to the 'OPEN' position.
4. Continue the installation with each successive drawer.

CLOSED ACTUATOR

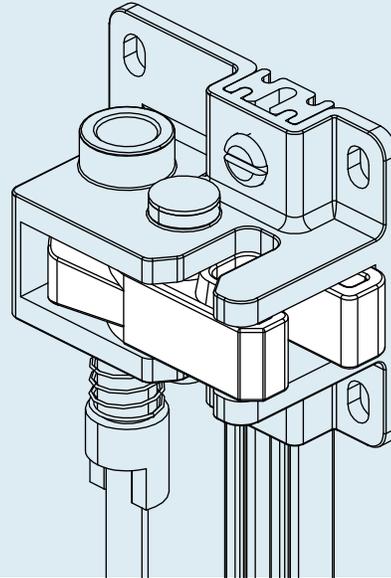

OPEN ACTUATOR

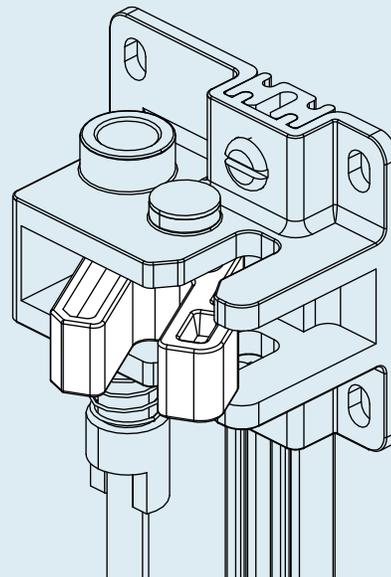

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">• ALWAYS install anti-tip device provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.• NEVER open more than one drawer at a time.• DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.• Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>
	

Warning applicable to 5 Drawer Dresser

Additional Information

CAUTION

Do not store clothing in this product unless it specifically indicated for that purpose. The items within this collection intended for clothing storage include the: 3 Drawer Dresser, 5 Drawer Dresser, 6 Drawer Dresser.

CLEAN

Clean with a slightly damp, soft cloth. To remove dirt and fingerprints, use quality cleaners formulated for wood furniture. Wipe completely dry with a soft cloth.

